



# Adaptec Storage Manager

## User's Guide

**Copyright**

Copyright © 2011 PMC-Sierra, Inc. All rights reserved.

The information in this document is proprietary and confidential to PMC-Sierra, Inc., and for its customers' internal use. In any event, no part of this document may be reproduced or redistributed in any form without the express written consent of PMC-Sierra, Inc.

**Trademarks**

PMC, PMC-Sierra, and Adaptec are registered trademarks of PMC-Sierra, Inc. "Adaptec by PMC" is a trademark of PMC-Sierra, Inc. Other product and company names mentioned herein may be trademarks of their respective owners. For a complete list of PMC-Sierra trademarks, see [www.pmc-sierra.com/legal](http://www.pmc-sierra.com/legal).

**Disclaimer**

None of the information contained in this document constitutes an express or implied warranty by PMC-Sierra, Inc. as to the sufficiency, fitness or suitability for a particular purpose of any such information or the fitness, or suitability for a particular purpose, merchantability, performance, compatibility with other parts or systems, of any of the products of PMC-Sierra, Inc., or any portion thereof, referred to in this document. PMC-Sierra, Inc. expressly disclaims all representations and warranties of any kind regarding the contents or use of the information, including, but not limited to, express and implied warranties of accuracy, completeness, merchantability, fitness for a particular use, or non-infringement. In no event will PMC-Sierra, Inc. be liable for any direct, indirect, special, incidental or consequential damages, including, but not limited to, lost profits, lost business or lost data resulting from any use of or reliance upon the information, whether or not PMC-Sierra, Inc. has been advised of the possibility of such damage.

**Patents**

The technology discussed in this document may be protected by one or more patent grants.


---

## Adaptec by PMC Product Support

If you have questions about installing or using your Adaptec by PMC product, check this document first—you will find answers to most of your questions. If you need further assistance, use the support options listed below. To expedite your service, have your computer in front of you.

### Technical Support Identification (TSID) Number

- Before contacting Technical Support, you need your product unique TSID number. The TSID number identifies your product and support status.
- The TSID number is included on a white, bar-coded label, like this example:

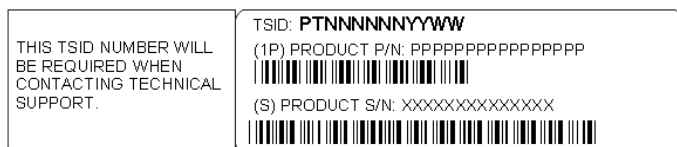

- It's recommended that you register your product so that you have easy access to your TSID when contacting product support.

**Note:** The phone numbers below are subject to change. Please visit the Support section of [www.adaptec.com](http://www.adaptec.com) for the most up to date contact information.

### North America

- Visit our Web site at [www.adaptec.com](http://www.adaptec.com).
- Search the Adaptec Support Knowledgebase (ASK) at [ask.adaptec.com](http://ask.adaptec.com) for articles, troubleshooting tips, and frequently asked questions for your product.
- For information about Adaptec by PMC support options, call +1 408-957-2550, 24 hours per day, 7 days per week. To speak with a Technical Support Specialist, call +1 408-934-7274.
- For support via e-mail, submit your question at [ask.adaptec.com](mailto:ask.adaptec.com).
- You can order Adaptec by PMC products, including accessories and cables, by calling +1 408-957-7274. Or, you can order cables online at [www.adaptec.com/en-us/products/cables](http://www.adaptec.com/en-us/products/cables).

### Europe

- Visit our Web site at [www.adaptec-europe.com](http://www.adaptec-europe.com).
- **German:** Call +49 89 43 66 55 22. For support via e-mail, submit your question at [ask-de.adaptec.com](mailto:ask-de.adaptec.com).
- **French:** Call +49 89 43 66 55 33. For support via e-mail, submit your question at [ask-fr.adaptec.com](mailto:ask-fr.adaptec.com).
- **English:** Call +49 89 43 66 55 44. For support via e-mail, submit your question at [ask.adaptec.com](mailto:ask.adaptec.com).
- You can order Adaptec cables online at [www.adaptec.com/en-us/products/cables](http://www.adaptec.com/en-us/products/cables).

### Japan

- Visit our Web site at [www.adaptec.co.jp](http://www.adaptec.co.jp).
- Call +0066-3313-2601.

### Australia

- Call +61-2-9503-1555.

## Software License Agreement

PLEASE READ CAREFULLY: THE USE OF THIS SOFTWARE IS SUBJECT TO THE SOFTWARE LICENSE TERMS OF PMC-SIERRA, INC. AND OTHER LICENSORS WHOSE SOFTWARE MAY BE BUNDLED WITH THIS PRODUCT.

BY YOUR USE OF THE SOFTWARE INCLUDED WITH THIS PRODUCT YOU AGREE TO THE LICENSE TERMS REQUIRED BY THE LICENSOR OF THAT SOFTWARE, AS SET FORTH DURING THE INSTALLATION PROCESS. IF YOU DO NOT AGREE TO THE LICENSE TERMS APPLICABLE TO THE SOFTWARE, YOU MAY RETURN THE ENTIRE UNUSED PRODUCT FOR A FULL REFUND.

In return for acquiring a license to use the PMC-Sierra software, which may include software from third party licensors and patches made available by PMC-Sierra ("Software"), and the related documentation, you agree to the following terms and conditions:

1. License. This Agreement grants you, the Licensee, a license to:
  - a. Use the Software on a single computer system, which is not intended for use by more than five (5) users; and:
  - b. Make one copy of the Software in machine readable form solely for back-up purposes, provided you reproduce PMC-Sierra's copyright proprietary legends. Notwithstanding the foregoing, the Software may be used on the home, laptop or other secondary computer of the principal user of the Software, and an additional copy of the Software may be made to support such use. As used in this license, the Software is "in use" when it is either loaded into RAM or installed on a hard disk or other permanent memory device. The Software may be "in use" on only one computer at any given time. (Different license terms and fees are applicable for networked or multiple user applications.) As a specific condition of this license, you agree to use the Software in compliance with all applicable laws, including copyright laws, and that you will not copy, transmit, perform or distribute any audio or other content using the Software without obtaining all necessary licenses or permissions from the owner of the content.
2. Restrictions. You may not distribute copies of the Software to others or electronically transfer the Software from one computer to another over a network. You may not post or otherwise make available the Software, or any portion thereof, in any form, on the Internet. You may not use the Software in a computer service business, including in time sharing applications. The Software contains trade secrets and, in order to protect them, you may not decompile, reverse engineer, disassemble, or otherwise reduce the Software to a human-perceivable form. YOU MAY NOT MODIFY, ADAPT, TRANSLATE, RENT, LEASE, LOAN, RESELL FOR PROFIT, DISTRIBUTE, NETWORK OR CREATE DERIVATIVE WORKS BASED UPON THE SOFTWARE OR ANY PART THEREOF.
3. Ownership of Software. As Licensee, you own the media upon which the software is recorded or fixed, but PMC-Sierra and its licensors retain title and ownership of the Software recorded on the original media and all subsequent copies of the Software, regardless of the form or media in which or on which the original and other copies may exist. This license is not a sale of the Software or any copy.
4. Confidentiality. You agree to maintain the Software in confidence and that you will not disclose the Software to any third party without the express written consent of PMC-Sierra. You further agree to take all reasonable precautions to preclude access of unauthorized persons to the Software.
5. Term. This license is effective until January 1, 2045, unless terminated earlier. You may terminate the license at any time by destroying the Software (including the related documentation) together with all copies or modifications in any form. PMC-Sierra will have the right to terminate our license immediately if you fail to comply with any term or condition of this Agreement. Upon any termination, including termination by you, you must destroy the Software (including the related documentation), together with all copies or modifications in any form.
6. Special Terms Applicable to Databases. Where a database is included with the Software, you acknowledge that it is licensed only in connection with the use of the Software to perform disc creation, and that the database and all data derived therefrom must be maintained in confidence in accordance with the provisions of Section 4. This license does not grant you any rights to distribute or disclose such database or data.
7. Limited Warranty. PMC-Sierra and its Licensor warrant only that the media upon which the Software is furnished will be free from defects in material or workmanship under normal use and service for a period of thirty (30) days from the date of delivery to you. PMC-SIERRA AND ITS LICENSORS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR DOCUMENTATION. THE FOREGOING STATES THE SOLE AND EXCLUSIVE REMEDIES PMC-SIERRA AND ITS LICENSORS WILL PROVIDE FOR BREACH OF WARRANTY. EXCEPT FOR THE FOREGOING LIMITED WARRANTY, PMC-SIERRA AND ITS LICENSORS MAKE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED, AS TO NON-INFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty may last, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

8. The entire liability of PMC-Sierra and its licensors, and your exclusive remedy for a breach of this warranty, shall be:
  - a. The replacement of any media not meeting the above limited warranty which is returned to PMC-Sierra; or:
  - b. if PMC-Sierra or its distributor is unable to deliver replacement media which is free from defects in materials or workmanship, you may terminate this Agreement by returning the Software and your money will be refunded.
9. Limitation of Liability. IN NO EVENT WILL PMC-SIERRA OR ITS LICENSORS BE LIABLE TO YOU FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, OR LOSS OF DATA, EVEN IF PMC-SIERRA OR A LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation or exclusion may not apply to you.
10. Export. You acknowledge that the laws and regulations of the United States and other countries may restrict the export and re-export of the Software. You agree that you will not export or re-export the Software or documentation in any form in violation of applicable United States and foreign law.
11. Government Restricted Rights. The Software is subject to restricted rights as follows. If the Software is acquired under the terms of a GSA contract: use, reproduction or disclosure is subject to the restrictions set forth in the applicable ADP Schedule contract. If the Software is acquired under the terms of a DoD or civilian agency contract, use, duplication or disclosure by the Government is subject to the restrictions of this Agreement in accordance with 48 C.F.R. 12.212 of the Federal Acquisition Regulations and its successors and 49 C.F.R. 227.7202-1 of the DoD FAR Supplement and its successors.
12. General. You acknowledge that you have read this Agreement, understand it, and that by using the Software you agree to be bound by its terms and conditions. You further agree that it is the complete and exclusive statement of the agreement between PMC-Sierra and you, and supersedes any proposal or prior agreement, oral or written, and any other communication between PMC-Sierra and you relating to the subject matter of this Agreement. No additional or any different terms will be enforceable against PMC-Sierra unless PMC-Sierra gives its express consent, including an express waiver of the terms of this Agreement, in writing signed by an officer of PMC-Sierra. You assume full responsibility for the use of the Software and agree to use the Software legally and responsibly. This Agreement shall be governed by California law, except as to copyright matters, which are covered by Federal law. This Agreement is deemed entered into at Sunnyvale, California by both parties. Should any provision of this Agreement be declared unenforceable in any jurisdiction, then such provision shall be deemed severable from this Agreement and shall not affect the remainder hereof. All rights in the Software not specifically granted in this Agreement are reserved by PMC-Sierra.

Should you have any questions concerning this license, contact:

PMC-Sierra, Inc.  
 Legal Department  
 1380 Bordeaux Drive  
 Sunnyvale, CA 94089  
 (408) 239-8000

# Contents

---

## About This Guide

How This Guide is Organized .....	11
What You Need to Know Before You Begin .....	11
Terminology Used in this Guide .....	11

## Part I: Getting Started

### 1 Introduction to Adaptec Storage Manager

Getting Started Checklist .....	14
About Adaptec Storage Manager .....	14
About the Adaptec Storage Manager Agent .....	14
Growing Your Storage Space with Adaptec Storage Manager.....	15
System Requirements.....	17
Controller Support.....	17

### 2 Installing Adaptec Storage Manager

Installing on Windows.....	19
Installing on Red Hat, SuSE, or Fedora Linux .....	20
Installing on Debian or Ubuntu Linux .....	20
Installing on Solaris.....	21
Installing on FreeBSD .....	21
Installing on VMware .....	22
Using Adaptec Storage Manager with a Firewall.....	23
Running Adaptec Storage Manager from the DVD .....	23

### 3 Building Your Storage Space

Overview .....	26
Choosing a Management System .....	26

Starting and Logging In on the Local System .....	27
Starting Adaptec Storage Manager on Remote Systems .....	31
Logging into Remote Systems from the Local System .....	32
Creating Logical Drives.....	34
Managing Your Storage Space.....	42

## **Part II: Monitoring and Modifying Your Storage Space**

### **4 Exploring Adaptec Storage Manager**

Working in Adaptec Storage Manager.....	45
Overview of the Main Window .....	45
Revealing More Device Information.....	50
Checking System Status from the Main Window .....	51
Getting Help .....	51
Logging Out of Adaptec Storage Manager.....	52
Uninstalling Adaptec Storage Manager .....	52

### **5 Protecting Your Data**

Creating and Managing Hot Spares.....	55
Enabling Copyback .....	58

### **6 Modifying Your Direct Attached Storage**

Understanding Logical Drives .....	60
Creating and Modifying Logical Drives.....	61
Fine-tuning Logical Drives .....	64
Optimizing Logical Drive Performance.....	67
Verifying Logical Drives .....	68
Increasing the Capacity of a Logical Drive .....	70
Changing the RAID Level of a Logical Drive.....	72
Deleting a Logical Drive.....	72
Creating a RAID Volume .....	73
Creating a JBOD Disk.....	75
Maintaining an Energy-Efficient Storage Space .....	76
Configuring maxCache Read Caching.....	80

### **7 Scheduling Recurring or Resource-Intensive Jobs**

Scheduling a Task.....	83
Opening the Task Manager .....	84
Monitoring Tasks.....	85
Modifying a Task.....	86
Deleting a Task.....	86
Disabling the Task Manager .....	86

---

**8 Maintaining Physical Devices**

Viewing Component Properties.....	89
Blinking a Component.....	89
Working with Failed or Failing Disk Drives .....	90
Initializing and Erasing Disk Drives.....	90
Working with Solid State Drives .....	92
Working with Controllers .....	93
Testing and Silencing System and Enclosure Alarms.....	96
Updating the Controller BIOS and Firmware .....	99
Updating the Disk Drive Firmware.....	100

**9 Monitoring Status and Activity**

Monitoring Options.....	105
Checking Status from the Main Window .....	105
Notifying Users by Event Log Message About Status and Activity .....	108
Notifying Users by Email About Status and Activity .....	113
Notifying Users by SNMP Trap About Status and Activity.....	118
Notifying <i>All</i> Users About Status and Activity .....	119
Changing an Operating System's Event Log Setting .....	120
Logging Statistics for Remote Analysis .....	121

**10 Updating and Customizing Adaptec Storage Manager**

Updating Adaptec Storage Manager .....	127
Setting Preferences and Changing Views.....	127
Managing Remote Systems.....	129
Working with Display Groups .....	133

**11 Solving Problems**

General Troubleshooting Tips .....	137
Identifying a Failed or Failing Component .....	137
Stopping the Creation of a New Logical Drive.....	138
Recovering from a Disk Drive Failure .....	138
Rebuilding Logical Drives.....	141
Solving Notification Problems .....	142
Creating a Support Archive File .....	142
Understanding Error and Warning Messages .....	143

---



## Part III: Appendices

### A Completing a Silent Windows Installation

Completing a Silent Installation.....	151
Available Properties and Values.....	152
Example Command Line Installations .....	152

### B Selecting the Best RAID Level

Comparing RAID Levels.....	154
Understanding Drive Segments .....	154
Non-redundant Logical Drives (RAID 0).....	155
RAID 1 Logical Drives .....	156
RAID 1 Enhanced Logical Drives.....	156
RAID 10 Logical Drives .....	157
RAID 5 Logical Drives .....	158
RAID 5EE Logical Drives.....	159
RAID 50 Logical Drives .....	160
RAID 6 Logical Drives .....	161
RAID 60 Logical Drives .....	161

### C Quick Answers to Common Questions...

How do I...? .....	163
What's the difference between...? .....	164
What options are on the Actions menu? .....	165
What tasks can be scheduled to run at a specified time? .....	168

### D Buttons and Icons At-a-Glance

Enterprise View Icons .....	170
Icons in the Physical Devices View .....	170
Icons in the Logical Devices View .....	171
Buttons in the Main Window .....	172
Buttons in the Notification Manager .....	172
Buttons in the Email Notification Manager .....	173
Buttons in the Task Manager .....	173


## Glossary

## Index

## About This Guide

Adaptec<sup>®</sup> Storage Manager<sup>™</sup> is a software application that helps you build a storage space using Adaptec by PMC<sup>™</sup> RAID controllers, disk drives, and enclosures, and then manage your stored data, whether you have a single RAID controller installed in a server or a complex Storage Area Network (SAN) with multiple RAID controllers, servers, and enclosures.

This *User's Guide* describes how to install and use Adaptec Storage Manager to build and manage Adaptec *direct attached storage*—a RAID controller and disk drives which reside inside, or are directly attached to, the computer accessing them, similar to the basic configurations shown in these figures:

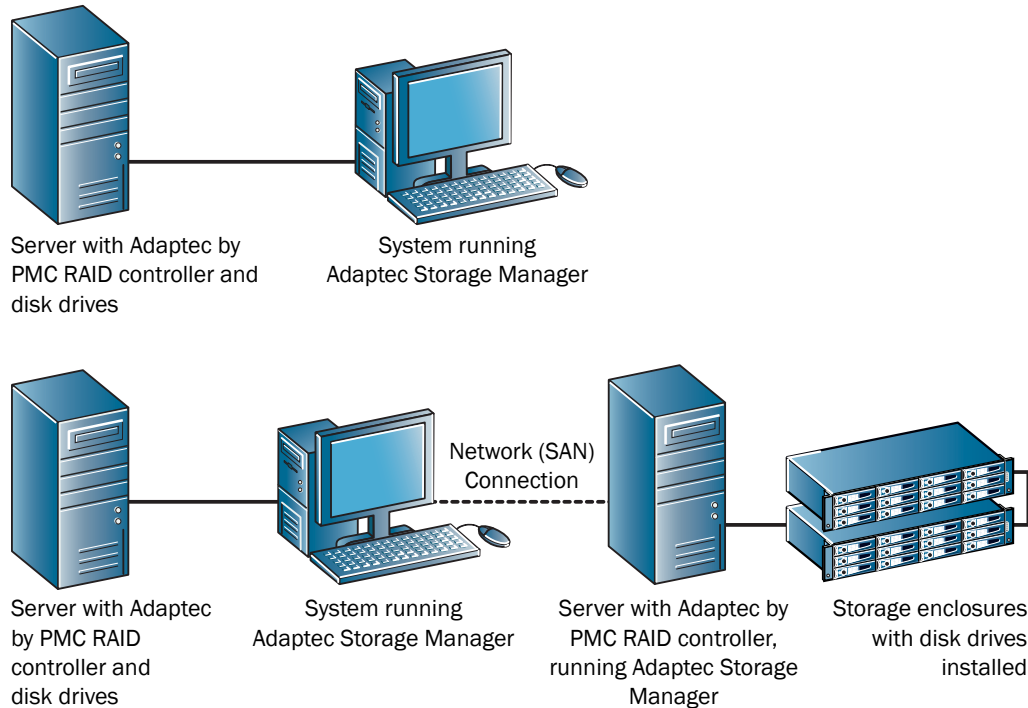

## How This Guide is Organized

This *User's Guide* is divided into three sections:

- **Part I: *Getting Started***—Follow the instructions in this section to install Adaptec Storage Manager and build your storage space. (For a definition of 'storage space' and other terms used in this *User's Guide*, see [page 11](#).)
- **Part II: *Using Adaptec Storage Manager***—Once your storage space is built, refer to this section for help protecting, modifying, monitoring, and troubleshooting your storage space and its components.
- **Part III: *Quick Reference***—Refer to this section for quick answers to common questions about Adaptec Storage Manager. A comparison of RAID levels is also included.

## What You Need to Know Before You Begin

This *User's Guide* is written for advanced computer users who want to create a storage space for their data. Advanced knowledge of storage networks is not required, but you should be familiar with computer hardware, data storage, and Redundant Array of Independent Disks (RAID) technology.

If you are using Adaptec Storage Manager as part of a complex storage system, such as a SAN, you should be familiar with network administration terminology and tasks, have knowledge of Local Area Network (LAN) and SAN technology, and be familiar with the input/output (I/O) technology—such as Serial ATA (SATA) or Serial Attached SCSI (SAS)—that you are using on your network.

**Note:** Because this *User's Guide* covers multiple Adaptec RAID products, some of the features and functions described may not be available for your controller or enclosure.

## Terminology Used in this Guide

Because this *User's Guide* provides information that can be used to manage multiple Adaptec RAID products in a variety of configurations from DAS to SAN, the generic term "storage space" is used to refer to the controller(s) and disk drives being managed with Adaptec Storage Manager.

For efficiency, the term "components" or "component" is used when referring generically to the physical and virtual parts of your storage space, such as systems, disk drives, controllers, and logical drives.

Many of the terms and concepts referred to in this *User's Guide* are known to computer users by multiple names. In this *User's Guide*, this terminology is used:

- Controller (also known as adapter, HBA, board, or card)
- Disk drive (also known as hard disk, hard drive, or hard disk drive)
- Solid State Drive (also known as a SSD or non-rotating storage media)
- Logical drive (also known as logical device or array)
- System (also known as a server, workstation, or computer)
- Enclosure (also known as a JBOD, storage enclosure, or disk enclosure)

**Note:** For more terminology information, see the [Glossary on page 174](#).

---

# Part I: Getting Started

## **In this part:**

Introduction to Adaptec Storage Manager .....	13
Installing Adaptec Storage Manager .....	18
Building Your Storage Space .....	25

# Introduction to Adaptec Storage Manager

# 1

**In this chapter...**

- Getting Started Checklist ..... 14
- About Adaptec Storage Manager ..... 14
- About the Adaptec Storage Manager Agent ..... 14
- Growing Your Storage Space with Adaptec Storage Manager..... 15
- System Requirements ..... 17
- Controller Support..... 17

This chapter describes Adaptec Storage Manager and the Adaptec Storage Manager Agent, explains the concept of a “storage space” and provides a checklist of getting-started tasks.

## Getting Started Checklist

Part I of this *User's Guide* includes three special Getting Started chapters to help you install, start, and begin to use Adaptec Storage Manager.

- ✓ **Step 1:** Familiarize yourself with Adaptec Storage Manager and the Adaptec Storage Manager Agent (see the remainder of this chapter).
- ✓ **Step 2:** Install Adaptec Storage Manager on every system that will be part of your storage spaces (see [page 18](#)).
- ✓ **Step 3:** Build your storage space (see [page 25](#)).

## About Adaptec Storage Manager

Adaptec Storage Manager is a software application that helps you build a storage space for your online data, using Adaptec RAID controllers, disk drives, and enclosures.

With Adaptec Storage Manager, you can group disk drives into logical drives and build in redundancy to protect your data and improve system performance. You can also use Adaptec Storage Manager to monitor and maintain all the controllers, enclosures, and disk drives in your storage space from a single location.

## About the Adaptec Storage Manager Agent

When Adaptec Storage Manager is installed on a system, the *Adaptec Storage Manager Agent* is also installed automatically. The Agent is like a service that keeps your storage space running. It's designed to run in the background, without user intervention, and its job is to monitor and manage system health, event notifications, tasks schedules, and other on-going processes on that system. It sends notices when tasks are completed successfully, and sounds an alarm when errors or failures occur on that system.

The Agent uses less memory than the full application. If your storage space includes systems that won't be connected to monitors (and therefore won't require the user interface described in this *User's Guide*), you can choose to run the *Agent only* on those systems instead of the full application (see [page 14](#)). You may want to do this if system resources are limited, or if you want more system resources available for other tasks.

**Note:** *Linux or Unix users only*—If your storage space includes systems without X-Windows installed or running, you can run the Agent, even though you can't run the full Adaptec Storage Manager application.

You can manage and monitor systems running the Agent only by logging into them as remote systems (see [page 31](#)).

You can also customize the Agent settings to suit your storage space requirements.


---

## Growing Your Storage Space with Adaptec Storage Manager

As your requirements change, Adaptec Storage Manager grows with your storage space as you add more controllers, more disk drives, more logical drives, and more data protection.


### A Simple Storage Space

This example shows a simple storage space that might be appropriate in a home office or for a small business. This storage space includes one RAID controller and three disk drives installed in a server. For data protection, the disk drives have been used to build a RAID 5 logical drive. For data protection, the disk drives have been used to build a RAID 5 logical drive.

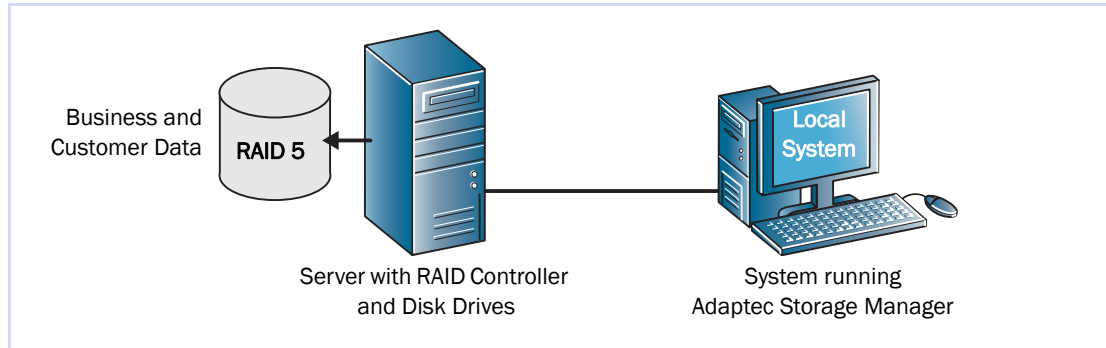

### An Advanced Storage Space


This example shows how you can grow your storage space to meet the expanding requirements of your business. On the first server, segments of space from each disk drive have been used to build two RAID 5 logical drives. A second server connected to two 12-disk-drive enclosures has been added. The additional storage space has been used to create two RAID 50 logical drives. The Administrator of this storage space can create and modify logical drives and monitor both controllers, disk drives, and enclosures from a single system, called the *local* system (see [page 26](#)).

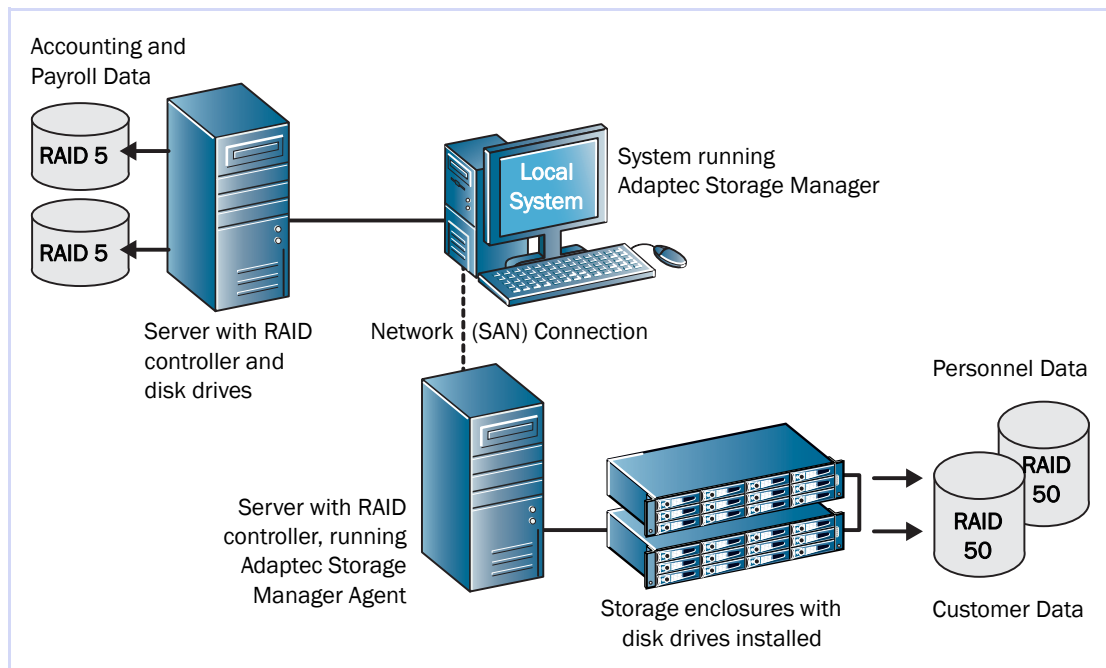

## Continuing to Grow Your Storage Space

As your needs change, Adaptec Storage Manager will help you grow your storage space to include multiple controllers, storage enclosures, and disk drives in multiple locations.

In this example, multiple systems, servers, disk drives, and enclosures have been added to the storage space. The Administrator can create and modify logical drives and monitor all the controllers, enclosures, and disk drives in the storage space from the *local* system (see [page 26](#)).

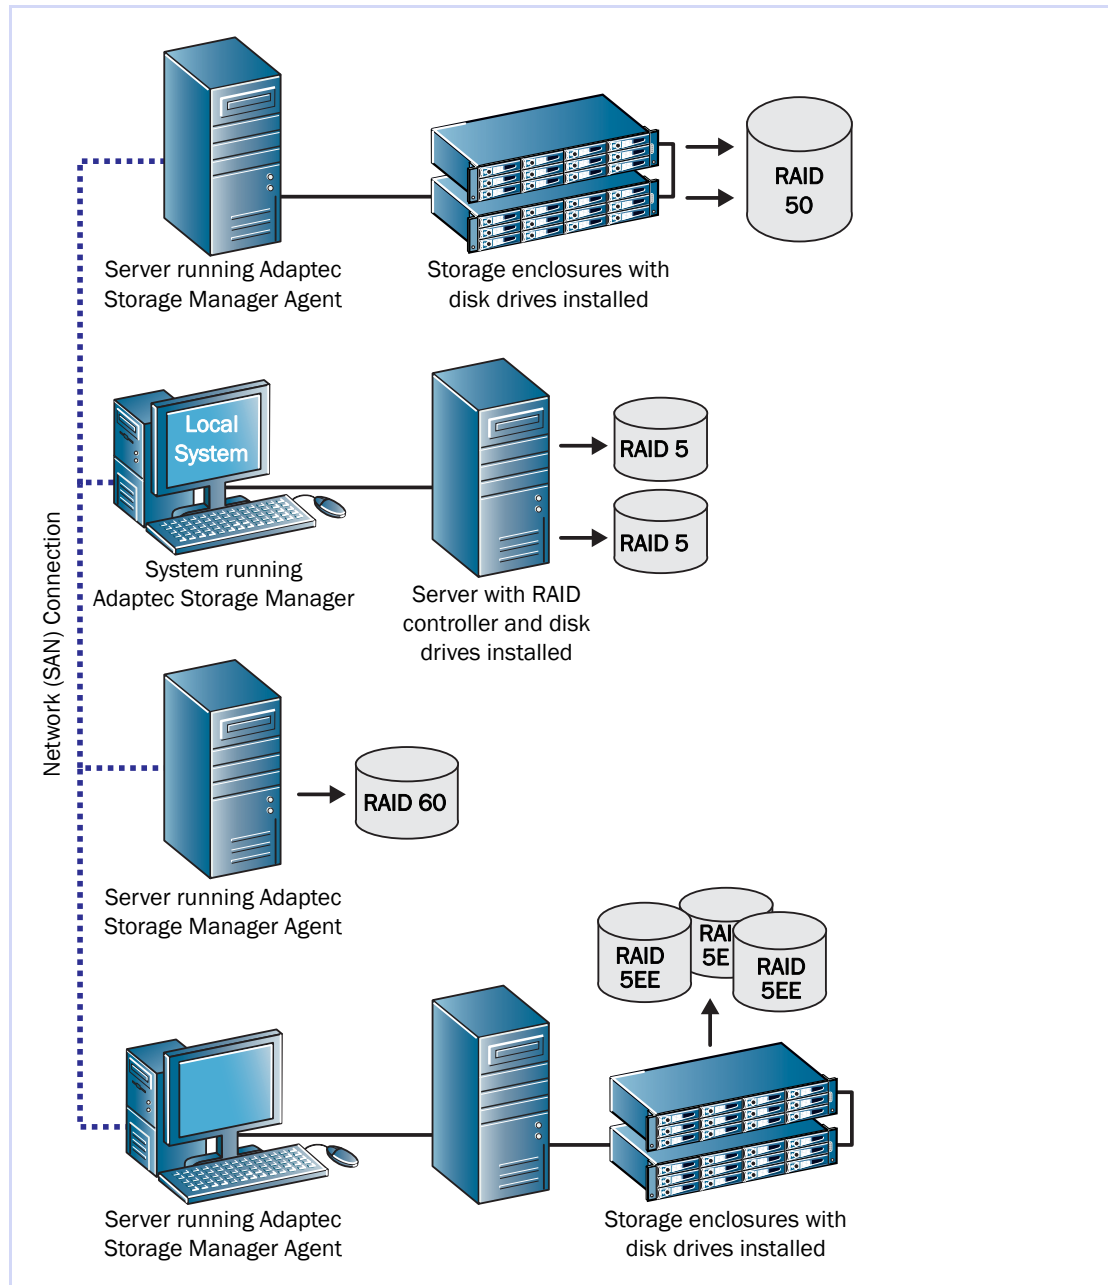



## System Requirements

To install Adaptec Storage Manager, each system in your storage space must meet these requirements:

- PC-compatible computer with Intel Pentium processor, or equivalent
- At least 256 MB of RAM
- 80 MB of free disk drive space
- 256-color video mode
- DVD-ROM drive
- One of these operating systems:

**Note:** For the latest on operating system version support check the readme on your Adaptec Installation DVD or visit the Support area of the Adaptec Web Site at [www.adaptec.com](http://www.adaptec.com).

- Microsoft® Windows® Server 2008 (32-bit and 64-bit), Windows Server 2008 R2 (64-bit), Windows Server 2003 (32-bit and 64-bit), Windows Server 2003 R2 (32-bit and 64-bit), Windows Vista, Windows 7
- Red Hat® Enterprise Linux 6.0, 5.5 (32-bit and 64-bit)
- SuSE Linux Enterprise Server 11, SuSE Linux Enterprise Server 10 (32-bit and 64-bit)
- FreeBSD 8.x, 7.x
- Debian Linux 5, 6 (32-bit and 64-bit)
- Ubuntu Linux 10, 11 (32-bit and 64-bit)
- Fedora Linux 12, 13, 14 (32-bit and 64-bit)
- Solaris 10, Solaris 11 Express
- VMware ESXi 5.0, VMware ESX 4.1 Classic (Agent only) (storage management must be done by command-line, BIOS utility, or remote GUI connection—see [page 22](#))

**Note:** Adaptec Storage Manager can also be used before an operating system is installed. See [Running Adaptec Storage Manager from the DVD on page 23](#) for more information.

## Controller Support

The maximum number of controllers supported by Adaptec Storage Manager is 16.

---

# Installing Adaptec Storage Manager

# 2

## In this chapter...

Installing on Windows .....	19
Installing on Red Hat, SuSE, or Fedora Linux .....	20
Installing on Debian or Ubuntu Linux .....	20
Installing on Solaris.....	21
Installing on FreeBSD .....	21
Installing on VMware.....	22
Using Adaptec Storage Manager with a Firewall .....	23
Running Adaptec Storage Manager from the DVD.....	23

Adaptec Storage Manager must be installed on every system that will be part of your storage space. This chapter describes how to install Adaptec Storage Manager on different operating systems, and explains how to use Adaptec Storage Manager with a firewall.

**Note:** To use Adaptec Storage Manager to configure a RAID controller before you install your operating system, see [Running Adaptec Storage Manager from the DVD on page 23](#).

## Installing on Windows

This section describes how to install Adaptec Storage Manager on systems running Windows. See [System Requirements on page 17](#) for a list of supported operating systems.

**Note:** You need administrator or root privileges to install Adaptec Storage Manager. For details on verifying privileges, refer to your operating system documentation.

If a previous version of Adaptec Storage Manager is installed on your system, you must remove it before beginning this installation. To uninstall Adaptec Storage Manager, use the Add/Remove Programs option in your Windows Control Panel.

**Note:** *Advanced users only*—To perform a silent installation, follow the instructions in [Appendix A](#).

To install Adaptec Storage Manager on a Windows system:

- 1 Insert the Adaptec Installation DVD.

The Installation DVD Main Menu opens.

- 2 Select **Install Adaptec Storage Manager**.

The Installation wizard opens. (If it doesn't open, select **Browse the CD/DVD**, then click **Autorun**.)

- 3 Click **Next** to begin the installation, click **I accept...**, then click **Next**.
- 4 Select **GUI and Agent**. Then click **Next**.



- 5 Repeat these steps to install Adaptec Storage Manager on every Windows system that will be part of your storage space.

## Installing on Red Hat, SuSE, or Fedora Linux

This section describes how to install Adaptec Storage Manager on systems running Red Hat Linux, SuSE Linux, or Fedora Linux. For information on installing Adaptec Storage Manager on Debian and Ubuntu Linux, see next section. For a list of supported Linux operating systems, see [System Requirements on page 17](#).

Adaptec Storage Manager includes the Java Runtime Environment (JRE).

**Note:** If a previous version of Adaptec Storage Manager is installed on your system, you must remove it before beginning this installation. Any customization files you created with the previous version are saved and used in the upgrade. To remove Adaptec Storage Manager, type the `rpm --erase StorMan` command.

To install Adaptec Storage Manager on Linux:

- 1 Insert the Adaptec Installation DVD.

- 2 Mount the Adaptec Installation DVD:

Red Hat: `mount /dev/cdrom /mnt/cdrom`

SuSE: `mount /dev/cdrom /media/cdrom`

Fedora: `mount /dev/hdc /mnt/cdrom`

- 3 Change to the manager directory:

Red Hat/Fedora: `cd /mnt/cdrom/ASMCD/linux/manager`

SuSE: `cd /media/cdrom/ASMCD/linux/manager`

- 4 Extract the RPM package and install it:

`rpm --install ./StorMan*.rpm`

- 5 Unmount the Installation DVD:

Red Hat/Fedora: `umount /mnt/cdrom`

SuSE: `umount /media/cdrom`

- 6 Repeat these Steps to install Adaptec Storage Manager on every Linux system that will be part of your storage space.

## Installing on Debian or Ubuntu Linux

This section describes how to install Adaptec Storage Manager on systems running Debian or Ubuntu Linux. For a list of supported Linux operating systems, see [System Requirements on page 17](#).

Adaptec Storage Manager includes the Java Runtime Environment (JRE).

**Note:** Before you can install Adaptec Storage Manager on Ubuntu systems, you must install the Ubuntu desktop package. See your operating system documentation for details.

To install Adaptec Storage Manager on Debian or Ubuntu Linux:

- 1 Insert the Adaptec Installation DVD.

**2** Mount the Adaptec Installation DVD:

```
mount /dev/cdrom /mnt/cdrom
```

**3** Change to the Debian manager directory:

```
cd /mnt/cdrom/ASMCD/debian_x86_64/manager
```

**Note:** The distribution includes a 32-bit and 64-bit installation package.

**4** Install the .deb package:

```
dpkg -i storman_6.50-15653_amd64.deb (for 64-bit systems)
```

**5** Unmount the Installation DVD:

```
umount /mnt/cdrom
```

**6** Repeat these Steps to install Adaptec Storage Manager on every Debian and Ubuntu Linux system that will be part of your storage space.

## Installing on Solaris

**Note:** If a previous version of Adaptec Storage Manager is installed on your system, you must remove it before beginning this installation. Any customization files you created with the previous version are saved and used in the upgrade. To remove Adaptec Storage Manager, type the `pkgrm RaidMan` command.

To install Adaptec Storage Manager on Solaris:

**1** Insert the Adaptec Installation DVD.

The DVD mounts automatically. (If it doesn't, manually mount the DVD using a command similar to the one shown below. Refer to your operating system documentation for detailed instructions.)

```
mount -F hsfs -o ro /dev/dsk/c1t0d0s2 /mnt
```

**2** Install Adaptec Storage Manager:

```
pkgadd -d /mnt/ASMCD/solaris_x86/manager/StorMan.pkg
```

**3** Follow the on-screen instructions to complete the installation.**4** Eject or unmount the Adaptec Installation DVD. Refer to your operating system documentation for detailed instructions.

## Installing on FreeBSD

To install Adaptec Storage Manager on FreeBSD:

**1** Insert the Adaptec Installation DVD.**2** Mount the Adaptec Installation DVD:

```
mount -F cd9660 -o ro /dev/acd0 /mnt
```

where `mount point` is the mount point of the DVD-ROM.

**3** Install Adaptec Storage Manager:

For FreeBSD for x86 (32-bit):

```
pkg_add /<mount point>/ASMCD/freebsd7/manager/StorMan-x86.pkg.tbz
```

For FreeBSD for amd64 (64-bit):

```
pkg_add /<mount point>/ASMCD/freebsd7_x86_64/manager/StorMan-amd64.pkg.tbz
```

where mount point is the DVD-ROM mount point.

**Note:** The installation DVD also includes packages for FreeBSD 8.

**4** Follow the on-screen instructions to complete the installation.**5** Unmount the Adaptec Installation DVD:

```
umount /<mount point>
```

## Installing on VMware

**Note:** Use the following procedure to install the Adaptec Storage Manager Agent on a VMware ESX 4.x system only. For VMware ESXi systems, you must install Remote ARCCONF to manage your storage space; for information about installing and using Remote ARCCONF, see the *Command Line Interface User's Guide*, on the Adaptec Installation DVD.

To install the Adaptec Storage Manager Agent on VMware ESX 4.x:

**1** Mount the Adaptec Installation DVD:

```
mount -r /dev/cdrom /mnt/cdrom
```

**2** Change to the ESX manager directory:

```
cd /mnt/cdrom/ASMCD/esx/manager (32-bit)
```

```
cd /mnt/cdrom/ASMCD/esx_x64/manager (64-bit)
```

**3** Type one of the following commands to install the rpm on the VMware ESX Server:

```
rpm --install ./StorMan*.rpm (32-bit)
```

```
rpm --install --nodeps ./StorMan*.rpm (64-bit)
```

**Note:** Ignore the message "Application can be started by typing /usr/StorMan/StorMan.sh". VMware does not support the Adaptec Storage Manager GUI.

**4** To use Adaptec Storage Manager to connect remotely from another system, you must open a range of ports in the built-in firewall. Type this command:

```
esxcfg-firewall -o 34570:34581,tcp,in,"StorMan"
```

For more information, see [Logging into Remote Systems from the Local System on page 32](#).

**5** From a Windows or Linux client, connect to the Adaptec Storage Manager Agent on the VMware ESX system using the ASM GUI. Alternatively, use the ARCCONF command line utility to configure and manage your disk drives from the VMware ESX console. For more information, refer to the *Command Line Interface User's Guide*, on the Adaptec Installation DVD.

## Using Adaptec Storage Manager with a Firewall

If your system or network includes a firewall, you must unblock these ports:

- 8003 (TCP)
- 34580 (TCP)
- 34570 to 34579 (TCP)
- 34570 (UDP)
- 34577 to 34580 (UDP)

## Running Adaptec Storage Manager from the DVD

This section describes how to run Adaptec Storage Manager directly from the Installation DVD, instead of as an installed application. When you run Adaptec Storage Manager from the DVD, you are using *bootable-CD mode*.

### When to Choose Bootable-CD Mode

Use Adaptec Storage Manager in bootable-CD mode if you want to install your operating system on a disk drive or logical drive associated with your controller. Bootable-CD mode lets you configure the controller before you install your operating system.

After you have configured the controller and installed the operating system, install and run Adaptec Storage Manager as an installed software application, as described earlier in this chapter.

### Bootable-CD Mode Limitations

Running Adaptec Storage Manager in bootable-CD mode is not an alternative to running it as an installed software application. Most of the features and functions described in this *User's Guide* are not available when you are running Adaptec Storage Manager from the DVD. Bootable-CD mode is only for configuring your controller before you install an operating system.

### Getting Started in Bootable-CD Mode

This is a checklist of tasks to complete when you're building your storage space with Adaptec Storage Manager in bootable-CD mode.

- ✓ Install your Adaptec by PMC RAID controller.
- ✓ Run Adaptec Storage Manager (see the following section).
- ✓ Create logical drives (see [page 34](#)).

For an introduction to the Adaptec Storage Manager window and its features, see [page 44](#).

- ✓ Install your operating system (and controller device drivers, if appropriate).
  - ✓ Install Adaptec Storage Manager as a software application, as described earlier in this chapter.
-

- ✓ Continue to build, customize, and manage your storage space as described in the rest of this *User's Guide*.

## Running Adaptec Storage Manager from the DVD

**Note:** Before you begin, ensure that your system is set up to boot from a DVD or CD drive. Check the system BIOS to see if the CD drive is listed first in the boot order. For more information, refer to your system's documentation.

To run Adaptec Storage Manager in bootable-CD mode:


- 1 Insert the Adaptec Installation DVD into your DVD drive, then restart your system.
- 2 When prompted, select the language you want, then press **Enter**.
- 3 Review the license information, then press **Enter**.

The main DVD menu opens.


- 4 Click **Launch Configuration Utility**.

Adaptec Storage Manager opens.

- 5 In the tool bar, click **Create**.

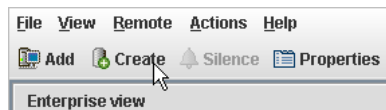

The Configuration wizard opens.

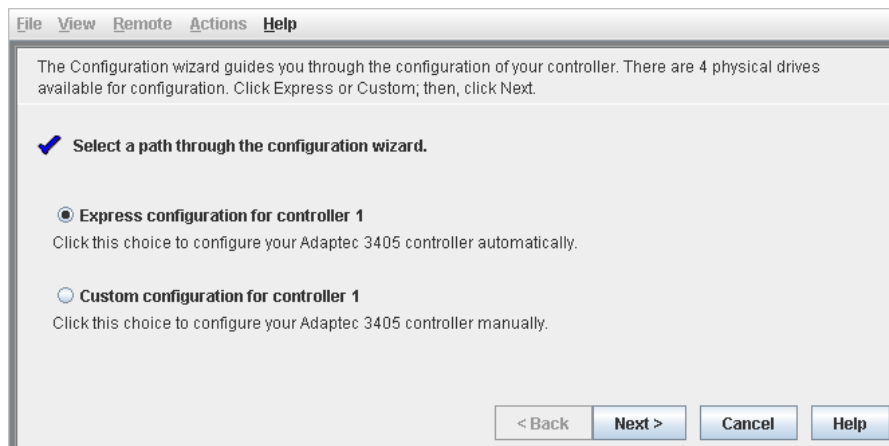

- 6 Continue with [Creating Logical Drives](#) on page 34.



## Building Your Storage Space

---

### In this chapter...

Overview .....	26
Choosing a Management System.....	26
Starting and Logging In on the Local System .....	27
Starting Adaptec Storage Manager on Remote Systems.....	31
Logging into Remote Systems from the Local System.....	32
Creating Logical Drives.....	34
Managing Your Storage Space .....	42

Follow the instructions in this chapter to start Adaptec Storage Manager, log in to each system in your storage space, and create logical drives. (For more information, see [Understanding Logical Drives on page 60](#).)

**Note:** Before beginning the tasks in this chapter, ensure that Adaptec Storage Manager is installed on every system that will be part of your storage space.

## Overview

To build your storage space, complete these steps as described in the rest of this chapter:

- 1 Choose at least one management system (see the next section).
- 2 Start and log in to Adaptec Storage Manager on the management system (see [page 27](#)).
- 3 Start Adaptec Storage Manager or the Agent on all other systems (see [page 31](#)).
- 4 Log in to all other systems from the management system (see [page 32](#)).
- 5 Create logical drives for all systems in your storage space (see [page 34](#)).

## Choosing a Management System


You must designate at least one system as a ‘management system’, a system from which you will manage the direct attached storage on all systems in your storage space.

The management system can be any system on your network that has a video monitor and can run the full Adaptec Storage Manager application.

### ‘Local’ or ‘Remote’?

Whenever you’re working in Adaptec Storage Manager, the system that you’re working on is the *local* system. All other systems in your storage space are *remote* systems. ‘Local’ and ‘remote’ are relative terms, as shown in the following figure—when you are working on system A (local system), system B is a remote system; when you are working on system B (local system), system A is a remote system.

For the purposes of this chapter, the ‘local system’ is the management system.

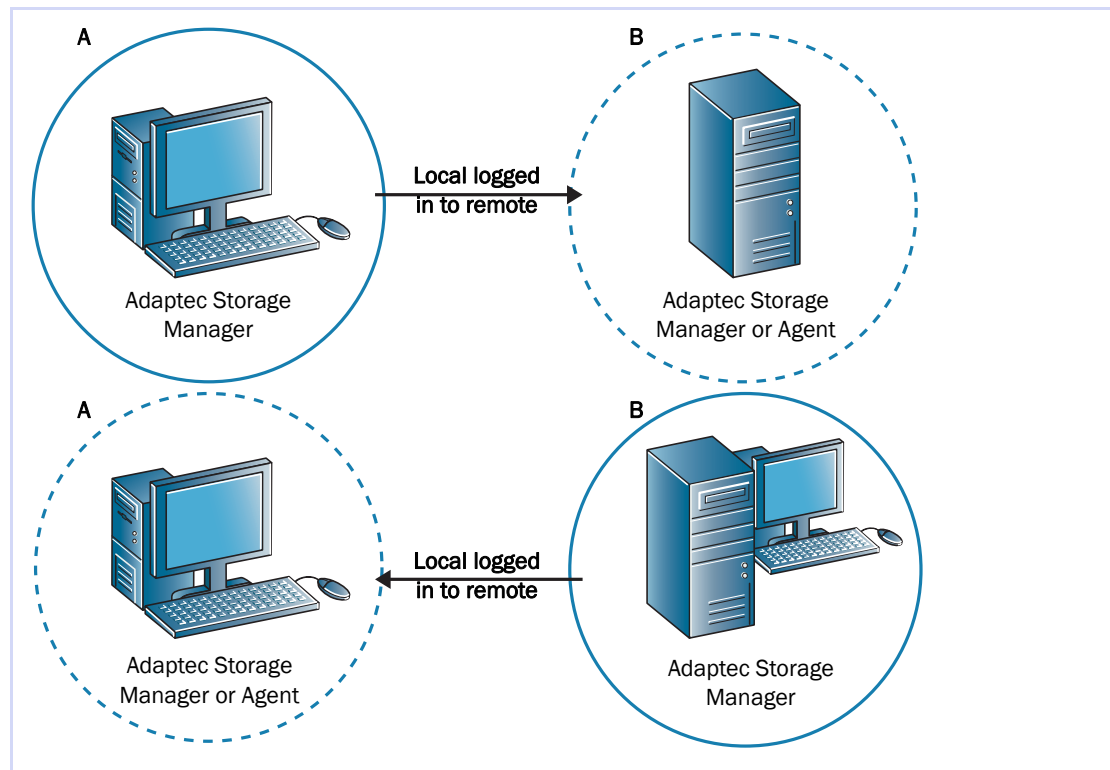

## Starting and Logging In on the Local System

This section describes how to start and log in to the full Adaptec Storage Manager application. It also explains how Adaptec Storage Manager uses existing operating system permission levels to grant different amounts of access to your storage space.

### Understanding Permission Levels

When you log in to Adaptec Storage Manager, your permission level is identical to your operating system permission level. For example, if you have Administrator permissions on your operating system, you also have Administrator permissions in Adaptec Storage Manager.

This section describes the three different permission levels.

#### Administrator Level

Logging in as an Administrator allows you full access to manage and modify the controllers, disk drives, and logical drives that are part of your storage space.

To log in as an Administrator:

- **Windows**—Enter a valid user name and password for the Administrator or Administrative User on the system. (The Administrative User is any member of the local Administrators group, which can, in a Domain configuration, include Domain Administrators.)
- **Linux**—Enter `root` for the user name and enter the root password.
- **Solaris**—Enter `root` for the user name and enter the root password.

#### User Level

Logging in as a User partially restricts your access to the storage space, as described in this table.

Users can...	User's can't...
Rescan controllers	Create logical drives
Save activity logs	Modify logical drives
Verify disk drives (with and without fix)	Delete logical drives
Verify logical drives (with and without fix)	Delete hot spares
Identify disk drives and enclosures	Perform data migrations
Rebuild disk drives	
Create hot spares	
Access the same information as Guests (see the following section)	

To log in as a User, use your normal network user name and password.

#### Guest Level

Logging in as a Guest restricts your access to the storage space to “view-only”.

You can see all local and remote systems and view their properties windows, view event logs, save configuration files and support archives, and browse the online Help.

You cannot make any changes to the storage space.

To log in as Guest, click **Cancel** on the Login window.

## Starting and Logging In

**Note:** You need root privileges to run Adaptec Storage Manager.

To start Adaptec Storage Manager and log in on the local system, follow the instructions for your operating system:


- For Windows, see the following section.
- For Linux, see [page 29](#).
- For Solaris, see [page 29](#).
- For FreeBSD, see [page 29](#).

### Windows


- 1 From the Start menu, select **Programs > Adaptec Storage Manager > Adaptec Storage Manager**.

The main window opens.

- 2 In the Enterprise View, expand **Direct Attached Storage**, then select the local system.

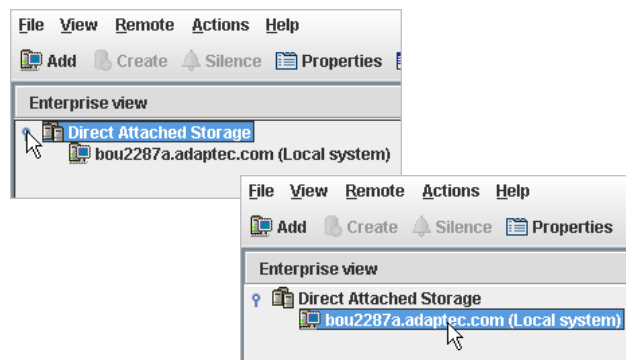

The Log In window opens.

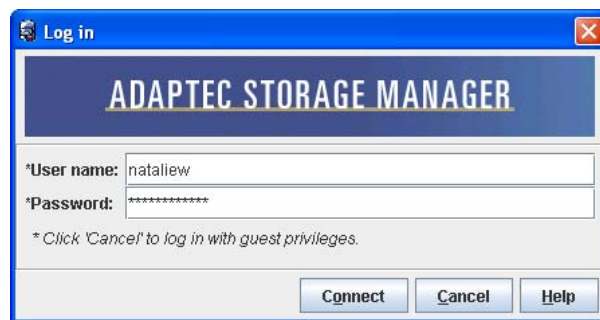

- 3 Enter your LAN user name and password, then click **Connect**. (See [Understanding Permission Levels](#) on [page 27](#) for more information.)
- 4 If Adaptec Storage Manager detects a new controller on the local system, the New Hardware Detected window opens. Click **Register Now**, then follow the on-screen instructions to complete the registration.
- 5 Continue with [Enabling Statistics Logging in Adaptec Storage Manager](#) on [page 30](#).

## Linux

- 1 Type the following command to change to the Adaptec Storage Manager installation directory:  

```
cd /usr/StorMan
```
- 2 Type the following command and press **Enter**:  

```
sh StorMan.sh
```
- 3 When the Log In dialog box appears (see [page 28](#)), enter your LAN user name and password, then click **Connect**. (See [Understanding Permission Levels on page 27](#) for more information.)
- 4 If Adaptec Storage Manager detects a new controller on the local system, the New Hardware Detected window opens. Click **Register Now**, then follow the on-screen instructions to complete the registration.
- 5 Continue with [Enabling Statistics Logging in Adaptec Storage Manager on page 30](#).

## Solaris

To start Adaptec Storage Manager:

- 1 Change to the directory where Adaptec Storage Manager is installed:  

```
cd /usr/StorMan
```
- 2 Launch the Adaptec Storage Manager script:  

```
sh StorMan.sh
```
- 3 If prompted, register the controllers on the local system.
- 4 Continue with [Enabling Statistics Logging in Adaptec Storage Manager on page 30](#).

## FreeBSD


- 1 Change to the directory where Adaptec Storage Manager is installed:  

```
cd /opt/StorMan
```
  - 2 Launch the Adaptec Storage Manager script:  


```
sh StorMan.sh
```
  - 3 If prompted, register the controllers on the local system.
  - 4 Continue with [Enabling Statistics Logging in Adaptec Storage Manager on page 30](#).
-

## Enabling Statistics Logging in Adaptec Storage Manager

When you log in for the first time, Adaptec Storage Manager asks you to enable statistics logging on your system. It also asks for permission to periodically send the data to Adaptec by PMC Product Support for analysis. This feature is referred to as “call home.” (See [Logging Statistics for Remote Analysis on page 121](#) for more information.)

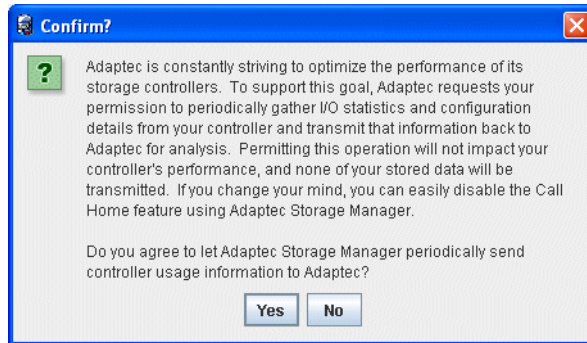

Click **Yes** to enable statistics logging. (If you change your mind, you can turn off statistics logging later.) The Advanced Statistics Manager window opens and you are prompted to enter your proxy server settings.

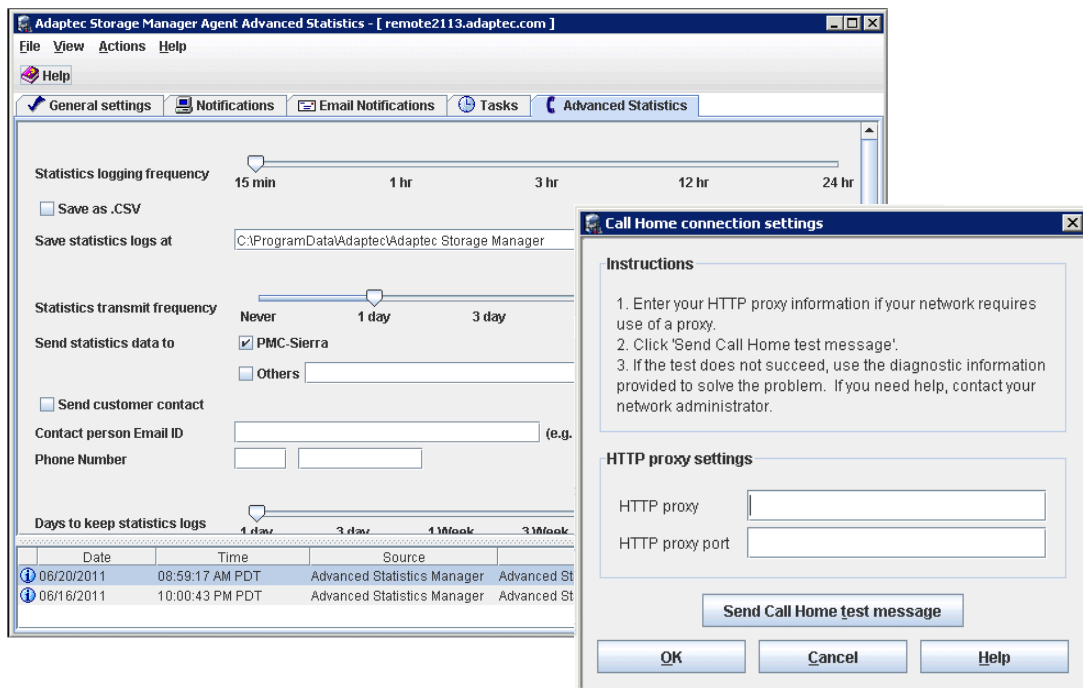

Enter your proxy server name and port number (if your network uses a proxy server), then click **Send Call Home test message**. A message appears indicating either that the test message was sent successfully or that the test failed. (Click **OK** to clear the message.)

Click **OK** to close the Call Home connection settings window. Then close the Advanced Statistics Manager window.

Continue with [Starting Adaptec Storage Manager on Remote Systems on page 31](#).

## Starting Adaptec Storage Manager on Remote Systems

The next step is to start Adaptec Storage Manager on all the remote systems in your storage space. (For more information about ‘remote’ systems, see [page 26](#).)

You can run the full application on each system. Alternatively, if your storage space includes systems that aren’t connected to monitors (and therefore won’t require the user interface described in this *User’s Guide*), you can run the *Agent only*. You may want to do this if system resources are limited, or if you want more system resources available for other tasks. (For more information, see [About the Adaptec Storage Manager Agent on page 14](#).)

To start:

- The full application, see [Starting and Logging In on the Local System on page 27](#).
- The Agent only, see [page 31](#).

### Starting the Full Application

To start the full Adaptec Storage Manager application, follow the instructions in [Starting and Logging In on the Local System on page 27](#).

### Starting the Agent Only

To start the Adaptec Storage Manager Agent only, follow the instructions for your operating system:

- For Windows, see the following section.
- For Linux or VMware, see [page 31](#).
- For Solaris, see [page 32](#).

#### Windows

On systems running Windows, the Adaptec Storage Manager Agent starts automatically when the system is powered on.

To verify that the Agent is running:

- 1 Open the Windows **Control Panel**.
- 2 Double-click **Administrative Tools**, then double-click **Services**.
- 3 In the list of services, check that the Adaptec Storage Manager Agent is installed and running. If it’s not, you can choose to restart it.

#### Linux or VMware

On systems running Linux or VMware, the Adaptec Storage Manager Agent starts automatically when the system is powered on.

To verify that the Agent is running:

- 1 Open a shell window.
- 2 Enter this command: `ps -ef | grep StorAgnt.sh`

If the Agent is running, it’s listed as `sh StorAgnt.sh`.

## Solaris

To start the Agent, enter this command:

```
svcadm enable ADPTstor_agent
```

## Logging into Remote Systems from the Local System


Once Adaptec Storage Manager or the Adaptec Storage Manager Agent (see [page 14](#)) is running on all systems in your storage space, the next step is to log in to the remote systems from the local system.

Once you have logged in to a remote system, it automatically appears in the Enterprise View each time you start Adaptec Storage Manager on the local system. You can work with a remote system's controllers, disk drives, and logical drives as if they were part of your local system.


**Note:** Adaptec Storage Manager has a wizard to help you manage the remote systems in your storage space. The wizard simplifies the process of connecting to remote systems and adding them to the Enterprise View. For more information, see [Managing Remote Systems on page 129](#).

To log in to a remote system:

- 1 In the Enterprise View, select either **Direct Attached Storage** or the **Local System**.
- 2 From the **Actions** menu, select **Add managed system**.

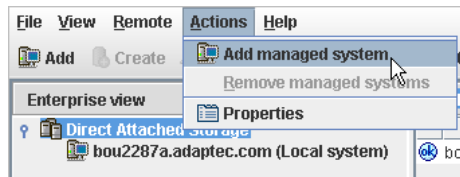

The Add Managed System window opens.

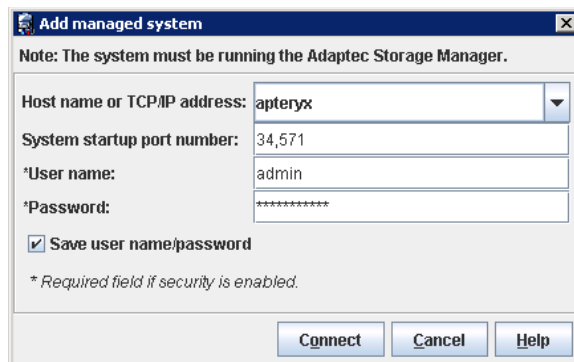


- 3 Enter the host name or TCP/IP address of the remote system. Or select a system from the drop-down list.
- 4 Enter the startup port number of the remote system. The default port number is 34571.



5 Click **Connect**.

Adaptec Storage Manager connects to the remote system and adds it to the list of managed systems in the Enterprise View.

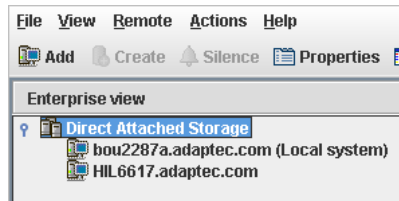

**Note:** You must log in to a remote system with the proper permission level to complete the tasks you wish to perform. See [Understanding Permission Levels on page 27](#) for more information.

- 6 If Adaptec Storage Manager detects a new controller on the local system, the New Hardware Detected window opens. Click **Register Now**, then follow the on-screen instructions to complete the registration.
- 7 Continue with [Creating Logical Drives on page 34](#).

## Removing a Remote System

If you no longer want to monitor a remote system, you can remove it from the Enterprise View of Adaptec Storage Manager.

Removing a remote system does not take it off-line.

**Note:** Adaptec Storage Manager has a wizard to help you manage the remote systems in your storage space. The wizard simplifies the process of removing remote systems from the Enterprise View. For more information, see [Managing Remote Systems on page 129](#).

To remove a remote system:

- 1 In the menu bar of the main window, select **Remote**, select **Remove managed system**, then click the system you want to remove.

The Remove Managed System window opens.

- 2 If you want to continue receiving events from the remote system after it's been removed from the local system, select **Continue to receive events from the remote system** from the drop-down menu.
- 3 Click **OK**.

The remote system is removed from the Enterprise View of Adaptec Storage Manager.

## Creating Logical Drives

Adaptec Storage Manager has a wizard to help you create (or *configure*) logical drives, and offers two configuration methods to choose from, depending on your needs:

- **Express configuration (basic)**—Automatically creates logical drives by grouping together same-sized physical drives, and assigns RAID levels based on the number of physical disk drives in the logical drive.

Use the express method when you want to use all available disk drives in the most efficient manner. For instructions, see [page 34](#).

- **Custom configuration (advanced)**—Helps you group disk drives, set RAID levels, determine logical drive size, and configure advanced settings manually.

Use the custom method when you want to create specific logical drives with any or all available disk drives and SSDs (Solid State Drives). For instructions, see [page 37](#).

**Note:** We recommend that you *not* combine SAS and SATA disk drives within the same logical drive. Adaptec Storage Manager displays a warning if you try to create a logical drive using a combination of SAS and SATA disk drives.

### Express Configuration: The Easy Way

When you use express configuration, Adaptec Storage Manager automatically creates logical drives by grouping together same-sized physical disk drives, and assigns RAID levels based on the number of physical disk drives in a logical drive:


- A logical drive with three or more physical disk drives is assigned RAID 5.
- A logical drive with two physical disk drives is assigned RAID 1.
- A logical drive with only a single physical disk drive becomes a simple volume, which does not offer redundancy.

**Note:** To create a logical drive with any other RAID level, you must use the custom method, as described on [page 37](#). See [Selecting the Best RAID Level on page 153](#) for more information about RAID levels.


By default, logical drive size is set by Adaptec Storage Manager and automatically maximizes the capacity of the disk drives. However, you can choose to specify a size for a logical drive, if required.

To build your storage space with the express method:


- 1 In the Enterprise View, select the system you want, then select the controller you want.
- 2 On the toolbar, click **Create**.

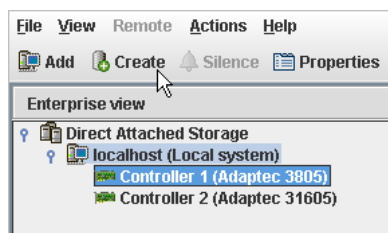

- 3 When the wizard opens, ensure that **Express configuration...** is selected, then click **Next**.

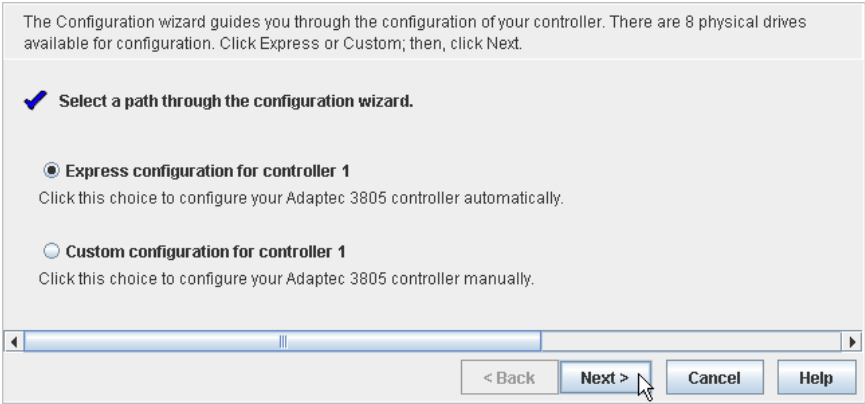

- 4 Review the information that is displayed.

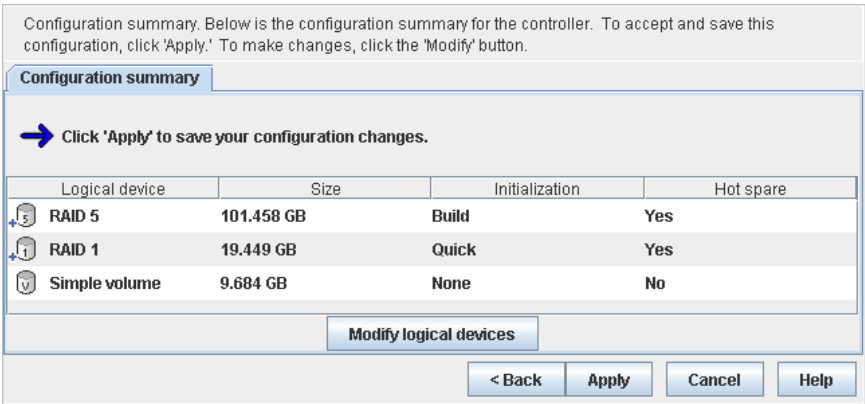

To exclude specific disk drives, specify a size for the logical drives, or to make other changes to the configuration, click **Modify logical devices**. See [Step 7 on page 39](#) for more information.

**Note:** Some operating systems have size limitations for logical drives. Before you save the configuration, verify that the size of the logical drive is appropriate for your operating system.


- 5 Click **Apply**, then click **Yes**.

Adaptec Storage Manager builds the logical drive(s), indicated by a magnifying glass moving across the new logical drive icon in the Logical Devices View. The configuration is saved on the Adaptec controller and on the physical drives.



A magnifying glass means that a logical drive is being built. It disappears once the logical drive has been created.

**Note:** To stop the creation of a new logical drive, right-click on the magnifying glass icon (shown in the figure above), then select **Stop current task**. You can also change the priority of the build task to High, Medium, or Low by selecting **Change background task priority** from the same right-click menu.

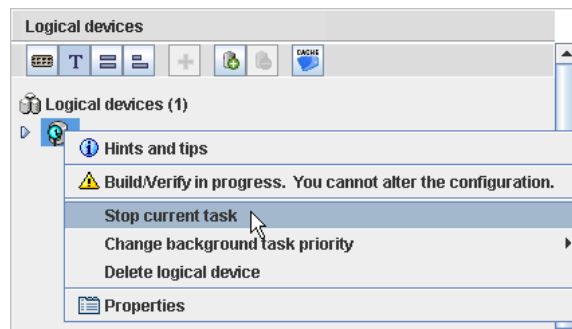

- 6 Repeat Steps 1 to 5 for each controller in your storage space, as required.
- 7 Continue with [Partitioning and Formatting Your Logical Drives](#) on page 36.

### Partitioning and Formatting Your Logical Drives

The logical drives you create appear as physical disk drives on your operating system. You *must* partition and format these logical drives before you can use them to store data.

**Note:** Logical drives that have not been partitioned and formatted cannot be used to store data.

Refer to your operating system documentation for more information.

### Including More Systems in Your Storage Space

**Note:** Adaptec Storage Manager must be installed on every system that will be part of your storage space.

If you have installed Adaptec RAID controllers on more than one system, to continue building your storage space:

- From each individual system, log in to Adaptec Storage Manager and repeat Steps 1 to 7 to continue building your storage space, *or*
- From your *local* system (the system you're working on), log in to all other systems in your storage space as *remote* systems (see [page 26](#)), then repeat Steps 1 to 7 to continue building your storage space.

The maximum number of supported RAID controllers varies depending on your operating system. See [Controller Support on page 17](#) for more information.


To continue, see [Managing Your Storage Space on page 42](#).

## Custom Configuration (Advanced)


Custom configuration helps you build your storage space manually by stepping you through the process of creating logical drives, setting RAID levels, and configuring other settings.

To build your storage space with custom configuration:

- 1 In the Enterprise View, select the system you want, then select the controller you want.  
Note how many available disk drives are connected to the controller; this information will be helpful as you create logical drives.
- 2 On the toolbar, click **Create**.

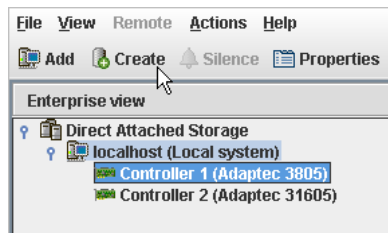

- 3 When the wizard opens, select **Custom configuration...**, then click **Next**.

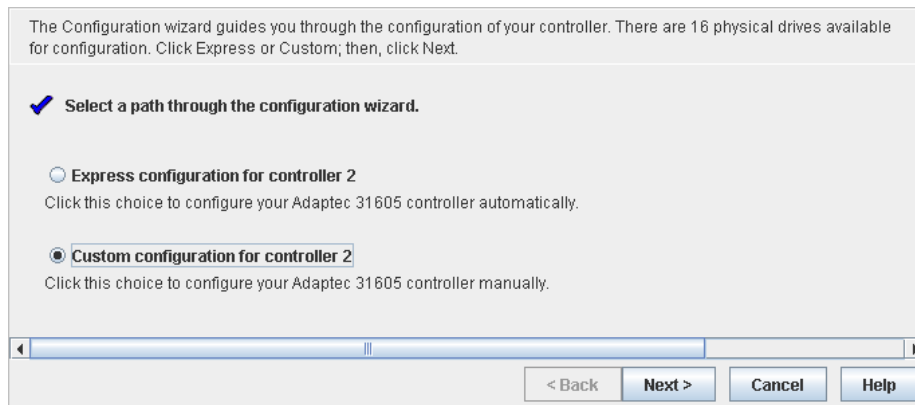

4 Select a RAID level.

The most common RAID levels are listed first; advanced RAID levels are available by clicking **Advanced settings**.

1

☒ Select the RAID level for this logical device.

☐ RAID 0 (Striping, 2 or more drives required, not redundant)

☐ RAID 1 (Mirroring, 2 drives required, redundant)

☒ RAID 5 (Striping with parity, 3 or more drives required, redundant)

▼ Advanced settings

☐ RAID 1E (Mirroring, 3 or more drives required, redundant)

☐ RAID 5EE (Striping with parity, built-in spare, 4 or more drives required, redundant)

☐ RAID 6 (Striping with dual parity, 4 or more drives required, redundant)

☐ RAID 10 (Striped mirrors, even number of drives required, redundant)

☐ RAID 50 (RAID-5 groups striped together, 6 or more drives required, redundant)

☐ RAID 60 (RAID-6 groups striped together, 8 or more drives required, redundant)

☐ JBOD disk (A single passthrough disk, not redundant, not bootable)

☐ Simple volume (A single drive segment, not redundant)

☐ Spanned volume (Two or more concatenated drive segments, not redundant)

☐ RAID volume (Two or more concatenated logical drives, may be redundant)

Add logical device < Back Next > Cancel Help


**Note:** To build a RAID Volume, see [page 73](#). To build a JBOD disk, see [page 75](#). See [Selecting the Best RAID Level on page 153](#) for more information about RAID levels.

5 Click Next.

6 On the left side of the window, enter a name for the logical drive. Names can include any combination of letters and numbers, but cannot include spaces.

- 7 On the right side of the window, select the disk drives and SSDs (Solid State Drives) you want to use in the logical drive. Adaptec Storage Manager prompts you to choose the correct number of drives for the selected RAID level.


**Note:** Adaptec Storage Manager allows you to combine hard drives and SSDs in a RAID 1 or RAID 10 logical drive. This type of logical drive is called *hybrid RAID*. Hybrid RAID improves performance by sending read operations to the fastest path first—the SSD. For a Hybrid RAID10 you must select an equal number of SSDs and HDDs in “every other drive” order, that is: SSD—HDD—SSD—HDD, and so on.

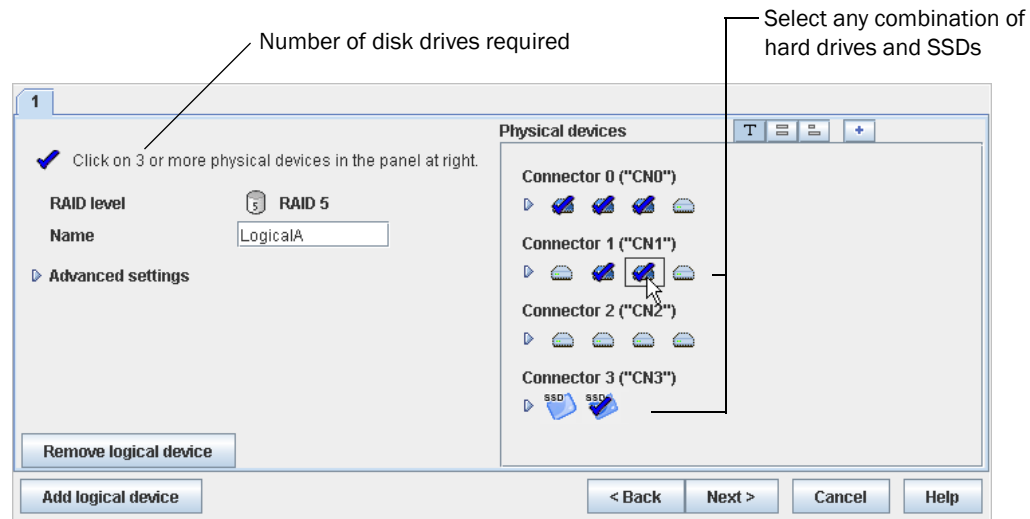

By default, Adaptec Storage Manager automatically sets the size of the logical drive and maximizes the capacity of the drives you select. (To set a custom size for the logical drive, see [Step 9](#).)

- 8 (Optional) Create a global hot spare by clicking the **Create Global Hot Spare** button, then clicking on an available disk drive. (Alternatively, **Ctrl+click** an available disk drive.) Available disk drives are represented by light blue icons.

A plus sign (+) appears to indicate that the selected disk drive will be a hot spare. (To remove a hot-spare designation from a disk drive, **Ctrl+click** it.)

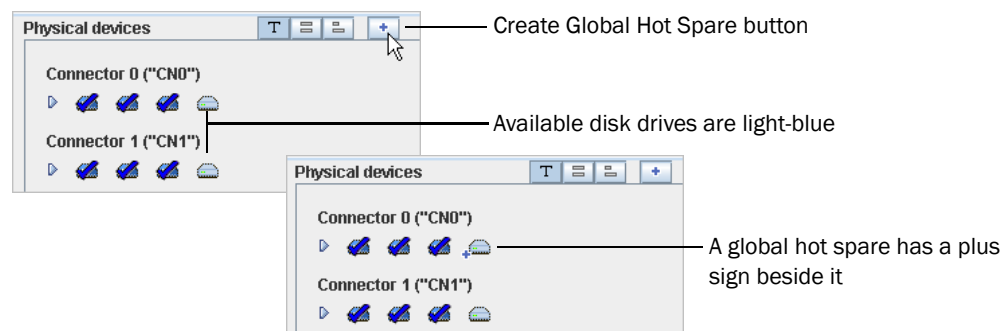

See [Creating and Managing Hot Spares](#) on page 55 for more information.

- 9 (Optional) To set a smaller logical drive size or to modify other settings for this logical drive click **Advanced Settings**, then customize the settings as needed. See *Fine-tuning Logical Drives* on page 64 for more information.

1

✓ Click on 3 or more, up to 13 physical devices in the panel at right.

RAID level 5 RAID 5

Name

▼ Advanced settings

Capacity display units GB

Size (GB)

Stripe size (KB) 256

Write cache Enabled (write-back)

Read cache Enabled

MaxCache Read Cache Enabled

Initialize method Build

Initialize priority High

Skip initialization ☐

Power management ☒

- 10 If you have no other available disk drives, skip to [Step 12](#).

If you have available disk drives and want to create additional logical drives, click **Add logical device** to open a new tab in the wizard.

1 New

→ Select the RAID level for this logical device.

☐ RAID 0 (Striping, 2 or more drives required, not redundant)


☐ RAID 1 (Mirroring, 2 drives required, redundant)

☐ RAID 5 (Striping with parity, 3 or more drives required, redundant)

- 11 Repeat Steps 4 to 10 for each logical drive that you want to create on the controller.
- 12 Click **Next**, then review the logical drive settings.



This example shows two logical drives with RAID 5 are ready to be created.

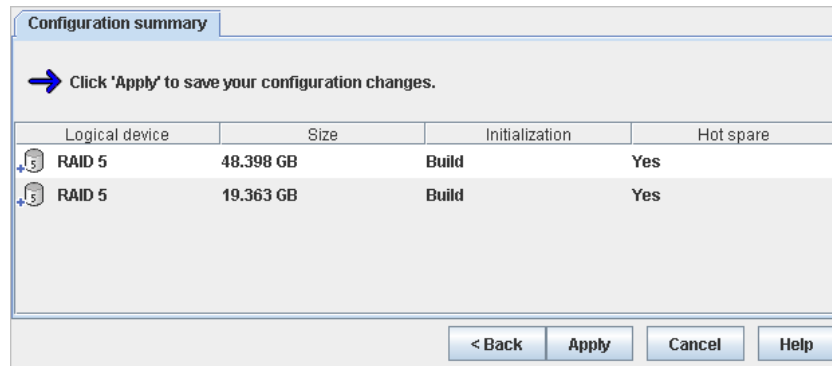

To make changes, click **Back**.

**Note:** Some operating systems have size limitations for logical drives. Before continuing, verify that the size of the logical drive is appropriate for your operating system. For more information, refer to your operating system documentation.

- 13 Click **Apply**, then click **Yes**.


Adaptec Storage Manager builds the logical drive(s), indicated by a magnifying glass moving across the new logical drive icon in the Logical Devices View.



A magnifying glass means that a logical drive is being built. It disappears once the logical drive has been created.

The logical drive power timers window opens.

- 14 Set the power timers for the logical drive. The power timers control power usage by the logical device's disk drives. See [Maintaining an Energy-Efficient Storage Space on page 76](#) for more information.

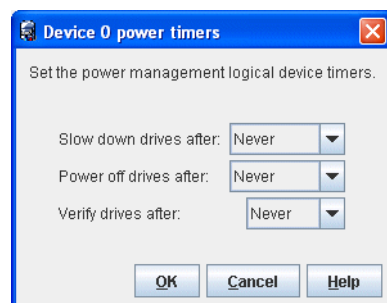

**Note:** Adaptec Storage Manager prompts you to set power timers for each logical drive you created in the wizard. If you did not enable power management for any logical drive, Adaptec Storage Manager does not display the power timers window.

- 15 Repeat Steps 1 to 14 for each controller in your storage space, as required.
- 16 Partition and format your logical drives. See [page 36](#) for more information.

- 17 When you've finished building your storage space, continue with [Managing Your Storage Space on page 42](#).

## Managing Your Storage Space

Once your storage space is built, you can add systems, controllers, and disk drives to meet your changing needs, then create logical drives by repeating the steps in this chapter.

The next section of this *User's Guide*, [Part II: Monitoring and Modifying Your Storage Space](#), introduces the features of Adaptec Storage Manager and describes how to protect, monitor, modify, and maintain your storage space.

To become familiar with the user interface of Adaptec Storage Manager, continue with [Exploring Adaptec Storage Manager on page 44](#).

---

## Part II: Monitoring and Modifying Your Storage Space

### **In this part:**

Exploring Adaptec Storage Manager .....	44
Protecting Your Data .....	54
Modifying Your Direct Attached Storage .....	59
Scheduling Recurring or Resource-Intensive Jobs .....	82
Maintaining Physical Devices .....	88
Monitoring Status and Activity .....	104
Updating and Customizing Adaptec Storage Manager ..	126
Solving Problems .....	136

# Exploring Adaptec Storage Manager

---

# 4

## In this chapter...

Working in Adaptec Storage Manager .....	45
Overview of the Main Window .....	45
Revealing More Device Information .....	50
Checking System Status from the Main Window .....	51
Getting Help .....	51
Logging Out of Adaptec Storage Manager .....	52
Uninstalling Adaptec Storage Manager .....	52

Before you build your storage space, familiarize yourself with the main features of Adaptec Storage Manager and learn to navigate to the information you need.

## Working in Adaptec Storage Manager

Adaptec Storage Manager provides multiple ways to work with its menus and windows.

Most menu options are available by:

- Selecting items from the menu bar.
- Clicking buttons on the tool bar.
- Right-clicking on components in the main window. (Only tasks and windows associated with a specific component are available on right-click menus.)

For simplicity, the tasks in this *User's Guide* are explained mainly using menu bar options.

### About the Actions Menu

Most of the main tasks in Adaptec Storage Manager are available from the Actions menu on the menu bar. Options that appear on the Actions menu vary, depending on which type of component is selected in the main window. For instance, managed systems, disk drives, and hot spares each have specialized Actions menus.


For an overview of all Actions menu options, see [What options are on the Actions menu? on page 165](#).

## Overview of the Main Window

The main window of Adaptec Storage Manager has three main panels—left, right, and bottom—in addition to the other features shown in this figure.

The left panel always shows the Enterprise View; the bottom panel always shows the event log. Different information, or *views*, appear in the right panel depending on which component is selected in the Enterprise View.

In example below, a controller is selected in the Enterprise View, and the right panel displays the Physical Devices and Logical Devices Views.

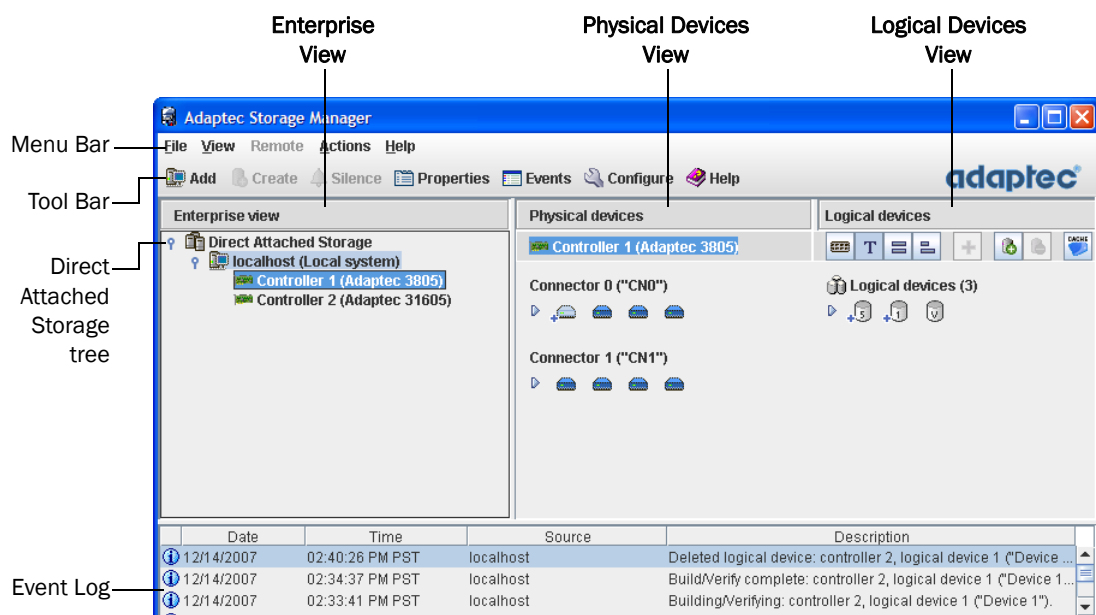


Resize the panels and scroll horizontally or vertically as required, to view more or less information.

## The Enterprise View

The Enterprise View shows an expandable “tree” with one main section: Direct Attached Storage. Under Direct Attached Storage, the Enterprise View lists the local system (the system you’re working on) and any remote systems with direct attached storage that you have logged in to from the local system. (See *‘Local’ or ‘Remote’?* on page 26 for more information.)

Expand a system in the Enterprise View to see its controllers.

When you select a component in the Enterprise View, the controllers, disk drives, or logical drives (“devices”) associated with it appear in the right-hand panel of the window, as shown in these figures.

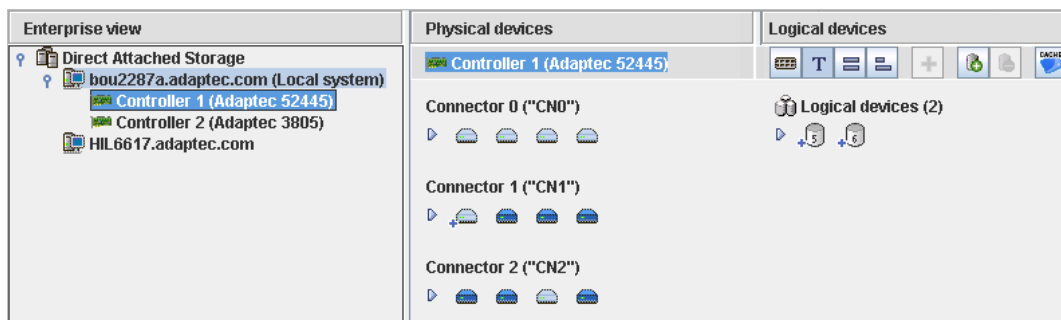




By selecting a controller in the Enterprise View...

...the disk drives (shown above) or enclosures and disk drives (shown below) connected to it and the logical drives created with those disk drives appear in the Physical and Logical Devices Views.




You can perform most tasks by selecting a controller in the Enterprise View and working with its associated devices in the Physical and Logical Devices Views.

## What do the Enterprise View icons mean?

Icon	Description
	System with direct attached storage controller and directly attached disk drives or enclosures
	Enclosure
	Controller

## The Physical Devices View

When you select a controller in the Enterprise View, information about the physical devices connected to that controller appear in the Physical Devices View. Disk drives designated as hot spares have plus signs (+) beside them.

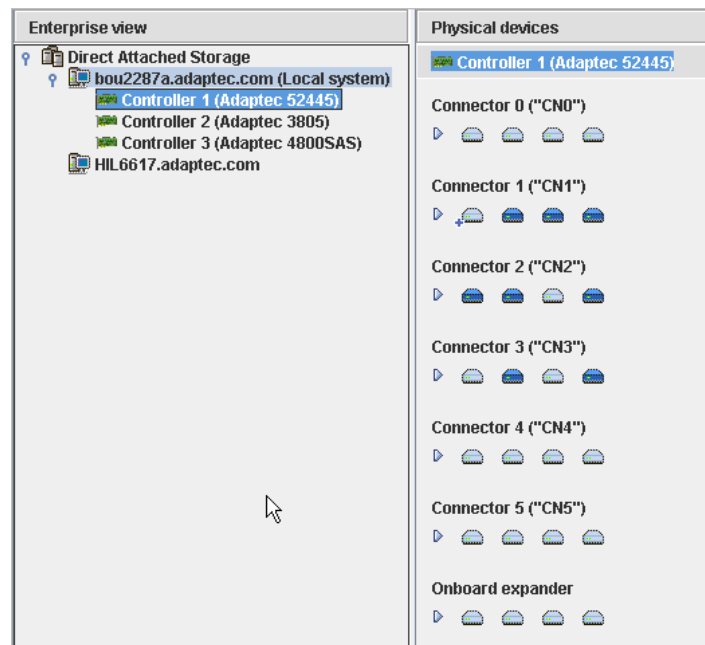

Controller 1...













...has six connectors and one onboard expander, and is connected to 28 disk drives.

Hold your cursor over any disk drive to see its status, connector/ID number, and maximum speed. You can also click the arrow, shown at right, to see this same information. See [Revealing More Device Information on page 50](#) to change how disk drives are represented.




To view the logical drives associated with a particular disk drive, see [The Logical Devices View on page 48](#).

## What do the icons in the Physical Devices View mean?

Icon	Description
	Ready disk drive, not part of any logical drive
	Disk drive with some space allocated to a logical drive, and some space available
	Disk drive with no free space
	Failed disk drive
	Healthy global or dedicated hot spare protecting at least one logical drive (See <a href="#">Creating and Managing Hot Spares on page 55</a> for more information.)
	Hot spare with error (see <a href="#">page 56</a> for more information)
	Hot spare being built into logical drive after disk drive failure
	Hot spare built into logical drive after disk drive failure
	Ready Solid State Drive (SSD), not part of any logical drive or maxCache pool
	Solid State Drive assigned to maxCache pool
	Controller
	Enclosure Management Device (represents an enclosure connected to your controller)

## The Logical Devices View

When you select a controller in the Enterprise View, information about the logical drives and arrays associated with that controller appear in the Logical Devices View. (A *logical drive* is a group of physical disk drives that your operating system recognizes as a single drive. For more information, see [Understanding Logical Drives on page 60](#).)

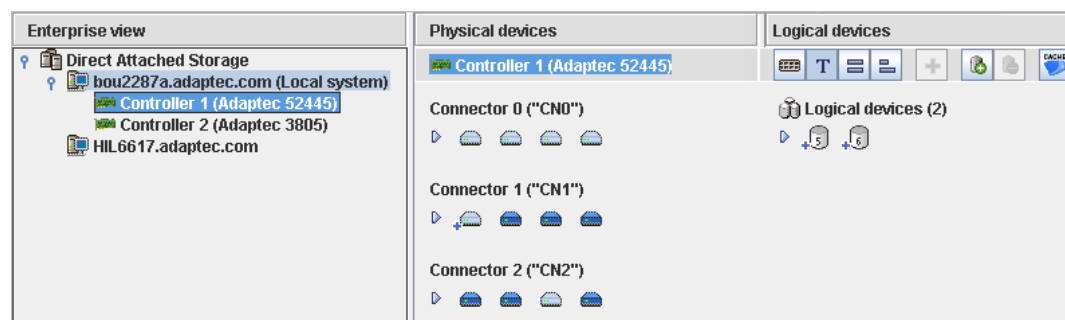

Controller 1 is connected to...

...28 disk drives (some not shown here)...

...from which two logical drives have been created.

The RAID level of a logical drive is indicated by the number inside the logical drive's icon. For instance, the logical drive shown at right has RAID 1. Logical drives protected by hot spares have plus signs (+) beside them, as shown at right.




Hold your cursor over any logical drive to see its name, status, and size. You can also click the arrow, shown at right, to view this same information for all the logical drives at once.





Click on a logical drive to highlight the disk drives that comprise it in the Physical Devices View.

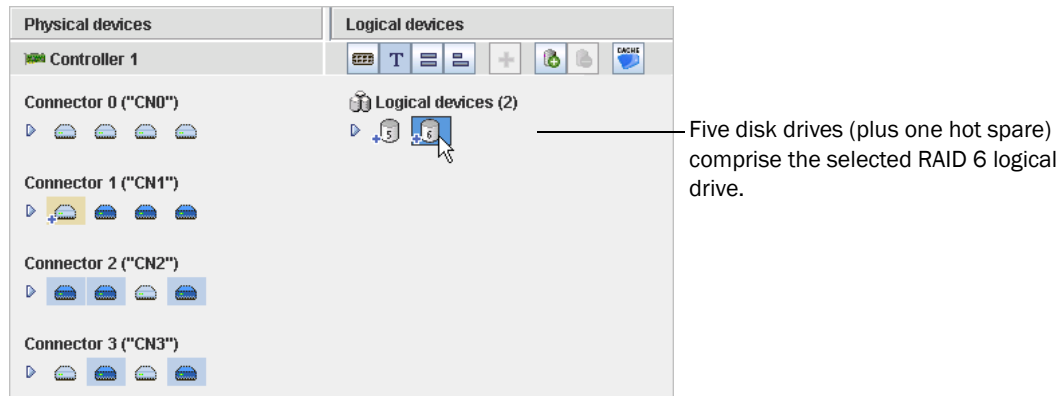

You can also click on any disk drive to see which (if any) logical drive it belongs to. A disk drive shaded in light blue is not part of any logical drive.


### What do the icons in the Logical Devices View mean?

Icon	Description
	Logical drive
	Logical drive with healthy hot spare
	Logical drive being initialized
	Logical drive being modified
	Logical drive being rebuilt after disk drive failure

## Revealing More Device Information

You can reveal more information about disk drives and logical drives by using the View buttons (circled below) to change what information displays.

**Note:** Not all views are available for all components.

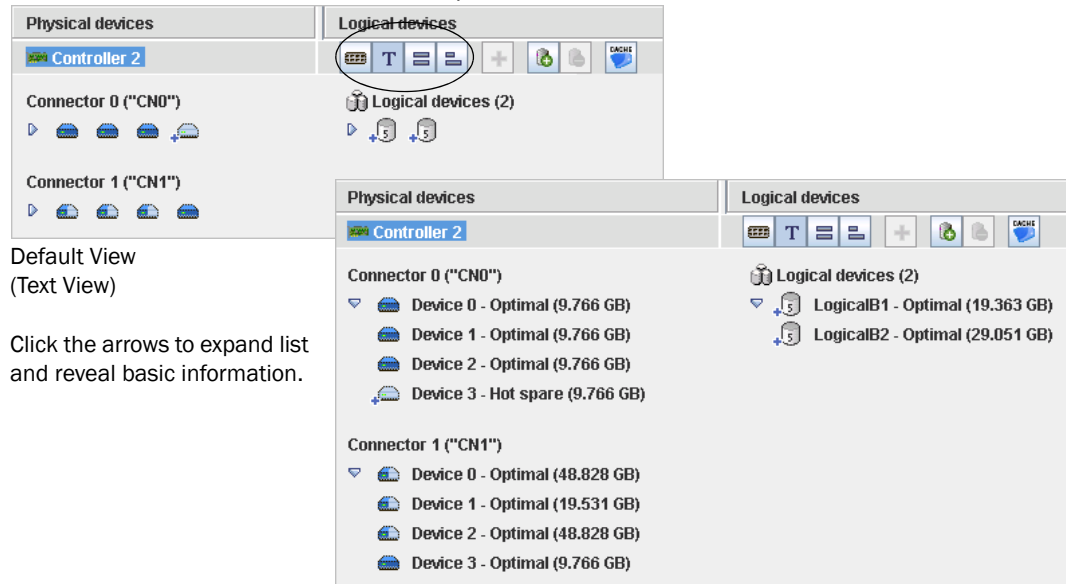


Default View  
(Text View)


Click the arrows to expand list  
and reveal basic information.




Click this button to see the size capacities of your disk drives. Disk drives or segments of disk drives that are included in logical devices are shaded brown.

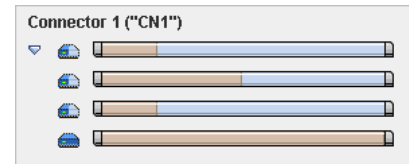

Click this button to see the size capacities of your disk drives relative to each other.

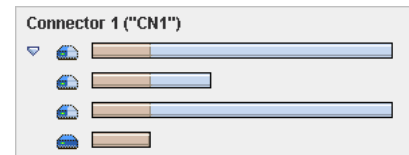

If your controller is connected to an enclosure, click this button to see all the disk drives in the enclosure.  
**Note:** Not all enclosures are supported by Adaptec Storage Manager. Unsupported enclosures do not appear in the Enclosure View.

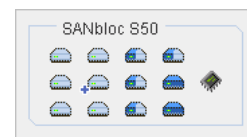


## Checking System Status from the Main Window


Adaptec Storage Manager includes an event log for at-a-glance system status and activity information. The event log provides status information and messages about activity (or *events*) occurring in your storage space. Double-click any event to see more information in an easier-to-read format.

	Date	Time	Source	Description
ⓘ	12/18/2007	02:21:35 PM PST	bou2287a.adapte...	Build/Verify complete: controller 2, logical device 1 ("LogicalB2").
ⓘ	12/18/2007	02:21:29 PM PST	bou2287a.adapte...	Build/Verify complete: controller 2, logical device 0 ("LogicalB1").
ⓘ	12/18/2007	02:20:45 PM PST	bou2287a.adapte...	Building/Verifying: controller 2, logical device 1 ("LogicalB2").
ⓘ	12/18/2007	02:20:45 PM PST	bou2287a.adapte...	Building/Verifying: controller 2, logical device 0 ("LogicalB1").
ⓘ	12/18/2007	02:20:45 PM PST	bou2287a.adapte...	Added logical device: controller 2, logical device 1 ("LogicalB2").

Warning- and Error-level icons, shown at right, appear next to components (such as systems and logical drives) affected by a failure or error, creating a trail, or *rapid fault isolation*, that helps you identify the source of a problem when it occurs. See [Identifying a Failed or Failing Component on page 137](#) for more information.

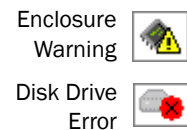

If your storage space includes a controller with a temperature sensor, or an enclosure with an enclosure management device, such as a SCSI Accessed Fault-Tolerant Enclosure (SAF-TE) processor, temperature, fan, and power module status is displayed by status icons in the Physical Device view, as shown in the next figure. These status icons change color to indicate status (see [page 107](#)).

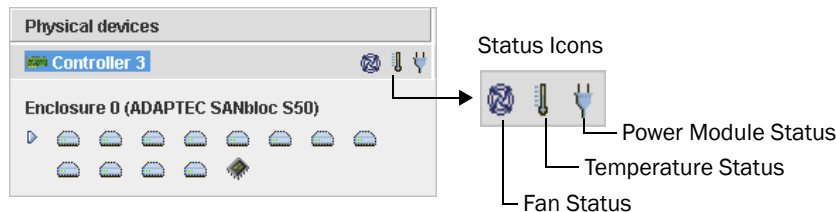

For more information, see [Monitoring Status and Activity on page 104](#).

**Note:** By default, all Warning- and Error-level events activate an audible alarm. See [Testing and Silencing System and Enclosure Alarms on page 96](#) for more information.

## Getting Help

Adaptec Storage Manager online Help includes conceptual information, glossary definitions, and descriptions of on-screen menus and items, in addition to step-by-step instructions for completing tasks.

To open the online Help, click the **Help** button (shown at right). Alternatively, press the F1 key, or in the menu bar select **Help**, then click **Search** or **Contents**.




Press the **Help** button in a dialog box or wizard for help with that specific dialog box, window, or procedure.

Additionally, you can find the most commonly asked-about information in [Quick Answers to Common Questions... on page 162](#) of this *User's Guide*.

## Logging Out of Adaptec Storage Manager

To log out of Adaptec Storage Manager:

- 1 In the Enterprise View, click on the local system.
- 2 In the menu bar, select **Actions**, then click **Log out**.

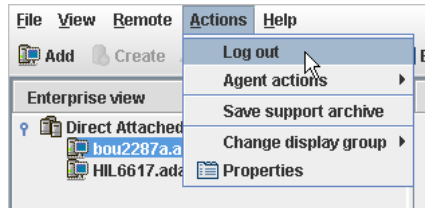

You are logged out of Adaptec Storage Manager.

### Logging Back In

To log in to Adaptec Storage Manager:

- 1 In the Enterprise View, click on the local system.
- 2 In the menu bar, select **Actions**, then click **Log in**.
- 3 Enter your user name and password, then click **Connect**.

## Uninstalling Adaptec Storage Manager

To uninstall Adaptec Storage Manager, follow the instructions for your operating system.

### Uninstalling From Windows Systems

To uninstall Adaptec Storage Manager from a Windows system, use the Add or Remove Programs tool in the Control Panel. All Adaptec Storage Manager components are uninstalled.

### Uninstalling From Linux Systems

To uninstall Adaptec Storage Manager from a Linux system, type this command:

```
rpm --erase StorMan
```

Adaptec Storage Manager is uninstalled.

### Uninstalling From Solaris Systems

To uninstall Adaptec Storage Manager from a Solaris system, type this command:

```
pkgrm StorMan
```

Adaptec Storage Manager is uninstalled.

## Uninstalling From FreeBSD Systems

To uninstall Adaptec Storage Manager from a FreeBSD system, type this command:

```
pkg_delete Storman-x.x.x-x86 or pkg_delete Storman-x.x.x-amd64
```

where x.x.x is the package version.

Adaptec Storage Manager is uninstalled.

## Uninstalling From VMware Systems

To uninstall Adaptec Storage Manager from a VMware system, type this command:

```
rpm --erase StorMan
```

Adaptec Storage Manager is uninstalled.

---

# Protecting Your Data

# 5

## In this chapter...

Creating and Managing Hot Spares .....	55
Enabling Copyback .....	58

In addition to the standard (RAID 0, RAID 1, RAID 5, RAID 10, RAID 50) and enhanced (RAID 1E, RAID 5EE, RAID 6, RAID 60) RAID levels, controllers with the Adaptec Advanced Data Protection Suite include additional methods of protecting the data on your storage space.

This chapter describes how to use hot spares and copyback to protect your stored data.

## Creating and Managing Hot Spares

A *hot spare* is a disk drive or SSD (Solid State Drive) that automatically replaces any failed drive in a logical drive, and can subsequently be used to rebuild that logical drive. (For more information on recovering from a disk drive failure, see [page 138](#).)

### Hot Spare Limitations

- You can't create a hot spare for RAID 0 logical drives, simple volumes, or spanned volumes.
- You can't create a hot spare from a disk drive that is already part of a logical drive.
- You should select a disk drive that is at least as big as the largest disk drive it might replace.
- We recommend that you *not* designate a SAS hot spare for a logical drive comprising SATA disk drives, or a SATA hot spare for a logical drive comprising SAS disk drives.

### Dedicated Spare or Global Spare?

A *global* hot spare is not assigned to a specific logical drive and will protect any logical drive on the controller (except RAID 0 logical drives). You can designate a global hot spare before or after you build logical drives on a controller; you can also designate a global hot spare while you're creating a logical drive. To designate a global hot spare, see [page 55](#).

A *dedicated* hot spare is assigned to one or more specific logical drives and will only protect those logical drives. (A dedicated hot spare that has been assigned to protect more than one logical drive is called a *pool* spare.) You must create the logical drive before you can assign a dedicated hot spare. To assign a dedicated hot spare or pool hot spare, see [page 56](#).


### Designating a Global Hot Spare

This section describes how to designate a global hot spare before or after you build a logical drive.

**Note:** To designate a global hot spare while you're creating a logical drive, see [Step 7 on page 39](#).

To designate a global hot spare:

- 1 In the Enterprise View, click the controller on which you want a global hot spare.
- 2 In the Physical Devices View, click the disk drive or SSD you want to designate as a hot spare. (See [Hot Spare Limitations](#) for help selecting a disk drive.)
- 3 Click the **Create global hot-spare drive** button.

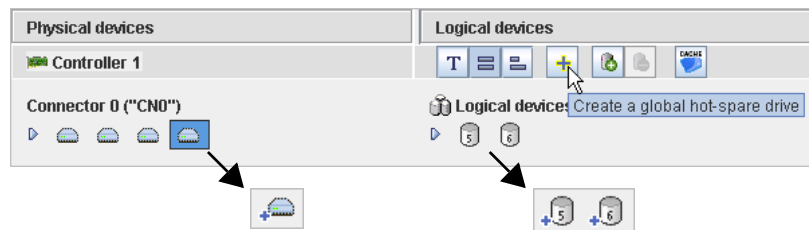

A plus sign appears beside the selected drive, indicating that it's designated as a hot spare. (A yellow plus sign indicates an error. See [What Do the Hot Spare Icons Mean? on page 56](#) for help solving the problem.) A plus sign also appears beside each existing logical drive.

Any other logical drives created on the controller will automatically be protected by that global hot spare.


## Assigning a Dedicated Hot Spare or Pool Hot Spare

A dedicated hot spare is assigned to one or more specific logical drives. (A dedicated hot spare that has been assigned to protect more than one logical drive is called a *pool* hot spare.)

**Note:** You must create the logical drive before you can assign a dedicated hot spare.

To assign a dedicated or pool hot spare:

- 1 In the Enterprise View, click the controller on which you want a dedicated hot spare.
- 2 In the Physical Devices View, click the disk drive or SSD you want to designate as a hot spare. (See [Hot Spare Limitations on page 55](#) for help selecting a disk drive.)
- 3 In the menu bar, select **Actions**, then click **Create dedicated hot-spare drive for**, then click the name of the logical drive (in this example, Device 1).

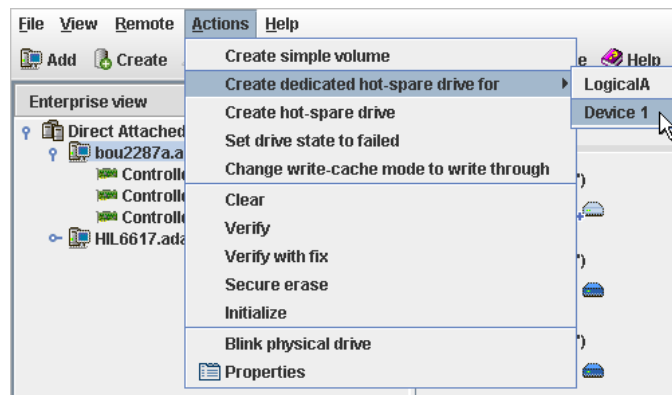

A plus sign appears beside the selected disk drive, indicating that it's designated as a dedicated hot spare. (A yellow plus sign indicates an error. See [What Do the Hot Spare Icons Mean? on page 56](#) for help solving the problem.)

- 4 To use the same dedicated hot spare to protect another logical drive (create a pool hot spare), repeat [Step 2](#) and [Step 3](#).

## What Do the Hot Spare Icons Mean?

Icon	Explanation	Action
	Healthy global or dedicated hot spare	No action required.
	Error on hot spare: <ul style="list-style-type: none"> <li>● Hot spare is not assigned to any logical drives</li> <li>● Hot spare is too small to protect the logical drive(s) it's assigned to</li> <li>● Global hot spare was designated before any logical drives were built</li> </ul>	<ul style="list-style-type: none"> <li>● Create at least one logical drive on the same controller</li> <li>● Designate larger disk drive as hot spare</li> <li>● Create at least one logical drive on the same controller</li> </ul>
	Hot spare has been built into a logical drive after disk drive failure	Designate replacement or other available disk drive as new hot spare; remove 'hot spare' designation from disk drive (see <a href="#">Removing or Deleting a Dedicated Hot Spare</a> )




## Removing or Deleting a Dedicated Hot Spare

You can delete a dedicated hot spare or remove it from a logical drive. You may want to do this to:

- Make disk drive space available for another logical drive.
- Make a dedicated hot spare into a global hot spare.
- Remove the 'hot spare' designation from a disk drive that is no longer being used as a hot spare. (When a hot spare is built into a logical drive after a disk drive failure, it retains its 'hot spare' designation even though it can no longer protect the logical drives it's assigned to. See [Recovering from a Disk Drive Failure on page 138](#) for more information.)

To remove or delete a dedicated hot spare:

- 1 In the Enterprise View, click the controller associated with the hot spare.
- 2 In the Physical Devices View, click the hot spare.
- 3 In the menu bar, select **Actions**, then click **Delete dedicated hot-spare drive**, or click **Remove dedicated hot-spare drive from**, then select the logical drive you want (in this example, Device 1).

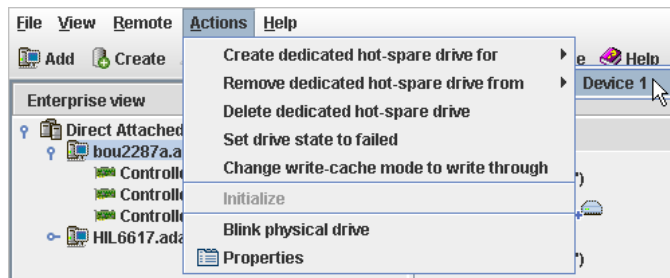

The hot spare is deleted or removed, and the disk drive becomes available for other uses in your storage space.

## Deleting a Global Hot Spare


You can delete a global hot spare. You may want to do this to:

- Make disk drive space available for another logical drive.
- Make a global hot spare into a dedicated hot spare.
- Remove the 'hot spare' designation from a disk drive that is no longer being used as a hot spare. (When a hot spare is built into a logical drive after a disk drive failure, it retains its 'hot spare' designation even though it can no longer protect the logical drives it's assigned to. See [Recovering from a Disk Drive Failure on page 138](#) for more information.)

To remove or delete a dedicated hot spare:

- 1 In the Enterprise View, click the controller associated with the hot spare.
- 2 In the Physical Devices View, click the hot spare.

- 3 In the menu bar, select **Actions**, then click **Delete hot-spare drive**.

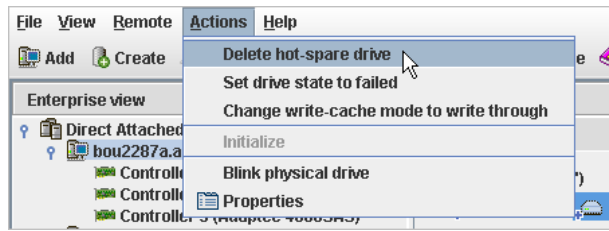


The hot spare is deleted and the disk drive becomes available for other uses in your storage space.

## Enabling Copyback

When a logical drive is rebuilt using a hot spare (see [page 138](#)), data from the failed drive is transferred to the hot spare. When *copyback* is enabled, data is moved back to its original location once the controller detects that the failed drive has been replaced. Once the data is copied back, the hot spare becomes available again.

To enable or disable copyback, in the Enterprise View, right-click the controller, then click **Enable or Disable copy back mode**. (The copyback setting is a toggle switch.)

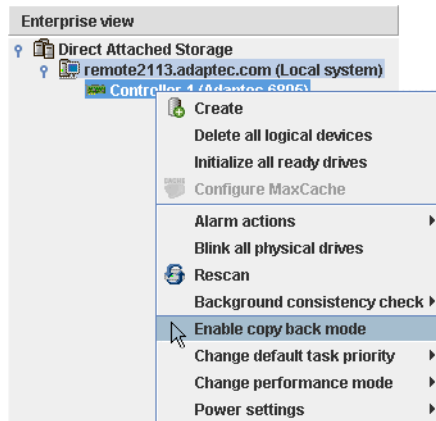

# Modifying Your Direct Attached Storage

# 6

**In this chapter...**

- Understanding Logical Drives ..... 60
- Creating and Modifying Logical Drives ..... 61
- Fine-tuning Logical Drives ..... 64
- Optimizing Logical Drive Performance ..... 67
- Verifying Logical Drives ..... 68
- Increasing the Capacity of a Logical Drive..... 70
- Changing the RAID Level of a Logical Drive ..... 72
- Deleting a Logical Drive..... 72
- Creating a RAID Volume ..... 73
- Creating a JBOD Disk ..... 75
- Maintaining an Energy-Efficient Storage Space ..... 76
- Configuring maxCache Read Caching ..... 80


This chapter explains how to create and modify logical drives, optimize logical drive performance, and use Adaptec Storage Manager’s power management features to maintain an energy-efficient storage space.

## Understanding Logical Drives

A logical drive is a group of physical disk drives that appears to your operating system as a single drive that can be used for storing data.

A logical drive can comprise one or more disk drives and can use part or all of each disk drive's capacity.

It is possible to include the same disk drive in two different logical drives by using just a portion of the space on the disk drive in each, as shown in the following figure.

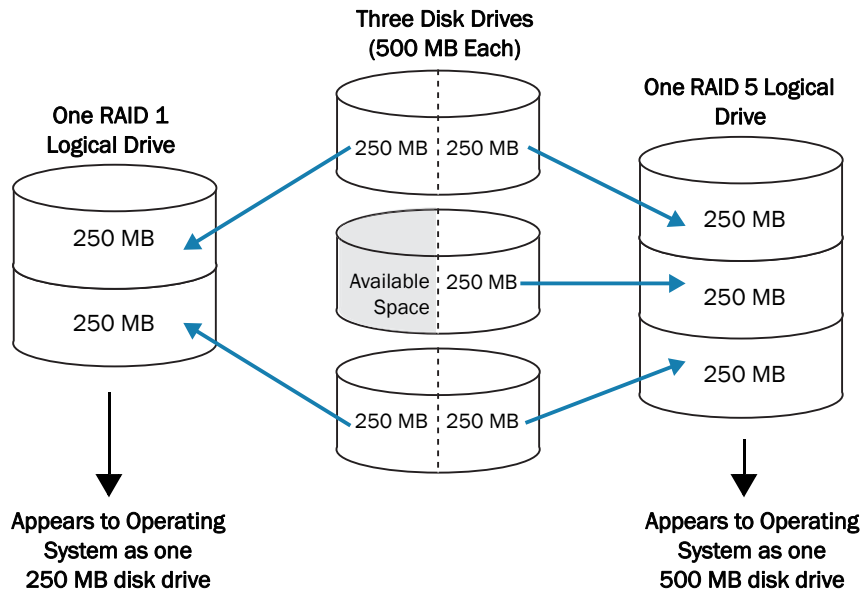

Disk drive space that has been assigned to a logical drive is called a *segment*. A segment can include all or just a portion of a disk drive's space. A disk drive with one segment is part of one logical drive, a disk drive with two segments is part of two logical drives, and so on. A segment can be part of only one logical drive. When a logical drive is deleted, the segments that comprised it revert to available space (or *free segments*).

A logical drive can include redundancy, depending on the RAID level assigned to it. (See [Selecting the Best RAID Level on page 153](#) for more information.)

Once a logical drive has been created, you can change its RAID level or increase its capacity to meet changing requirements. You can also protect your logical drives by assigning one or more hot spares to them. (See [page 55](#) for more information.)

## Creating and Modifying Logical Drives

For basic instructions for creating logical drives, see [Building Your Storage Space on page 25](#).

This section describes three additional scenarios for creating logical drives, and provides instructions for modifying a logical drive as it's being created.

- To create a new logical drive of a specified size, see the following section.
- To create a logical drive from different-sized disk drives, see [page 62](#).
- To create a logical drive using available *segments* of disk drives, see [page 63](#).
- To stop the creation of a new logical drive, see [page 63](#).
- To change the priority of a new logical drive's creation, see [page 63](#).

**Note:** Adaptec Storage Manager allows you to combine hard drives and SSDs in a RAID 1 or RAID 10 logical drive. This type of logical drive is called *hybrid RAID*. Hybrid RAID improves performance by sending read operations to the fastest path first—the SSD. For a Hybrid RAID10 you must select an equal number of SSDs and HDDs in “every other drive” order, that is: SSD—HDD—SSD—HDD, and so on. You can use any SSD (or available segment) when creating or modifying a hybrid RAID drive, unless it is part of the maxCache pool. For more information, see [Configuring maxCache Read Caching on page 80](#).

### Creating a Logical Drive of a Specified Size

As described in [Step 7 on page 39](#), Adaptec Storage Manager automatically sets the size of a new logical drive to maximize the capacity of the disk drives that it comprises. However, you can choose to set the size for a new logical drive. You may want to do this to maximize your available disk drive space, or allocate available space to more than one logical drive.

To set the size of a logical drive:

- 1 Complete Steps 1 through 7 in [Custom Configuration \(Advanced\) on page 37](#).

- 2 Click **Advanced Settings**.

The maximum size of the logical drive appears in the Size (GB) box.

- 3 Enter the new size for the logical drive. The size you enter must be less than or equal to the maximum size.
- 4 Click **Next**.
- 5 Review the logical drive settings, click **Apply**, then click **Yes**.

Adaptec Storage Manager builds the logical drive. The configuration is saved in the Adaptec controller and in the physical drives.

If the disk drives you used to create this logical drive have available space left over, you can use them to create a new logical drive (see [page 63](#)), or to expand an existing logical drive (see [page 70](#)).


## Including Different-sized Disk Drives in a Logical Drive

You can combine disk drives of different sizes in the same logical drive. If the logical drive includes redundancy, however, the size of each segment can be no larger than the size of the smallest disk drive. (See [Selecting the Best RAID Level on page 153](#) for more information about redundancy.)


**Note:** We recommend that you *not* combine SAS and SATA disk drives within the same logical drive. Adaptec Storage Manager generates a warning if you try to create a logical drive using a combination of SAS and SATA disk drives.

To create a logical drive with disk drives of different sizes, follow the instructions in [Building Your Storage Space on page 25](#).

When the logical drive is created, it appears similar to the example in the next figure, where a RAID 5 logical drive includes two disk drives of one size and two of another—the disk drive icons indicate that the two larger disk drives still have available space.

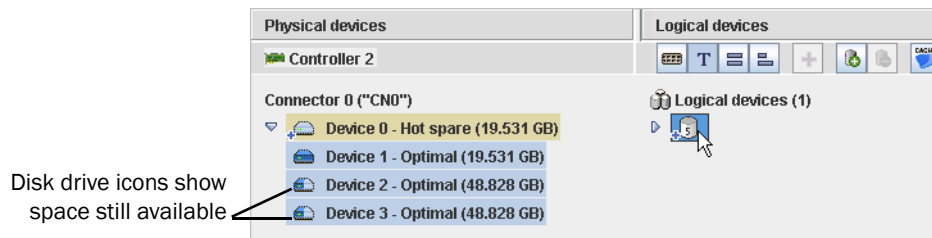

The Full Size Capacity View of the same RAID 5 logical drive shows that the larger disk drives still have available space (free segments, indicated in light-blue) that is not part of a logical drive. It also shows that the disk drive designated as a hot spare is large enough to replace any of the disk segments included in the logical drive.

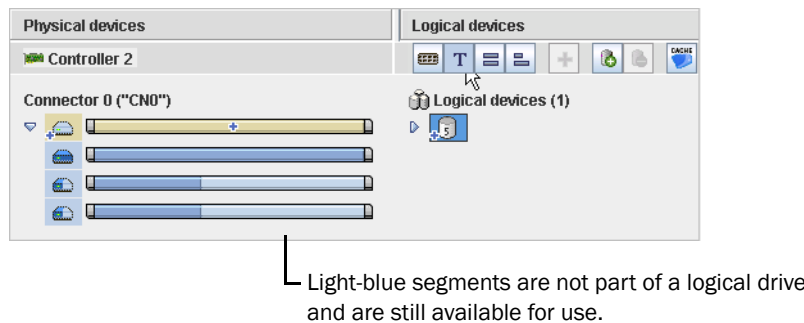

You can include a disk drive's available space in a new logical drive (see [page 63](#)), or add it to an existing logical drive (see [page 70](#)).

## Creating a Logical Drive Using Available Segments


Free segments on a disk drive can be used to create a new logical drive. (Each segment can only be used in one logical drive at a time.)

To create a logical drive using free segments on disk drives:

- 1 Complete Steps 1 through 5 in *Custom Configuration (Advanced)* on page 37.
- 2 In the Physical Devices panel, select the disk drives and/or free disk drive segments you want to use in the logical drive.

**Note:** We recommend that you *not* combine SAS and SATA disk drives within the same logical drive. Adaptec Storage Manager generates a warning if you try to create a logical drive using a combination of SAS and SATA disk drives.

In this example, two free segments of larger disk drives are combined with smaller disk drives to create a RAID 5 logical drive.

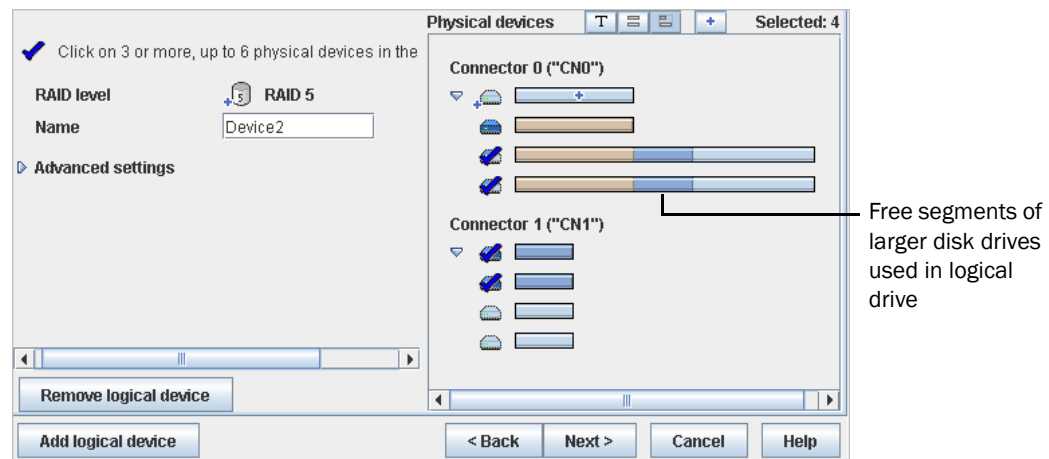

- 3 Click Next.
- 4 Review the logical drive settings.
- 5 Click **Apply**, then click Yes.

Adaptec Storage Manager builds the logical drive. The configuration is saved in the Adaptec controller and in the physical drives.

## Stopping the Creation of a Logical Drive

To stop the creation of a new logical drive, right-click the magnifying glass icon (shown at right), then select **Stop current task**.



## Changing the Priority of the Creation of a Logical Drive

To change the priority of the creation of a logical drive to High, Medium, or Low, right-click the magnifying glass icon, then select **Change background task priority**.

**Note:** To set the default priority for all tasks on the same controller, see *Setting a Controller's Default Task Priority* on page 95.

## Fine-tuning Logical Drives

You can fine-tune a new or existing logical drive to meet your needs by changing its name or adjusting the Advanced settings described in this section. (Not all options are available for all controllers or all RAID levels.)

### Renaming a Logical Drive

To change the name of a logical drive:

- 1 In the Enterprise View, click the controller associated with the logical drive.
- 2 In the Logical Devices View, click the logical drive.
- 3 In the menu bar, select **Actions**, then click **Change logical device name**.
- 4 Type the new name, then click **OK**.

The logical drive is updated with its new name.

### Adjusting a Logical Drive's Advanced Settings

**Note:** The default settings in Adaptec Storage Manager are optimal for most users and storage spaces. Only advanced users should change the settings described in this section.

To fine-tune a logical drive:

- 1 Open the list of Advanced settings.
 

If you are creating a *new* logical drive, follow the instructions in [Step 7 on page 39](#).

If you are modifying an *existing* logical drive:

  - a In the Enterprise View, click the controller associated with the logical drive.
  - b In the Logical Devices View, click the logical drive.
  - c In the menu bar, select **Actions**, then click **Expand or change logical device** (shown in the figure in [Step 3 on page 64](#)).
  - d Click **Next**, then click **Advanced settings**.
- 2 Modify the available settings as required for your logical drive (not all options are available for all controllers or all RAID levels):
  - Logical drive size (see [page 61](#))
  - Stripe size (see [page 65](#))
  - Write cache (see [page 65](#))
  - Read cache (see [page 65](#))
  - Initialize priority (see [page 66](#))
  - Initialize method (see [page 66](#))
  - maxCache Read cache (see [page 80](#))
- 3 Click **Next**.
- 4 To apply the changes immediately, click **Apply**.



To schedule the changes for later, click **Schedule**, then set the date and time. (For more information, see [Scheduling a Task on page 83](#).)

## Changing the Stripe Size

The *stripe size* is the amount of data (in KB) written to one partition before the controller moves to the next partition in a logical drive.

Stripe size options vary, depending on your controller. Normally, the default stripe size provides the best performance.

For RAID 6 and RAID 60 logical drives, the more disk drives there are in the logical drive, the fewer the stripe size options.

## Changing the Write Cache Setting

The *write cache* setting determines when data is stored on a disk drive and when the controller communicates with the operating system.

- **Disabled (write-through)**—The controller sends (or *writes*) the data to a disk drive, then sends confirmation to the operating system that the data was received. Use this setting when performance is less important than data protection.
- **Enabled (write-back)**—The controller sends confirmation to the operating system that the data was received, then writes the data to a disk drive. Use this setting when performance is more important than data protection and you aren't using a battery-backup cache or zero-maintenance cache protection module. *Enabled* is the default setting.
- **Enabled (write-back) when protected by battery/ZMM**—Similar to Enabled (write-back), but used when the controller is protected by battery backup or a zero-maintenance cache protection module. For more information about battery backup and zero-maintenance cache protection, see the *Adaptec RAID Controller Installation and User's Guide*.

**Note:** (RAID 10, 50, and 60 only) All logical drives within a RAID 10/50/60 logical drive must have the same write cache setting—either all write-through or all write-back.

To quickly change the write cache setting:

- 1 Click the logical drive you want.
- 2 In the menu bar, select **Actions**, click **Configure write cache**, then select **Enabled**, **Enabled (protected by battery/ZMM)**, or **Disabled** as required.

The write cache setting is changed.

## Changing the Read Cache Setting

When *read caching* is enabled, the controller monitors the read access to a logical drive and, if it sees a pattern, pre-loads the cache with data that seems most likely to be read next, increasing performance.

- **Enabled**—The controller transfers data from the logical drive to its local cache in portions equal to the stripe size. Use this setting for the best performance when workloads are steady and sequential. *Enabled* is the default setting.
- **Disabled**—The controller transfers data from the logical drive to its local cache in portions equal to the system I/O request size. Use this setting for the best performance when

workloads are random or the system I/O requests are smaller than the stripe size. (For more information about system I/O requests, refer to your operating system documentation.)

**Note:** To improve performance in read-intensive applications, use the maxCache-compatible Solid State Drives (SSD) in your system as a fast read cache pool. For more information, see [Configuring maxCache Read Caching on page 80](#).

To quickly change the read cache setting:

- 1 Click the logical drive you want.
- 2 In the menu bar, select **Actions**, click **Configure read cache**, then select **Enabled** or **Disabled** as required.

The read cache setting is changed.

## Changing the Initialize Priority

The Initialize Priority setting determines the priority for the initialization of the logical drive. The default setting is *High*, which means that the logical drive is initialized as quickly as possible.

## Changing the Initialize Method

The Initialize Method setting determines how a logical drive is *initialized* (prepared for reading and writing), and how long initialization will take. The settings are presented in order of slowest to fastest method.

- **Build**—(slowest) For RAID 1 logical drives, data is copied from the primary drive to the mirror drive; for RAID 5 logical drives, parity is computed and written. *Build* is the default setting for most logical drives (see *Quick* method below).

Adaptec Storage Manager performs build initializations in the background; you can use the logical drive immediately.

- **Clear**—Every block in the logical drive is overwritten with zeros, removing all existing data. You can't use the logical drive until the initialization is complete.
  - **Quick**—(fastest) The logical drive is made available immediately. *Quick* is the default setting for RAID 1, RAID 1EE, and RAID 10 logical drives. It is recommended for use only with new drives.
  - **Skip Init**—Reconstructs the logical drive metadata without modifying or destroying other data on the disks. Useful for recovering data when multiple drives fail in the same logical drive. See [page 140](#) for more information.
-

## Optimizing Logical Drive Performance


To ensure optimal performance of the logical drives in your storage space, you can select a *performance mode* to improve I/O throughput based on the needs of your application. (This feature is not supported on all controllers.) The following application-specific performance modes are supported by Adaptec Storage Manager.

Performance Mode	Performance Criteria	Best Performance
<b>Dynamic</b> (default)	<ul style="list-style-type: none"> <li>Automatically adjusts criteria based on controller usage, RAID level, and disk drive type</li> </ul>	—
<b>Online Transaction Process (OLTP)/ Database</b> —a system that facilitates and manages transaction-oriented applications, such as data entry and retrieval applications.	<ul style="list-style-type: none"> <li>100% Random</li> <li>60%–80% Read</li> <li>20%–40% Write</li> <li>8Kb Blocks</li> </ul>	SAS: <ul style="list-style-type: none"> <li>R0 Sequential writes (all request sizes)</li> <li>R0 File server and Web server</li> <li>R5 Sequential writes (all request sizes)</li> <li>R5 Web server</li> <li>R6 Web server</li> <li>R10 Sequential writes</li> <li>R10 Web server</li> </ul> SATA: <ul style="list-style-type: none"> <li>R0 Sequential reads (all request sizes)</li> <li>R0 Sequential writes (all request sizes)</li> <li>R0 File/print server</li> <li>R5 Sequential writes (256Kb request size)</li> <li>R5 Random writes</li> <li>R6 Sequential writes (all request sizes)</li> <li>R10 Sequential writes (all request sizes)</li> <li>R10 Workstation</li> </ul>
<b>Big Block Bypass</b>	<ul style="list-style-type: none"> <li>Bypasses DRAM write cache based on IO write size</li> <li>Adjusts stripe size flush for simple volumes to 128K minimum</li> </ul>	Optimizes performance for Web servers, file servers, and databases

To select a performance mode for the logical drives on a controller:

- 1 In the Enterprise View, select the controller you want.

- 2 In the menu bar, select **Actions**, click **Change performance mode**, then select an application type.

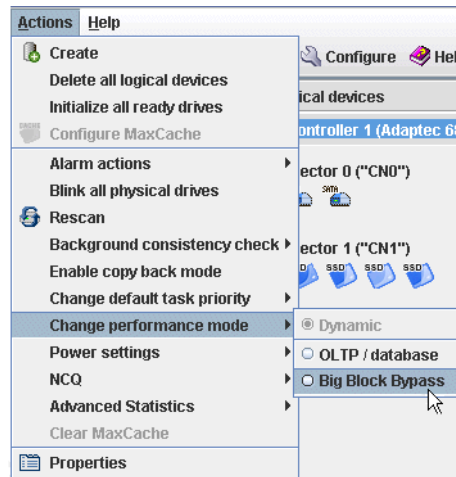

- 3 Shutdown Adaptec Storage Manager and reboot the system.

**Note:** You *must* reboot the system before the performance mode setting takes effect.

## Verifying Logical Drives

To ensure that there are no data problems on your logical drives, it is important to *verify* them. When you verify a logical drive, Adaptec Storage Manager checks it for inconsistent or bad data and then fixes any problems. (You can also choose to verify a logical drive without fixing it.)

Logical drives without redundancy (for instance, RAID 0 logical drives) do not need to be verified.

In Adaptec Storage Manager, logical drive verification can occur in different ways, depending on your controller:

- **Automatic verification**—If your controller supports build initialization, Adaptec Storage Manager automatically verifies all new redundant logical drives. No manual verification is required.

To see if your controller supports build initialization, right-click the controller in the Enterprise View and click **Properties**.

- **Manual verification**—If your controller doesn't support build initialization, a Warning-level event notice appears in the event log prompting you to verify a logical drive before you begin to use it. To verify a logical drive manually, see [Verifying and Fixing a Logical Drive on page 69](#).
- **Background verification**—If your controller supports background consistency check, Adaptec Storage Manager continually and automatically checks your logical drives once they're in use.

To see if your controller supports background consistency check, right-click the controller in the Enterprise View, then click **Properties**. To enable or disable background consistency check or to set the checking period, see [page 70](#).

**Note:** If your controller doesn't support background consistency check, we highly recommend that you verify your logical drives weekly, following the instructions in [Verifying and Fixing a Logical Drive on page 69](#).

## Verifying and Fixing a Logical Drive

**Note:** To verify a logical drive without fixing it, see [page 69](#).

While Adaptec Storage Manager verifies and fixes a logical drive, you can't complete any other tasks on the controller. Because the verification can take a long time to complete, you may want to schedule it as a task to be completed overnight or on a weekend.

To verify and fix a logical drive:

- 1 Ensure that no activity is taking place on the controller associated with the logical drive you want to verify and fix.
- 2 In the Enterprise View, click the controller.
- 3 In the Logical Devices View, click the logical drive.
- 4 In the menu bar, select **Actions**, then click **Verify with fix**.
- 5 To begin the verification immediately, click **Yes**.

To schedule the verification, click **Schedule**, then set the date and time. You can also choose to set the verification as a recurring task. (For more information on scheduling tasks, see [page 83](#).)

**Note:** Don't power off the system while the verification is in progress. If you do, the verification will stop.

While the verification is in progress, the logical drive is shown as an animated icon (as shown at right) to indicate that the task is in progress.



When the verification is complete, an event notice is generated in the local system's event log (and broadcast to other systems, if you have event notification set up—see [Notifying Users by Event Log Message About Status and Activity on page 108](#)).

You can now continue working on the controller.

## Verifying a Logical Drive (Without Fix)

**Note:** To verify *and fix* a logical drive, see [page 69](#).

While Adaptec Storage Manager verifies a logical drive, you can't complete any other tasks on the controller associated with that logical drive. Because verification takes a long time to complete, you may want to schedule it as a task to be completed overnight or on a weekend.

To verify a logical drive:

- 1 Ensure that no activity is taking place on the controller associated with the logical drive you want to verify and fix.
- 2 In the Enterprise View, click the controller.
- 3 In the Logical Devices View, click the logical drive.
- 4 In the menu bar, select **Actions**, then click **Verify**.
- 5 To begin the verification immediately, click **Yes**.

To schedule the verification for later, click **Schedule**, set the date and time, then click **Apply**. You can also set the verification to recur. (For more information on scheduling tasks, see [page 83](#).)

**Note:** Don't power off the system while the verification is in progress. If you do, the verification will stop.

While the verification is in progress, the logical drive is shown as an animated icon (as shown at right) to indicate that the task is in progress.



When the verification is complete, an event notice is generated in the local system's event log (and broadcast to other systems, if you have event notification set up—see [Notifying Users by Event Log Message About Status and Activity on page 108](#)).

You can now continue working on the controller.

## Enabling/Disabling Background Consistency Check

If your controller supports background consistency check, Adaptec Storage Manager continually and automatically checks your logical drives once they're in use. (To see if your controller supports background consistency check, right-click the controller in the Enterprise View, then click **Properties**.)

To enable or disable background consistency check:

- 1 In the Enterprise View, click the controller.
- 2 In the menu bar, select **Actions**, then click **Enable (Disable) background consistency check**.

The controller is updated with the new setting.

## Setting the Background Consistency Check Period

You can choose how often Adaptec Storage Manager checks for inconsistent or bad data on your logical drives and hot-spares.

To change the background consistency check period:

- 1 In the Enterprise view, select a controller.
- 2 Right-click **Background Consistency Check**, then select **Change period**.

The Change background consistency check period window opens.

- 3 Adjust the slider control from Very Slow (365 days) to Fast (10 days). Alternatively, in the New Period field, use the arrow keys to increase or decrease the setting.
- 4 Click **OK**.

## Increasing the Capacity of a Logical Drive

You can add more disk drive space to a logical drive to increase its capacity (or *expand* it).

**Note:** The maximum size of a logical drive varies by controller. Refer to your controller's documentation for more information.

The expanded logical drive must have a capacity that's greater than or equal to the original logical drive.

To increase the capacity of a logical drive:

- 1 In the Enterprise View, click the controller associated with the logical drive.
- 2 In the Logical Devices View, click the logical drive.
- 3 In the menu bar, select **Actions**, then click **Expand or change logical device** (shown in the figure in [Step 4 on page 69](#)).


A wizard opens to help you modify the logical drive.

- 4 Click **Next**.
- 5 Click on the disk drive(s) or disk drive segments you want to add to the logical drive.

**Note:** We recommend that you *not* combine SAS and SATA disk drives within the same logical drive. Adaptec Storage Manager generates a warning if you try to create a logical drive using a combination of SAS and SATA disk drives.

If you want to remove a specific disk drive or segment and replace it with another one (for instance, replace a smaller disk drive with a larger one), click on the disk drive you want to remove.

An X indicates that the selected disk drive will be removed from the logical drive, and you are prompted to select another disk drive (of greater or equal size) to replace it.

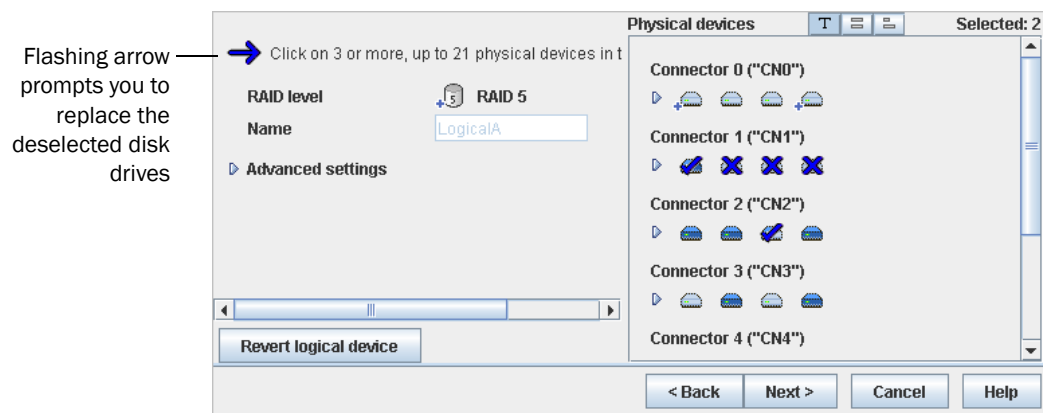

- 6 Modify the Advanced Settings, if required. (See [Fine-tuning Logical Drives on page 64](#).)
- 7 Click **Next**.
- 8 Review the new logical drive settings. To make changes, click **Back**.

**Note:** Some operating systems have size limitations for logical drives. Before you save the configuration, verify that the size of the logical drive is appropriate for your operating system.

- 9 To update your logical drive immediately, click **Apply**, then click **Yes**.

To schedule the changes for later, click **Schedule**, set the date and time, then click **Apply**. (For more information on scheduling tasks, see [page 83](#).)

## Extending a Partition on a Logical Drive

(*Windows 2003 only*) If you have expanded a logical drive, you can extend the partition on that logical drive to use the newly added space. Refer to your operating system instructions for more information.

## Changing the RAID Level of a Logical Drive

As your requirements change, you can change the RAID level of your logical drives to suit your needs. You may want to do this to add redundancy to protect your data, or improve data availability for speedier access to your data. See [Selecting the Best RAID Level on page 153](#) for more information.

Changing the RAID level normally requires one or more disk drives to be added to or removed from the logical drive. Adaptec Storage Manager won't allow you to continue unless you have the right number of disk drives available.

To change the RAID level of a logical drive:

- 1 In the Enterprise View, click the controller associated with the logical drive.
- 2 In the Logical Devices View, click the logical drive.
- 3 In the menu bar, select **Actions**, then click **Expand or change logical device** (see [page 71](#)).  
A wizard opens to help you change the RAID level.
- 4 Select a new RAID level, then click **Next**. Only valid options are offered.
- 5 In the Logical Devices panel, select the disk drives you want to use in the modified logical drive.

**Note:** We recommend that you *not* combine SAS and SATA disk drives within the same logical drive. Adaptec Storage Manager displays a warning if you try to create a logical drive using a combination of SAS and SATA disk drives.

Adaptec Storage Manager prompts you to select the correct number of disk drives.

If you want to remove a specific disk drive and replace it with another one (for instance, replace a smaller disk drive with a larger one), click on the disk drive you want to remove. An X indicates that the selected disk drive will be removed from the logical drive. (See the figure on [page 71](#) for an example.)


- 6 Modify the Advanced Settings, if required. (See [Fine-tuning Logical Drives on page 64](#).)
- 7 Click **Next**.
- 8 Review the new logical drive settings. To make changes, click **Back**.

**Note:** Some operating systems have size limitations for logical drives. Before you save the configuration, verify that the size of the logical drive is appropriate for your operating system.

- 9 To update your logical drive immediately, click **Apply**, then click **Yes**.

To schedule the changes for later, click **Schedule**, set the date and time, then click **Apply**. (For more information, see [page 83](#).)

## Deleting a Logical Drive

 **Caution:** When you delete a logical drive, you lose all data stored on that logical drive.

To delete a logical drive:

Ensure that you no longer need the data stored on the logical drive.

- 1 In the Enterprise View, click on the controller associated with the logical drive.
- 2 In the Logical Devices View, click the logical drive.



- 3 In the menu bar, select **Actions**, then click **Delete logical device**.
- 4 When prompted, click **Yes** to delete the device, or **No** to cancel the deletion.

If you click **Yes**, the logical drive is deleted. The disk drives or drive segments included in the logical drive become available, and can be used to create a new logical drive (see [page 63](#)), or to expand an existing logical drive (see [page 70](#)).

## Creating a RAID Volume


A RAID Volume comprises two or more logical drives connected end-to-end. The logical drives in a RAID Volume:

- Must be built using disk drives connected to the same controller.
- Must have the same RAID level assigned.
- Must not be striped together.
- May have equal or different capacities.

To build a RAID Volume:


- 1 Create two or more logical drives that meet the requirements listed at the beginning of this section, and wait for them to build and initialize. For instructions, see [Express Configuration: The Easy Way on page 34](#) or [Custom Configuration \(Advanced\) on page 37](#).

This example shows two RAID 5 logical drives, which can be used to build a RAID volume.

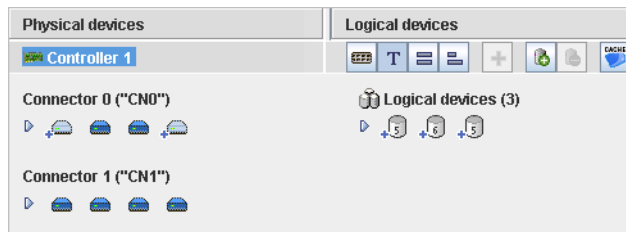

- 2 On the toolbar, click **Create**.
- 3 When the configuration wizard opens, select **Custom configuration...**, then click **Next**.
- 4 Click **Advanced settings**, select **RAID Volume**, then click **Next**.
- 5 In the Logical Devices panel, select the logical drives you want to use in the RAID Volume.


Adaptec Storage Manager prompts you to select the correct number of logical drives.

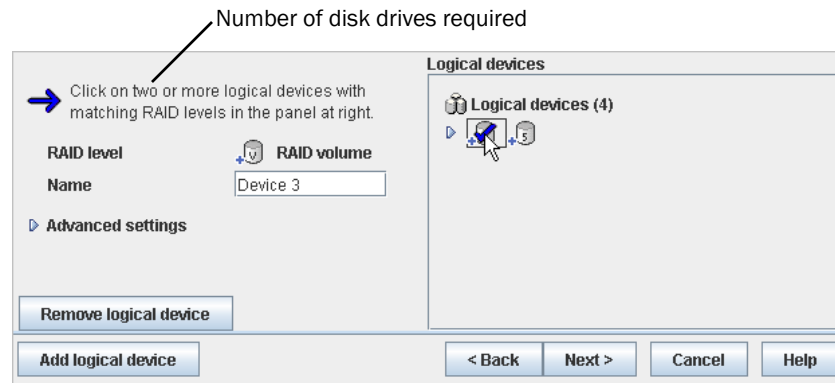

- 6 Modify the Advanced Settings, as needed. (See [Fine-tuning Logical Drives](#) on page 64 for more information.)


- 7 Click **Next** to review the RAID Volume settings. To make changes, click **Back**.

This example shows one RAID Volume ready to be created.

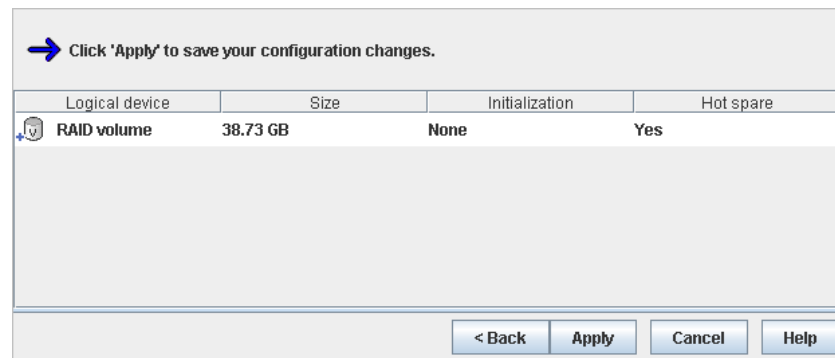

- 8 Click **Apply**, then click **Yes**.

Adaptec Storage Manager builds the RAID Volume. The configuration is saved on the Adaptec controller and on the physical drives. Adaptec Storage Manager replaces the individual logical drives with a single RAID Volume in the Logical Devices View.

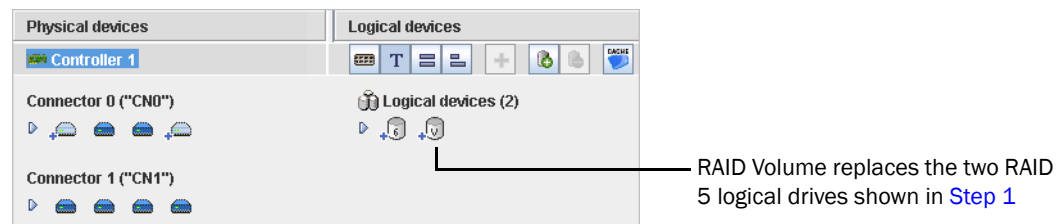

- 9 Partition and format your RAID Volume. See [page 36](#) for more information.

## Creating a JBOD Disk

You can create a JBOD disk from any Ready disk drive. A JBOD disk:

- Appears as a physical disk drive to the operating system.
- Is not redundant.
- Comprises all available disk space.
- Is not bootable (that is, you cannot boot the operating system from a JBOD).

To create a JBOD disk:

- 1 In the Physical Devices View, click a Ready disk drive.
- 2 In the menu bar, select **Actions**, then click **Create JBOD disk**.


Adaptec Storage Manager creates the JBOD disk.

## Creating multiple JBOD Disks in the Wizard

To make it easier to create multiple JBODs, you can use the wizard.


To create multiple JBODs in the wizard:

- 1 On the toolbar, click **Create**.
- 2 When the configuration wizard opens, select **Custom configuration...**, then click **Next**.
- 3 Click **Advanced settings**, select **JBOD disk**, then click **Next**.
- 4 In the Physical Devices panel, select the drives you want to use to create the individual JBOD disks.

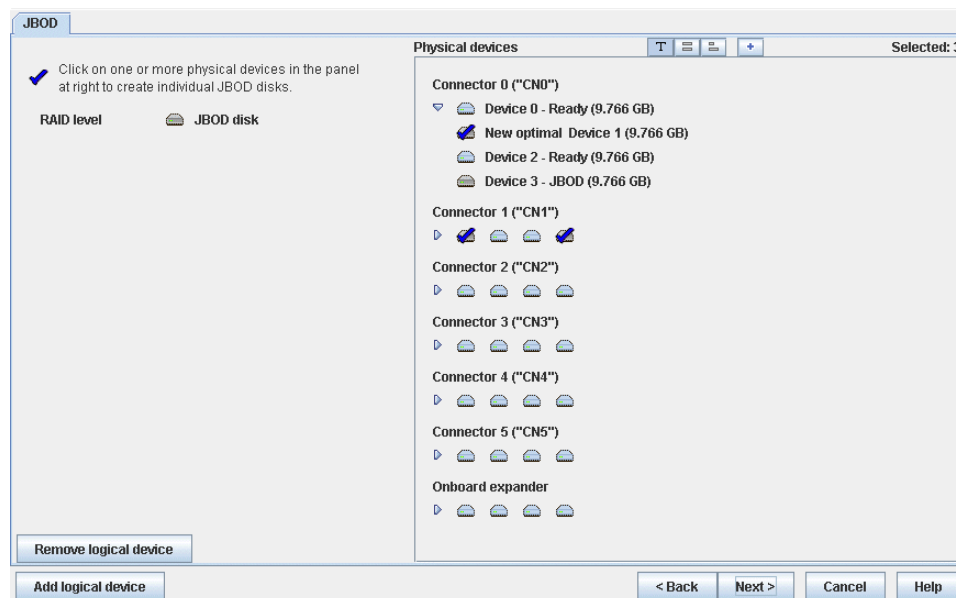

- 5 Click **Next** to review the JBOD disk settings. To make changes, click **Back**.

This example shows three JBOD disks ready to be created.

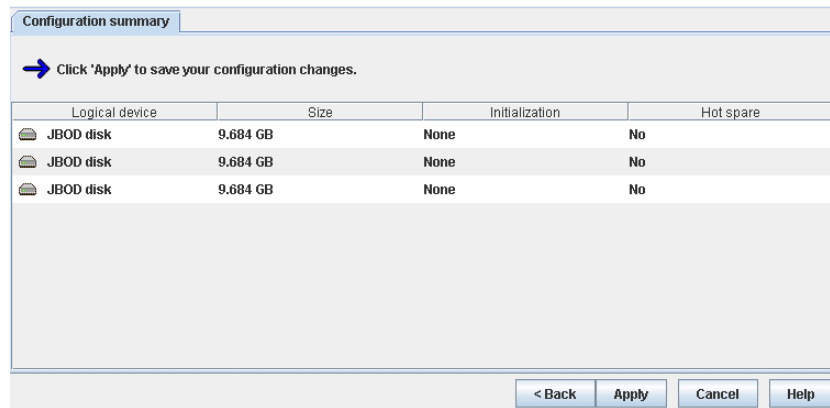

- 6 Click **Apply**, then click **Yes**.

Adaptec Storage Manager creates the JBOD disks.

## Converting a JBOD Disk to a Simple Volume


You can convert a JBOD disk to a simple volume. Unlike a JBOD, a simple volume is a true logical device. It comprises a single physical disk and is not redundant.

To convert a JBOD to a simple volume:

- 1 In the Physical Devices View, select a JBOD disk.
- 2 In the menu bar, select **Actions**, then click **Create simple volume**.

Adaptec Storage Manager converts the JBOD to a simple volume and displays the logical drive in the Logical Devices View.

## Deleting a JBOD Disk

 **Caution:** When you delete a JBOD disk, you lose all data stored on that disk.

To delete a JBOD disk:

- 1 In the Physical Devices View, click the JBOD disk.
- 2 In the menu bar, select **Actions**, then click **Delete JBOD disk**.

The disk drive becomes available, and can be used to create a new JBOD, logical drive (see [page 63](#)), or to expand an existing logical drive (see [page 70](#)).


## Maintaining an Energy-Efficient Storage Space

You can use power management in Adaptec Storage Manager to maintain an energy-efficient storage space. Power management of your storage space reduces cooling and electricity costs. It increases system stability due to lower heat dissipation. And it improves the quality of your work environment by reducing noise levels in your computer rooms and data centers.

This section describes how to configure power management for the logical drives and RAID controllers in your storage space. You can configure power management for an individual logical drive or for all logical drives on a controller.

- To configure power management for a logical drive, see the following section.
- To configure power management for a controller, see [page 78](#).
- To disable power management on a logical drive, see [page 79](#).
- To show devices under power management, see [page 79](#).

**Note:** To see if your controller supports power management, right-click the controller in the Enterprise View, then click **Properties**. The Power tab shows the power status of the device. (If the tab is not present, the device does not support power management.) You can check the power status in the Properties panel for controllers, logical drives, and physical drives. In the following example, a logical drive under power management is running at full power, indicating that its drives are operating at their peak spin rate.

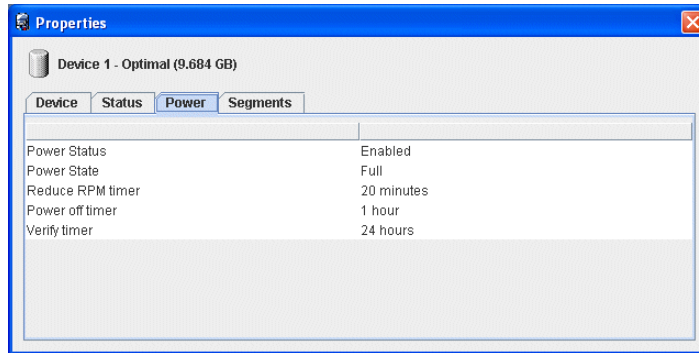

## Configuring Power Management for a Logical Drive

This section describes how to configure power management for an existing logical drive. You can also configure power management when you create a logical drive in the wizard (see [page 41](#)).


For each logical drive in your storage space, you can set a timer to lower disk drive spin rate (RPM), turn disk drives off, and check an inactive drive to verify its health.

**Caution:** We do not recommend enabling power management for logical drives with shared physical drives (logical drives that use segments of the same physical drives). Putting such logical drives under power management may limit the power savings benefit in your storage space.

To configure power management for a logical drive:

- 1 In the Logical Devices View, select a logical drive.
- 2 In the menu bar, select **Actions**, click **Power settings**, then click **Set timers**.

The logical drive power timers window opens:

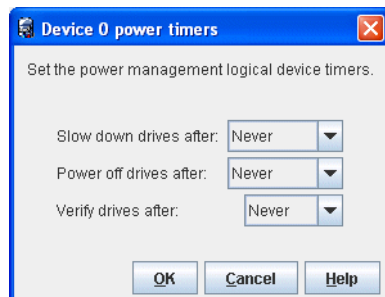

- 3 Select a value for each timer from the drop-down lists:
  - **Slow down drives after**—Period of inactivity, from 3 minutes to 3 hours, after which the drives' spin rate is lowered. The default is Never.

**Note:** For disk drives that do not support slow operation, set this timer to Never.

  - **Power off drives after**—Period of inactivity, from 3 minutes to 3 hours, after which the disk drives are turned off. The default is Never.
  - **Verify drives after**—Period of inactivity, from 1 hour to 24 hours, after which an inactive drive (a drive that's already powered down) is restarted and checked to verify its health. Once the check is completed, the drive is powered down and returns to its inactive state. The default is Never.
- 4 Click OK.

## Configuring Power Management for a Controller


The power management options for a controller affect all the logical drives on that controller. You can choose a “stay awake” period during which time the disk drives on the controller always spin at their peak rate. You can also set the spin-up limits for the controller—the maximum number of drives that the controller may spin up at the same time.

**Note:** The time you set for the stay awake period is relative to your local system time and time zone. To set the time zone for power management, you *must* use the controller BIOS utility. The time zone does not adjust automatically for daylight savings time. To compensate, you must adjust the stay awake period manually, either in the BIOS or with Adaptec Storage Manager. For more information, see the *Adaptec RAID Controller Installation and User's Guide*.

To set the stay awake period for disk drives:

- 1 In the Enterprise View, select a controller.
- 2 In the menu bar, select **Actions**, click **Power settings**, then click **Set stay awake settings**.

The Stay awake settings window opens:

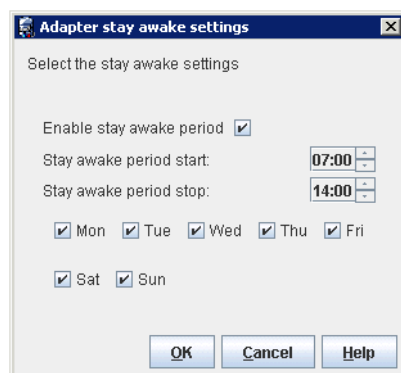


- 3 Select **Enable stay awake period**.
- 4 Enter the stay awake period start time and end time in 24-hour format; for example, 09:00 for 9AM, 14:00 for 2PM, and so on.
- 5 Select the days of the week to enforce the stay awake period. On days you do not select, the stay awake period is disabled and the spin rate is controlled by the power timer settings (see [page 77](#)).

- 6 Click OK.

To set the spin-up limits for disk drives:

- 1 In the Enterprise View, select a controller.
- 2 In the menu bar, select **Actions**, click **Power settings**, then click **Set spinup limits**.

The Adapter drive spinup limits window opens:

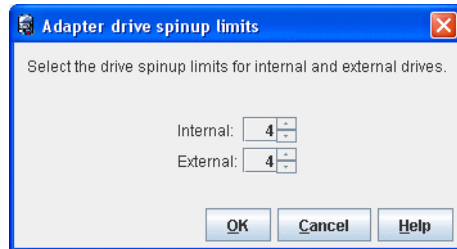

- 3 Enter the maximum number of internal disk drives that the controller may spin-up at the same time.
- 4 Enter the maximum number of external disk drives (drives in an enclosure, such as a JBOD) that the controller may spin-up at the same time.
- 5 Click OK.

## Disabling Power Management for a Logical Drive

You can disable power management for a logical drive. For example, you may choose to disable power management for the drives on a high-volume server, or a logical drive that needs to be highly available.

To disable power management for a logical drive:

- 1 In the Logical Devices View, click the logical drive.
- 2 In the menu bar, select **Actions**, click **Power settings**, then click **Disable**.

The logical drive is updated with the new setting.

## Re-Enabling Power Management for a Logical Drive

To re-enable the power management for a logical drive, repeat the steps in [Disabling Power Management for a Logical Drive on page 79](#), selecting **Enable** during [Step 2](#).

## Showing Devices Under Power Management

You can highlight the physical and logical drives under power management in the Adaptec Storage Manager GUI. Logical drives are shown in green if power management is enabled. Physical drives are shown in green if they are powered down (off).

In the menu bar, select **View**, then click **Show Power Management**. Adaptec Storage Manager highlights the devices under power management in the Physical Devices View and Logical Devices View:



To stop showing devices under power management, select **View** on the menu bar, then click **Show Power Management** again.

## Configuring maxCache Read Caching

Adaptec Storage Manager supports an advanced read caching technology called maxCache. Adaptec maxCache uses the Solid State Drives (SSDs) in your system as a fast read cache pool to improve performance in read-intensive applications.

With maxCache Read Caching enabled, the system analyzes IO traffic patterns and copies frequently read “hot” data to the SSD cache pool—the *maxCache pool*.

You can configure maxCache Read Caching only if you have one or more compatible Solid State Drives installed on the RAID controllers in your system. See [www.adaptec.com/compatibility](http://www.adaptec.com/compatibility) for a list of maxCache-compatible Solid State Drives.

**Note:** maxCache Read Caching is supported on Adaptec Series Q controllers only.

Adaptec Storage Manager assigns all compatible SSDs to the maxCache pool, by default. Use the following procedures to add or remove SSDs, to configure the maxCache flush and fetch rate, to enable maxCache read caching for a logical drive, and to clear the maxCache pool.

To check the status of the SSDs in the maxCache pool, including wear-level and longevity indicators, see [Working with Solid State Drives on page 92](#). To check maxCache statistics for a logical drive, see [Viewing Statistics on page 125](#).

To configure the maxCache pool:


- 1 In the Logical Devices View, click the **Configure MaxCache cache pool** button.



The Configure MaxCache Cache Pool window opens.



- 2 Select one or more SSDs in the Available SSDs list, then click **SSD >**.

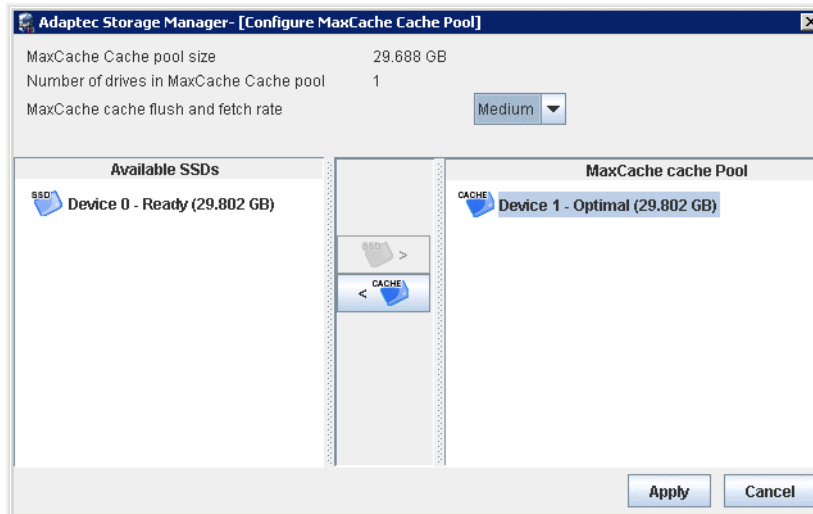

The SSD is added to the maxCache pool and the icon changes to indicate that it's part of the cache.



To remove a SSD from the cache, select one or more SSDs from the MaxCache Pool list, then click **< Cache**. The icon changes to indicate that the SSD is Ready.

- 3 Select the maxCache flush and fetch rate from the drop-down list: Low, Medium, High. (The default is Medium.)
- 4 Click **Apply**.

The Configure MaxCache Cache Pool window closes and the cache configuration is saved.

To enable/disable maxCache Read Caching for a logical drive:

- 1 In the Logical Devices View, select a logical drive.
- 2 In the menu bar, select **Actions**, click **Configure MaxCache**, then select **Enable/Disable MaxCache Read Caching**, as needed.

To clear the maxCache pool:

- 1 In the Enterprise View, select a controller.
- 2 In the menu bar, select **Actions**, then click **Clear MaxCache**.

The maxCache pool is cleared.

# Scheduling Recurring or Resource-Intensive Jobs

---

# 7

## In this chapter...

Scheduling a Task .....	83
Opening the Task Manager .....	84
Monitoring Tasks.....	85
Modifying a Task .....	86
Deleting a Task.....	86
Disabling the Task Manager.....	86

Adaptec Storage Manager allows you to schedule some types of jobs (or *tasks*) to complete at convenient times. Additionally, you can schedule some tasks to recur at preset times.

A Task Manager utility helps you manage the tasks you schedule.

This chapter describes how to schedule, monitor, and manage tasks.

## Scheduling a Task

If a task is lengthy and limits access to components on your storage space, you may want to set a date and time for the task to complete, instead of running the task while there is activity on your storage space.


If a task must be performed regularly, you can schedule it to recur at preset times.

You can schedule these Adaptec Storage Manager tasks:

- Expanding a logical drive
- Changing a logical drive's RAID level
- Modifying the stripe size of a logical drive
- Verifying a logical drive
- Verifying and fixing a logical drive

To schedule one of these tasks:


- 1 Complete each step of the task until you are prompted to click **Apply**. (*Don't click Apply.*)

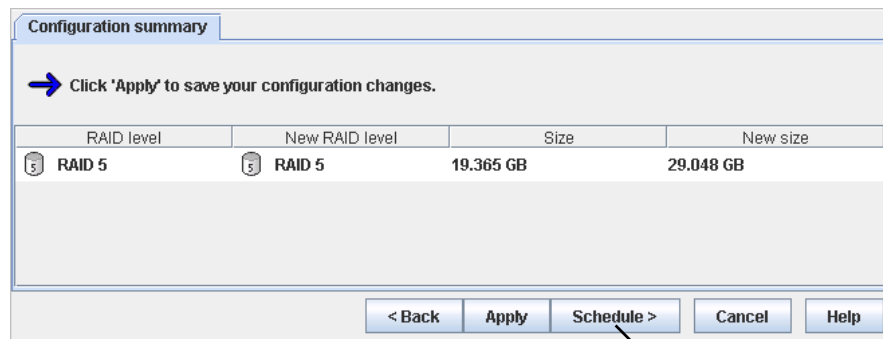

Schedule button

- 2 Click **Schedule**.

The schedule window opens. (The window you see may be different from the one shown in this example, depending on which type of task you are scheduling.)

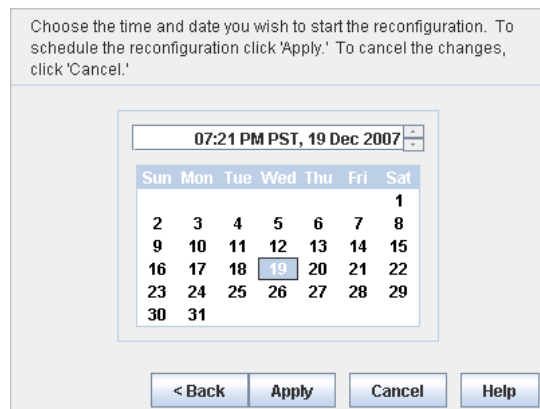

- 3 Set the date and time for the task.

**Note:** Keep geography in mind—If you are scheduling tasks on remote systems located in other geographical areas, remember that the time you set for a scheduled task is *that system's* time, which may be different from local time. You will be prompted to select a new time if the one you've set occurs in the past on the remote system.

- 4 Set the recurrence frequency from the drop-down menu, if the option is available for this task and you want it to occur regularly. You can set a task to recur daily, weekly, or monthly.
- 5 Click **Apply**.


The task is saved in the Task Manager, and the scheduled task is added to the Task List. For more information about the Task Manager, see the following section.

## Opening the Task Manager


You can use the Task Manager to monitor and modify the tasks you have scheduled. (To schedule a task, see [page 83](#).)

Tasks are associated with systems. When you open the Task Manager, you see the scheduled tasks associated with that local or remote system only.

To open the Task Manager, in the tool bar, click **Configure**, point to the system, then click **Tasks**.

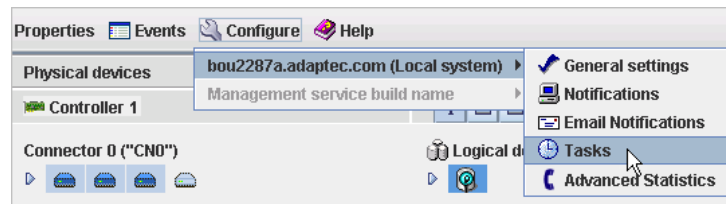

The Task Manager opens on the Tasks tab of a new window. The Tasks tab has two main panels, as shown in this figure. All scheduled tasks for the system appear in the task list; all events related to scheduled tasks on that system appear in the event log.:

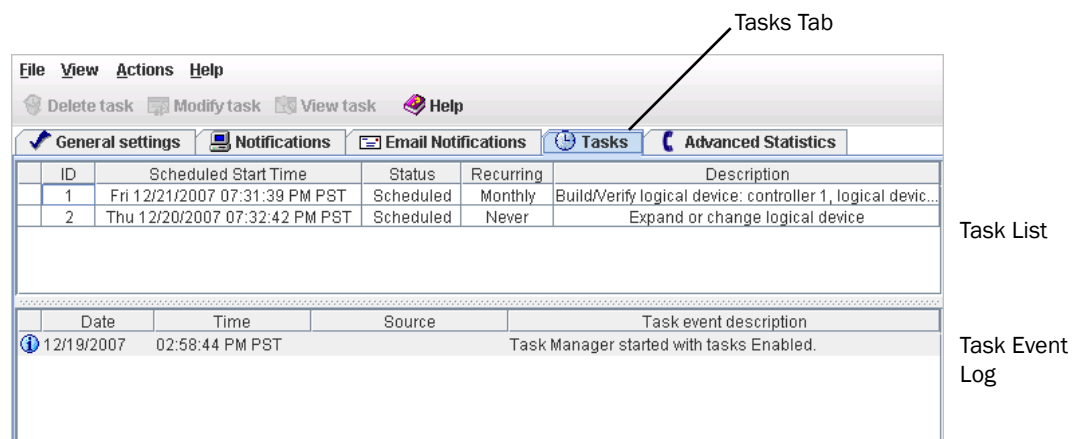

**Note:** From the Tasks tab, you can access other utilities in this window, such as the Email Notification Manager (see [page 113](#)), by clicking their tabs.

## Monitoring Tasks

Use the two main panels of the Task Manager—the task list and the task event log—to monitor your tasks.

### Monitoring Upcoming Tasks in the Task List

The Task List displays all scheduled tasks in order of creation, and includes basic information about each task. Although you can't sort the tasks in any other order, you can reorganize the columns in the Task List by clicking and dragging the column heads.

The Status column of the Task List shows the current condition of each task:

- **Scheduled**—The task is scheduled to be completed at a future date and time.
- **Executed**—The task has been completed successfully.
- **Executed\***—A recurring task has been completed once and will be repeated at the scheduled time.
- **Error**—The task has not been completed successfully. (For more information about an error, double-click the task in the Task List to open the Task Properties window.)




In the menu bar, click **View task** for additional detail about any task in the Task List.

### Checking Past Tasks and Events in the Event Log


The Event Log displays detailed information about the Task Manager itself, such as when scheduled events were modified, deleted, or completed successfully.

By default, task events are listed in the order they occurred, with the most recent event first. To make it easier to find a specific event, click on the column heads to sort task events. You can also reorganize the columns by clicking and dragging the column heads.

The Event Log uses icons to show the status of past tasks:

Icon	Status	Explanation and Solution
	Information	The task or event completed successfully. No action required.
	Warning	The task missed its start time. Reschedule the task to clear the error, as described in <a href="#">Modifying a Task on page 86</a> .
	Error	The task failed. Delete the task to clear the error. Schedule the task again, as described in <a href="#">Scheduling a Task on page 83</a> .)

Double-click on an event to see basic information about the event in the Task Properties window. Click **Next** to see the next event in the list.

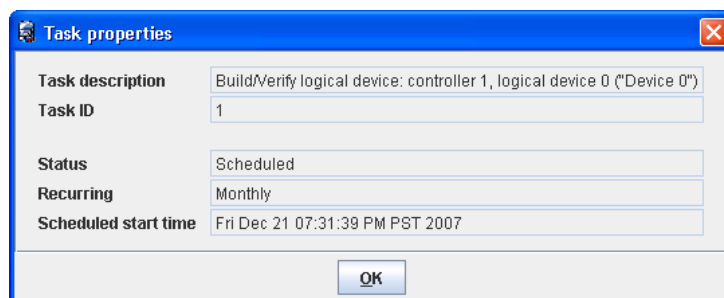

## Modifying a Task

If your requirements change, you can reschedule a task to a different date or time. You can also modify the task description that appears in the Task List. Creating a custom task description makes it easier to find the task in the Task List.

To modify a scheduled task:

- 1 In the tool bar, click **Configure**, point to the system you want, then click **Tasks** (as shown on [page 84](#)).
- 2 In the Task Manager, select the task you want to change, then click **Modify task**.
- 3 In the Modify Task window, make the required changes, then click **OK**.

The task and Task List are updated with the new information.

### What if a task misses its start time?

Tasks scheduled in Adaptec Storage Manager include an automatic 30-minute grace period following their start time, to accommodate temporary interruptions. For instance, if there's a brief power outage a task will run once normal conditions resume, if the interruption lasts no longer than 30 minutes past the scheduled start time.

If a task misses its start time, it must be rescheduled. For instructions, see [Modifying a Task](#).

If a recurring task misses its start time, it is automatically rescheduled to run at the next scheduled interval.

## Deleting a Task

If a scheduled task is no longer required, you can delete it from the Task Manager.

To delete a task:

- 1 In the tool bar, click **Configure**, point to the system associated with the task you want to delete, then click **Tasks** (as shown on [page 84](#)).
- 2 In the Task Manager, select the task you want to delete, then click **Delete task**.
- 3 Click **Yes** to confirm the deletion.

The task is deleted.

## Disabling the Task Manager

The Task Manager is enabled by default. If you do not wish to schedule tasks on a selected system, you can disable it.

**Note:** If you disable the Task Manager, no scheduled tasks will run on that system. No other systems are affected.

To disable the Task Manager:

- 1 In the tool bar, click **Configure**, point to the system whose Task Manager you want to disable, then click **Tasks** (as shown on [page 84](#)).

- 2 In the menu bar, click **Actions**, then click **Disable Task Scheduler**.

The Task Manager is disabled. The Tasks tab (shown at right) shows the red 'disabled' icon.



**Note:** When the Task Manager is disabled, a brief three-tone alert sounds each time you open and log in to Adaptec Storage Manager. Scheduled tasks in the Task List will not run while the Task Manager is disabled.

## Re-enabling the Task Manager

To re-enable the Task Manager, repeat the steps in [Disabling the Task Manager on page 86](#), selecting **Enable Task Scheduler** during [Step 2](#).

Scheduled tasks that have missed their start times must be rescheduled if you want them to run. See [Modifying a Task on page 86](#) for instructions.

Scheduled tasks that did not miss their start time while the Task Manager was disabled will run as scheduled.

# Maintaining Physical Devices

# 8

**In this chapter...**

- Viewing Component Properties ..... 89
- Blinking a Component..... 89
- Working with Failed or Failing Disk Drives..... 90
- Initializing and Erasing Disk Drives..... 90
- Working with Solid State Drives..... 92
- Working with Controllers..... 93
- Testing and Silencing System and Enclosure Alarms ..... 96
- Updating the Controller BIOS and Firmware ..... 99
- Updating the Disk Drive Firmware ..... 100

This chapter describes how to manage the controllers, disk drives, solid state drives, and enclosures in your storage space.




## Viewing Component Properties

Click on any component in the main window of Adaptec Storage Manager, then click the **Properties** button (shown at right) to view version numbers, status, model numbers, and other information about that component.



The properties listed vary, depending on which type of component you select. The examples below show the Disk Drive (left) and Logical Drive (right) Properties windows.

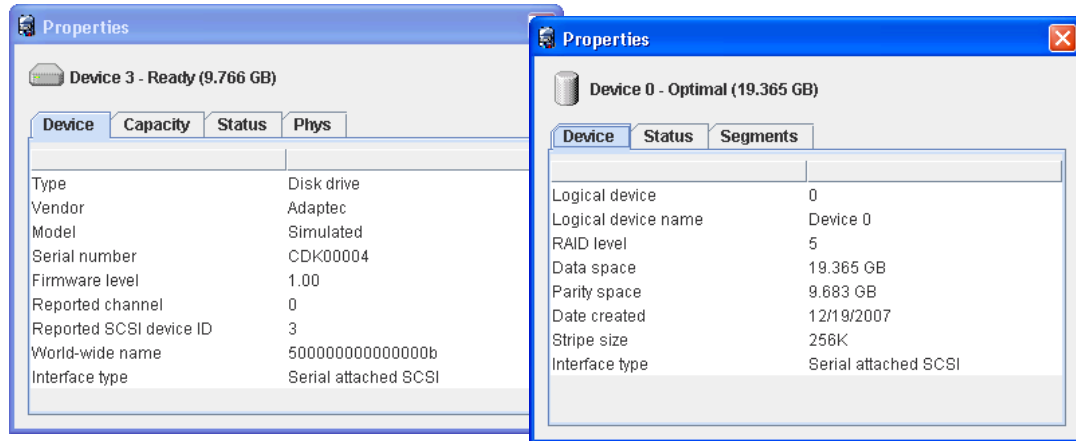

## Blinking a Component

You can blink the LEDs on enclosures, or disk drives *inside* enclosures, to identify where they are physically located in your storage space. This table describes how to blink specific enclosures and disk drives.

To Blink...	Right-click...
The disk drive	Disk Drive icon
All disk drives connected to that controller	Controller icon (in the Enterprise View or in the Physical Devices View)
The enclosure	Enclosure Management Device icon
All disk drives included in a logical drive	Logical Drive icon
All disk drives included in all the logical drives on a selected controller	Logical devices Text—In the Logical Devices View of a controller with multiple logical drives
All disk drives connected to selected controller ports	Ports Text—In the Physical Devices View of a controller with multiple ports
All disk drives connected to a selected controller channel	Channel Text—In the Physical Devices View of a controller with multiple channels
All disk drives connected to a selected controller connector	Device Text—In the Physical Devices View of a controller with multiple connectors

To blink a component:

- 1 In Adaptec Storage Manager, right-click the component, then click **Blink...**

**Note:** If the component you select (for instance, a controller) doesn't support the blink function, the Blink... option won't appear in the menu.

The LEDs on the disk drives or enclosures begin to flash.


- 2 Click **OK** to stop blinking the component.

## Working with Failed or Failing Disk Drives

This section describes how to use Adaptec Storage Manager to manage failed or failing disk drives in your storage space.

### Replacing Disk Drives in a Logical Drive

You can replace one or more disk drives in a logical drive. You may want to do this to upgrade to larger disk drives, or to make disk drive size uniform across the logical drive.

 **Caution:** If another disk drive in the logical drive fails during rebuild (see [page 141](#)), you may lose data.


To replace a disk drive in a logical drive:

- 1 In the Physical Devices View, click the disk drive you want to replace.
- 2 Set the drive state to failed. (See [page 90](#).)
- 3 Remove and replace the disk drive with one of equal or larger size.
- 4 Wait for the logical drive to rebuild. (See [page 141](#).)
- 5 Repeat Steps 1 to 4 for all the disk drives you want to replace.

For help solving disk drive problems, see [Recovering from a Disk Drive Failure on page 138](#).

### Setting a Disk Drive to 'Failed'

Before you can remove a disk drive, you should set it to a failed state to protect your data.

 **Caution:** You may lose data or damage your disk drive if you remove a disk drive without first setting it to a failed state.

You can set a disk drive to a failed state if:

- The disk drive is not part of a logical drive, *or*
- The disk drive is part of a redundant, healthy logical drive

You can't set a disk drive to a failed state if doing so will take a logical drive offline.

To set a disk drive to a failed state:

- 1 In the Physical Devices View, click the disk drive.
- 2 In the menu bar, select **Actions**, then click **Set drive state to failed**.
- 3 Click **Yes** to set the drive status to failed.
- 4 Remove and replace the disk drive.
- 5 If the logical drive that the disk drive belongs to is failed, see [Recovering from a Disk Drive Failure on page 138](#).

## Initializing and Erasing Disk Drives

This section describes how to use Adaptec Storage Manager to erase data and metadata (including logical drive information) from the disk drives in your storage space.

## Initializing Disk Drives

You can use Adaptec Storage Manager to initialize any disk drives that are in a Ready state, if required. You may want to do this to erase all existing data and metadata (including all logical drive information) before using the disk drive in a new logical device or as a hot spare.



**Caution:** Do not initialize a disk drive that is part of a logical drive. Initializing a disk drive that's part of a logical drive may make the logical drive unusable. Back up all data from your disk drive before you initialize it.

To initialize a single disk drive:

- 1 In the Physical Devices view, click the disk drive you want to initialize.
- 2 In the menu bar, select **Actions**, then click **Initialize**.
- 3 Click **Yes** to initialize the disk drive.

The initialization begins.

To initialize *all* ready disk drives on a controller:

- 1 In the Enterprise View, click the controller whose disk drives you want to initialize.
- 2 In the menu bar, select **Actions**, then click **Initialize all ready drives**.
- 3 Click **Yes** to initialize the disk drives.

The initialization begins.

## Clearing Disk Drives

You can use Adaptec Storage Manager to erase all existing data on any disk drives that are in the Ready state, if required. You can clear the drive, or clear the drive *securely* to completely destroy any data on the disk. Secure erase amounts to electronic “data shredding.”

To clear a disk drive:

- 1 In the Physical Devices view, click the disk drive you want to clear.
- 2 In the menu bar, select **Actions**, then click **Clear**.
- 3 Click **Yes** to clear the disk drive.

To securely erase a disk drive:

- 1 In the Physical Devices view, click the disk drive you want to clear.
- 2 In the menu bar, select **Actions**, then click **Secure erase**.
- 3 Click **Yes** to securely erase the disk drive.


## Working with Solid State Drives

You can use Adaptec Storage Manager to check the status of the SSDs in your system. You can use this information to verify the health of your SSDs and to predict drive failures.

For maxCache-compatible SSDs, Adaptec Storage Manager displays SMART statistics for the drive using Self-Monitoring, Analysis and Reporting Technology. It also displays wear-level and longevity indicators. If the SSD is not maxCache-compatible, Adaptec Storage Manager displays the same statistics *except* for longevity.

**Note:** For more on using maxCache in Adaptec Storage Manager, see [Configuring maxCache Read Caching on page 80](#) and [Logging Statistics for Remote Analysis on page 121](#). For a list of maxCache-compatible Solid State Drives, see [www.adaptec.com/compatibility](http://www.adaptec.com/compatibility).

To view the SMART statistics for a SSD, select the drive in the Physical Devices View, click the **Properties** button, then select the **Smart** tab. To view wear-level and longevity indicators for the SSD, select the **Status** tab.

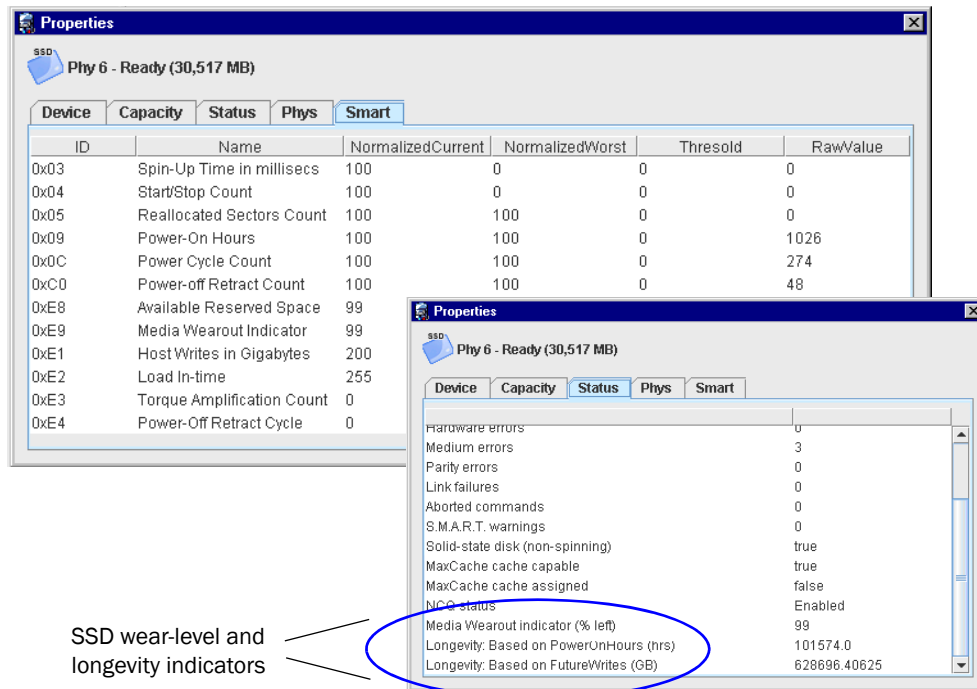

### What do the SMART statistics and wear-level indicators mean?

Name	Description
Power-On Hours	Number of power-on hours over life of device.
Power Cycle Count	Number of power-cycle events over life of device.
Available Reserved Space	Number of remaining reserve blocks.
Reallocated Sector Count	Number of bad sectors.
Host Writes	Number of sectors written by the host (1 sector = 512 bytes); increases by 1 for every 65536 sectors written.

Name	Description
Media Wear-Out Indicator	% wear remaining, based on number of NAND media cycles. SSD will be marked as Failed if wear-level goes below threshold value.
Longevity: Power-on Hours	Predicted SSD longevity based on remaining number of power-on hours.
Longevity: Future Writes	Predicted SSD longevity based on remaining number of writes.

## Working with Controllers

This section describes how to use Adaptec Storage Manager to manage the controllers that are part of your storage space:

- To register a new controller, see the following section.
- To test a controller alarm, see [page 93](#).
- To silence a controller alarm, see [page 94](#).
- To disable a controller alarm, see [page 94](#).
- To rescan a controller, see [page 94](#).
- To save your controller configuration, see [page 95](#).
- To set the controller's default task priority, see [page 95](#).
- To enable Native Command Queuing (NCQ) on a controller, see [page 95](#).
- To disable statistics logging on a controller, see [page 95](#).

### Registering New Controllers

Each time you log in to Adaptec Storage Manager, it searches for new controllers in your storage space. If it detects a new controller, the New Hardware Detected window opens and prompts you to register it.

To stay informed about Adaptec products and special offers, register your controllers by clicking **Register Now** in the New Hardware Detected window.

Follow the on-screen instructions to complete the registration.


### Testing a Controller Alarm

**Note:** Not all controllers have alarms. Refer to your controller's documentation for more information.

If your controller has an alarm, that alarm is enabled by default. To test a controller alarm to ensure that it's working:

- 1 Ensure that the speakers on your local system aren't muted.
- 2 In the Enterprise View, select the controller you want.

- 3 In the menu bar, click **Actions**, select **Alarm actions**, then click **Test alarm**.

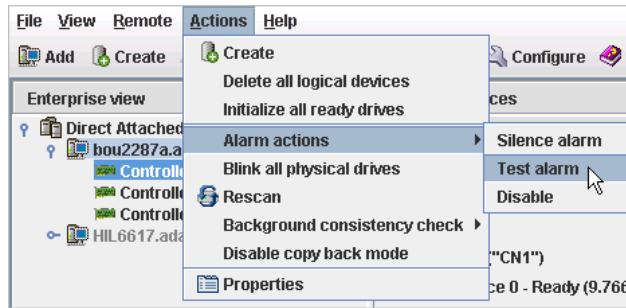

The alarm sounds.

- 4 To stop the test, click **OK**.

## Silencing a Controller Alarm

You can silence the alarm on a controller while you fix the problem.

To silence the alarm, click the **Silence** button (shown at right) in the main Adaptec Storage Manager window.



## Disabling a Controller Alarm

You can disable the alarm for a selected controller, if required.

**Caution:** If you disable the alarm, no audible signal will sound when an error occurs on the controller.

To disable a controller's alarm:

- 1 In the Enterprise View, select the controller you want.
- 2 In the menu bar, click **Actions**, select **Alarm Actions**, then click **Disable** (shown in the figure in [Step 3 on page 94](#)).

The alarm is disabled for that system.

## Rescanning a Controller

After you connect a disk drive to or remove a 'Ready' (non-failed) disk drive from a controller, Adaptec Storage Manager may not recognize the change until it rescans the controller.

To rescan a controller:

- 1 In the Enterprise View, click the controller.
- 2 In the menu bar, select **Actions**, then click **Rescan**.

Adaptec Storage Manager scans all the channels or ports on the controller you selected.

When the scan is complete, a report appears.

- 3 Click **Done** after you have reviewed the scan report.

## Saving Your Controller Configuration

If you require a record of your controller configurations, you can use Adaptec Storage Manager to create a text file with this information about all controllers on a selected system:

- Controllers
- Disk drives
- Disk drives used in logical drives
- Logical drives

To save a system's controller configurations:

- 1 In the Enterprise View, click the local or remote system.
- 2 In the menu bar, select **Actions**, then click **Save printable configuration**.
- 3 In the Save window, browse to the directory you want, then enter a file name for the report. (The default directory is the directory in which the Adaptec Storage Manager is installed. The default file name is RaidCfg.log.)

A text-file report is saved.

## Setting a Controller's Default Task Priority

To set the default priority for all tasks running on the controller to High, Medium, or Low, right-click the controller in the Enterprise View, then select **Change default task priority**.

**Note:** This setting applies to new tasks. It does not affect currently running tasks.

## Enabling Native Command Queuing on a Controller

Native Command Queuing, or NCQ, lets SATA disk drives arrange commands into the most efficient order for optimum performance.

To enable or disable NCQ for the drives on a controller:

- 1 In the Enterprise view, select a controller.
- 2 In the menu bar, select **Actions**, select **NCQ**, then click **Enable** or **Disable**.

## Disabling Statistics Logging on a Controller

If you enabled statistics logging when you first logged in (see [page 30](#)), Adaptec Storage Manager gathers IO and usage statistics for all the controllers on a system. If you prefer not to gather statistics for a controller, you can disable statistics logging on that controller.

To disable statistics logging on a controller:

- 1 In the Enterprise view, select a controller.
- 2 In the menu bar, select **Actions**, select **Advanced Statistics**, then click **Disable**.

### Re-Enabling Statistics Logging

To re-enable statistics logging, repeat steps 1 and 2 in [Disabling Statistics Logging on a Controller](#), selecting **Enable** in [Step 2](#).

### Resetting the Statistics Logs on a Controller

Adaptec Storage Manager adds statistics to the statistics log for a controller (cumulatively) until you reset the log.

To reset the statistics log for a controller:

- 1 In the Enterprise view, select a controller.
- 2 In the menu bar, select **Actions**, select **Advanced Statistics**, then click **Reset**.

## Testing and Silencing System and Enclosure Alarms

Adaptec Storage Manager supports an audible alarm which is triggered on the local system when a Warning- or Error-level event (see [page 106](#)) occurs on any system in your storage space. Adaptec Storage Manager also supports audible alarms on enclosures.

This section describes how to work with the audible alarms in your storage space:

- For system alarms, see the next section.
- For enclosure alarms, see [page 98](#).

### Working with System Alarms

Warning- or Error-level events (see [page 106](#)) on a system trigger an audible alarm, a series of beeps which sound every five minutes until the event is resolved.

The alarm is enabled by default, but can be disabled on any system, if required. You can also change the frequency and duration of the alarm.


**Note:** A system alarm is not the same as a controller alarm. For controller alarm information, see [Working with Controllers on page 93](#).

This section describes how to work with your systems' audible alarms.

#### Testing a System's Alarm

To test the audible alarm to ensure that it's working on your local system:

- 1 Ensure that the speakers on your local system aren't muted.
- 2 In the Enterprise View, click on your local system.
- 3 In the menu bar, click **Actions**, then select **Agent actions**.

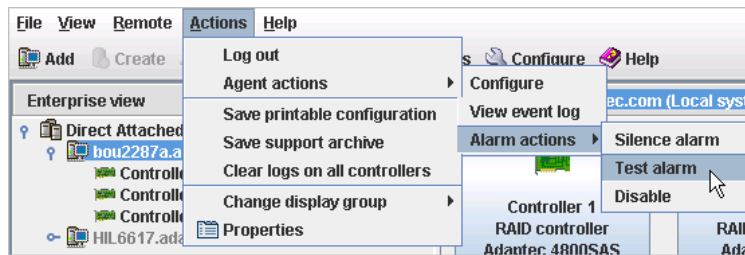

- 4 Select **Alarm actions**, then click **Test alarm**.

The alarm sounds.

- 5 To stop the test, click **OK**.



## Silencing a System's Alarm

When a Warning- or Error-level event occurs, you can silence the alarm on your local system while you fix the problem.

To silence the alarm, click the **Silence** button (shown at right) in the main Adaptec Storage Manager window.




Alternatively, in the menu bar, click **Actions**, then select **Agent actions**. Select **Alarm actions**, then click **Test alarm**.

## Changing a System's Alarm Settings


By default, an audible alarm sounds every five minutes (or 300 seconds) until silenced or until the event is resolved. You can change the frequency of the alarm, if required.

To change alarm settings on a system:

- 1 In the Enterprise View, select the system.
- 2 In the tool bar, click **Configure**, point to the system, then click **General Settings**.

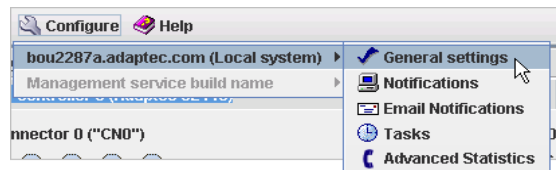

The Adaptec Storage Manager Agent General Settings window opens for the system you selected. The alarm settings are circled in the next figure.

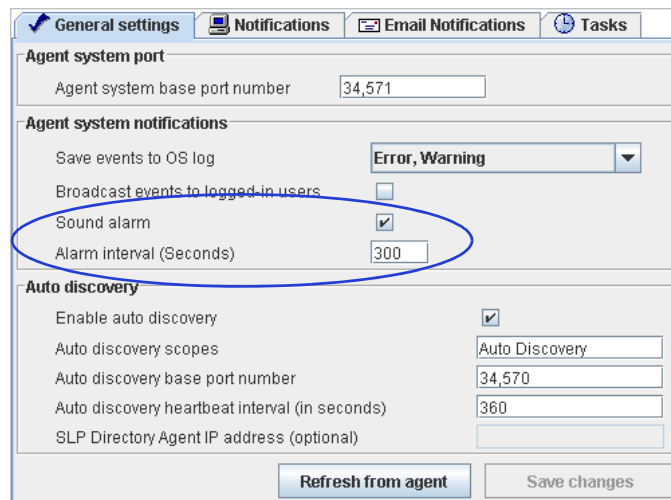

**Note:** You can access other utilities in this window, such as the Task Manager (see [Scheduling Recurring or Resource-Intensive Jobs on page 82](#)), by clicking their tabs.

- 3 Edit the alarm settings as required.

**Note:** You can disable an alarm in this window by deselecting **Sound alarm**. Alternatively, follow the instructions in [Disabling a System's Alarm on page 98](#).


The changes take effect immediately.

### Disabling a System's Alarm

You can disable the alarm for a selected system, if required.

**Caution:** When the alarm is disabled, no audible signal sounds when a Warning- or Error-level event occurs on the system.

- 1 In the Enterprise View, select the system you want.
- 2 In the menu bar, click **Actions**, select **Agent Actions**, select **Alarm Actions**, then click **Disable**.

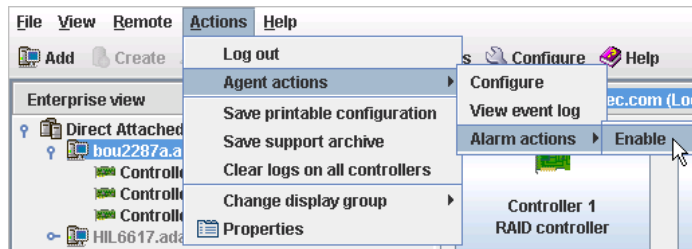

The alarm is disabled for that system.

To enable an alarm, repeat Steps 1 and 2, selecting the alarm action **Enable**.

### Working with Enclosure Alarms

This section describes how to work with the alarms of the enclosures in your storage space.

#### Testing an Enclosure Alarm

If an enclosure has an alarm, follow these instructions to ensure that the alarm is working:

- 1 Ensure that the speakers on your local system aren't muted.
- 2 In the Enterprise View, select the controller that's connected to the enclosure you want.
- 3 In the Physical Devices View, right-click the enclosure icon (shown at right) of the enclosure that you want.
- 4 Select **Alarm actions**, then click **Test alarm**.



The alarm sounds.

- 5 To stop the test, click **OK**.

#### Silencing an Enclosure Alarm

You can silence the alarm on an enclosure while you fix the problem.

To silence the alarm, click the **Silence** button (shown at right) in the main Adaptec Storage Manager window.



#### Disabling an Enclosure Alarm

You can disable the alarm for a selected enclosure, if required.

**Caution:** If you disable the alarm, no audible signal will sound when an error occurs on the enclosure.

To disable an enclosure's alarm:

- 1 In the Enterprise View, select the controller that's connected to the enclosure you want.
- 2 In the Physical Devices View, right-click the enclosure icon (shown at right) of the enclosure that you want.
- 3 Select **Alarm** actions, then click **Disable**.



The alarm is disabled for that system.

## Updating the Controller BIOS and Firmware

**Note:** This task is recommended for advanced users only.

Adaptec Storage Manager provides a wizard to help you update the BIOS and firmware for the controllers in your storage space. The ROM Update wizard updates the BIOS and firmware for all controllers of the same type on local and remote systems. You can update one type of controller at a time.


### Before You Begin

Before you begin, download the latest firmware images from the Adaptec Web site at [www.adaptec.com](http://www.adaptec.com). Image files typically come in sets of two or more and have a .ufi file extension.

### Updating the Controller BIOS and Firmware


To update the controller firmware:

- 1 In the Enterprise View, right-click **Direct Attached Storage**, then click **Update controller images**.

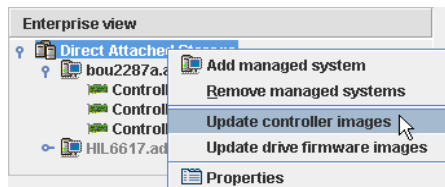


The ROM Update wizard opens.

- 2 Click **Next**.
- 3 Click **Add** to browse to the firmware image files you downloaded, select the files, then click **Open**.

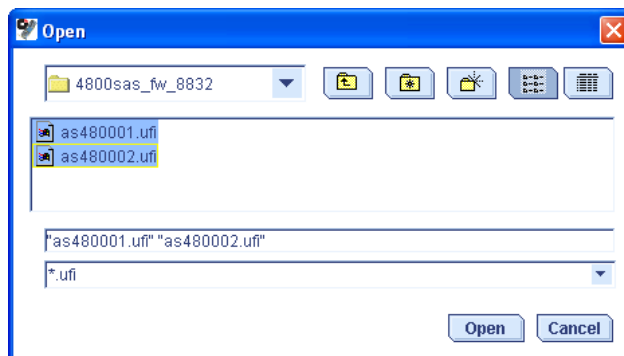


- 4 In the wizard, select the image files you want, then click **Next**.

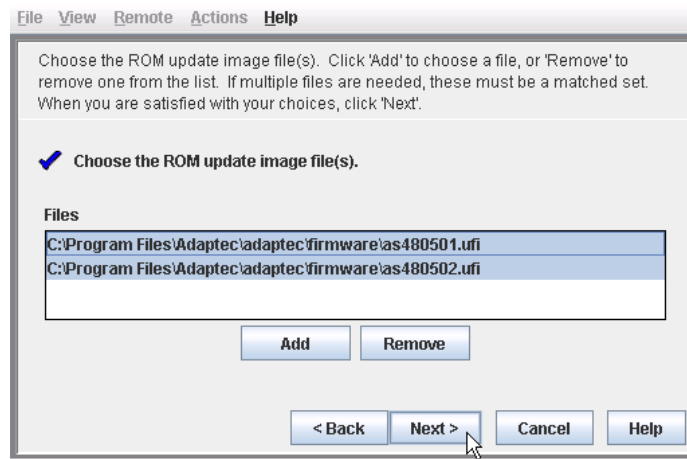

- 5 Select the controllers you want to update, then click **Next**.

**Note:** To force an update/downgrade of the firmware, hold down the **Control** key while selecting the controller.

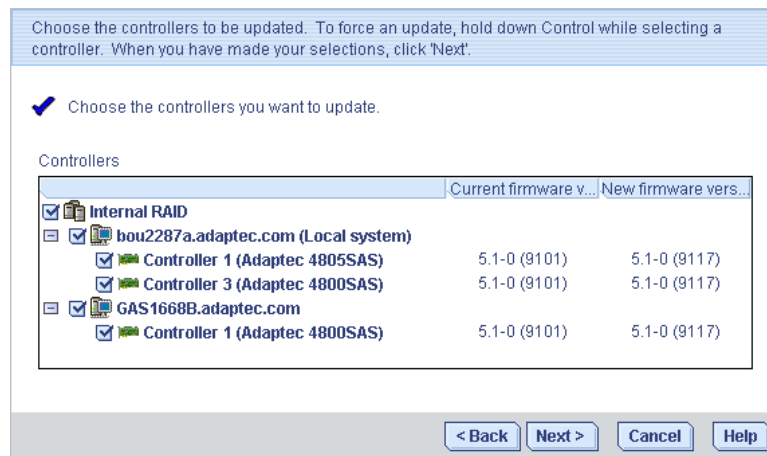

- 6 Review the update summary, then click **Apply**.

- 7 When prompted, click **Yes** to begin the update.

**Caution:** Do not power down the controller(s) during the update.

- 8 When the update is complete, click **OK**. Then, restart the server(s) to activate the new firmware images.

## Updating the Disk Drive Firmware

**Note:** This task is recommended for advanced users only.

Adaptec Storage Manager provides a wizard to help you update the firmware for the disk drives in your storage space. The wizard updates the firmware for all disks of the same type on local and remote systems. You can update only one type of disk drive at a time.


## Before You Begin

Before you begin, download the latest firmware images from your vendor's support site on the World Wide Web. The image file name and extension vary by manufacturer.

## Updating the Disk Drive Firmware


To update the disk drive firmware:

- 1 In the Enterprise View, right-click **Direct Attached Storage**, then click **Update drive firmware images**.

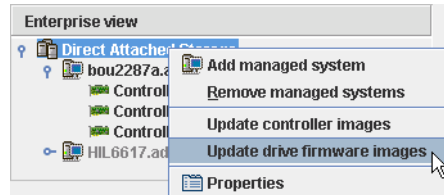

The Drive Firmware Update wizard opens.

- 2 Click **Next**.
- 3 Click **Add** to browse to the firmware image file you downloaded, select the file, then click **Open**.

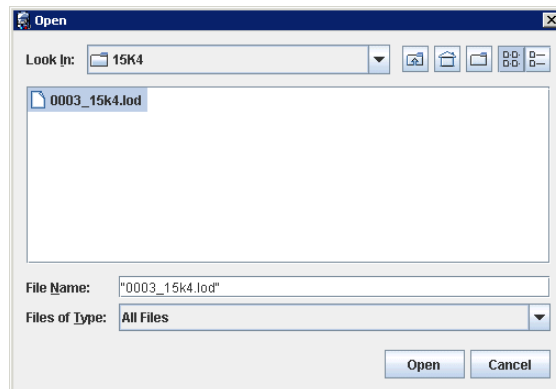


- 4 In the wizard, select the image file you want, choose the packet size (in bytes) from the drop-down list, then click **Next**.

**Note:** For SATA drives, the packet size must be a multiple of 512.

Choose the Drive Firmware/Microcode update image file(s). Click 'Add' to choose a file, or 'Remove' to remove one from the list. If multiple files are needed, these must be a matched set. When you are satisfied with your choices, click 'Next'.

☒ Choose the Drive Firmware/Microcode update image file(s).


 Updating a hard disk with an invalid image file may render the hard disk unusable. Please make sure you have the correct image file.

Files

C:\Resource\DRIVE\_FW\seagate\seagate15K4\0003\_15k4.lod

Select the packet size (in bytes):

512

 For SATA drives the value must be a multiple of 512 bytes.

- 5 Select the disk drives you want to update, then click **Next**.

**Note:** For SAS drives with “Mode 6” support, select **Save Later** to use the new firmware once, during the current session, and to revert to the previous firmware the next time the drive is started.

Choose the hard disks to be updated. To force an update, hold down Control while selecting a hard disk. When you have made your selections, click 'Next'.

☒ Choose the hard disk you want to update.

	Current firmware version	New firmware version	Vendor	Product or model number
<b>Direct Attached Storage</b>				
<b>AIM-LAB-SMC1 (Local system)</b>				
<b>Controller 1 (Adaptec 51645)</b>				
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 1	3.AAE	Not available		ST380811AS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 2	3.AAE	Not available		ST380811AS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 3	3.AAE	Not available		ST380811AS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 4	3.AAE	Not available		ST380811AS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 5	BK00	Not available	MAXTOR	ATLAS15K2_36SAS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 6	BK00	Not available	MAXTOR	ATLAS15K2_36SAS
<input checked="" type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 7	0003	Not available	SEAGATE	ST336754SS
<input checked="" type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 8	0003	Not available	SEAGATE	ST336754SS
<input checked="" type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 9	0003	Not available	SEAGATE	ST336754SS
<input checked="" type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 10	0003	Not available	SEAGATE	ST336754SS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 11	0003	Not available	SEAGATE	ST336754SS
<input type="checkbox"/> Enclosure 0 (ADAPTEC SANBLOC S50) - Slot 12	0003	Not available	SEAGATE	ST336754SS

☐ Save Later (Applies only for SAS drives)\*\*

\*\* This option may not be supported by all the drives. In case of a failure, please consult your drive manufacturer for "Mode 6" support.

- 6 Review the update summary, then click **Apply**.

7 When prompted, click **Yes** to begin the update.



**Caution:** Do *not* power down the controller or remove the disk drives during the update.

8 When the update is complete, click **OK**.

## Monitoring Status and Activity

---

### In this chapter...

Monitoring Options .....	105
Checking Status from the Main Window.....	105
Notifying Users by Event Log Message About Status and Activity .....	108
Notifying Users by Email About Status and Activity.....	113
Notifying Users by SNMP Trap About Status and Activity.....	118
Notifying All Users About Status and Activity .....	119
Changing an Operating System's Event Log Setting.....	120
Logging Statistics for Remote Analysis.....	121

This chapter describes how Adaptec Storage Manager helps you monitor your storage space.



## Monitoring Options

Adaptec Storage Manager provides many ways to monitor the status of your storage space:

- **Event Log**—The main window of Adaptec Storage Manager features an event log that provides at-a-glance status information about activity occurring in your storage space. (See the following section.)
- **Event Status Icons**—Three basic icons (information, warning, and error) appear in the event log and in the main Adaptec Storage Manager window to help you quickly identify problems. (See [page 106](#).)
- **Enclosure Status Icons**—If your storage space includes an enclosure with an enclosure management device, three icons appear in the Physical Devices View to help you monitor temperature, fan, and power module status. (See [page 107](#).)
- **Notifications**—You can set Adaptec Storage Manager to broadcast status notifications in your choice of format to help you monitor these activities on local and remote systems (see [pages 108–119](#)):
  - Progress of scheduled tasks, such as logical drive verifications.
  - Changes in the status of the physical components of your storage space, such as disk drives.
  - Changes to the local system, such as the expansion of a logical drive or the creation of a hot spare.
- **Statistics Logging**—You can set Adaptec Storage Manager to collect I/O and usage statistics for the RAID controllers in your system and periodically “call home” to send the data to remote contacts for analysis. (See [page 121](#).)
- **Properties Button**—You can check the status of any component in your storage space by using the Properties button. (See [Viewing Component Properties on page 89](#).)
- **Audible Alarm**—A series of beeps sounds whenever a serious event occurs on your storage space. (See [Maintaining Physical Devices on page 88](#).)


## Checking Status from the Main Window

From your local system, you can see status information and messages about the activity (or *events*) occurring in your storage space by looking at the *event log* and status icons in the main window of Adaptec Storage Manager. (You can also view all events for a system in its operating system event log—see [page 120](#).) You can also monitor any enclosure with an enclosure management device from the main window.

### Viewing Activity and Status in the Event Log

The event log lists activity occurring in your storage space, with the most recent event listed at the top. Status is indicated by icons (see [page 106](#)) in the left-hand column, as shown in the figure on [page 106](#).

Double-click any event to open the Configuration Event Detail window to see more information in an easier-to-read format. Use the up and down arrows to view previous or following events.

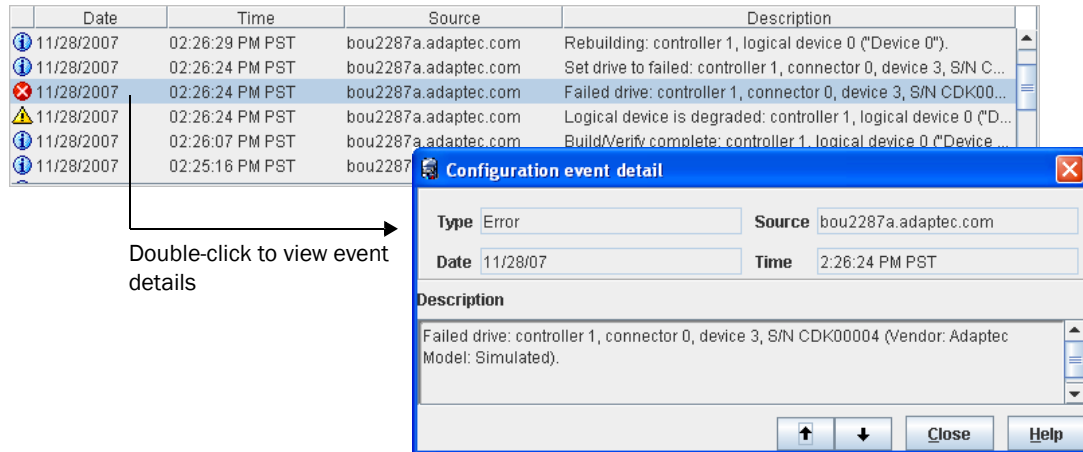

Double-click to view event details

To open a full-screen version of the complete event log, click the **Events** button on the tool bar.

To make it easier to find a specific event, click on the column heads to sort the events. (Sorting events by status icons helps you find specific Error- or Warning-level events quickly.) You can also move the columns of the event log, if required.

## What Do the Event Status Icons Mean?

Adaptec Storage Manager indicates event status with icons. This table lists the three categories, or types, of events based on severity.

Icon	Status	Examples
	Information	<ul style="list-style-type: none"> <li>The local system successfully connected to a remote system.</li> <li>A logical drive was created.</li> <li>A hot spare was deleted.</li> </ul>
	Warning	<ul style="list-style-type: none"> <li>A logical drive is in a degraded state.</li> <li>A disk drive is being rebuilt.</li> <li>A controller is not responding to an enclosure.</li> </ul>
	Error	<ul style="list-style-type: none"> <li>A controller has failed.</li> <li>A logical drive has failed.</li> <li>A hot spare has failed.</li> <li>An enclosure is overheating.</li> <li>Multiple fans or power supplies within an enclosure have failed.</li> <li>An enclosure is not responding.</li> </ul>

Warning- and Error-level icons appear next to components (such as systems and logical drives) affected by a failure or error, creating a trail that helps you quickly identify the source of a problem. See [Identifying a Failed or Failing Component on page 137](#) for more information.

**Note:** All Warning- and Error-level events also cause the audible alarm to sound. See [page 107](#) for more information.


## Clearing the Event Log

To clear all event logs belonging to all controllers in a selected system:

- 1 In the Enterprise View, click on the system you want.
- 2 On the menu bar, select **Actions**, then select **Clear logs on all controllers**.
- 3 Click **Yes** to clear the log.

## Using Enclosure Icons to Monitor Enclosure Status

If your storage space includes an enclosure with an enclosure management device, such as a SCSI Accessed Fault-Tolerant Enclosure (SAF-TE) processor, Adaptec Storage Manager displays temperature, fan, and power module status in the Physical Device view, as shown in the next figure. The icons change color to indicate status, as described in the table below.

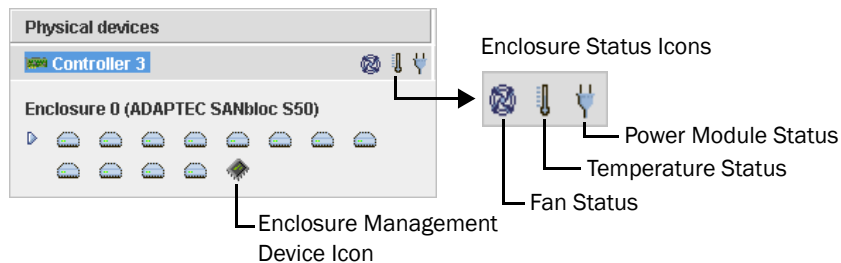

Icon	Status	Examples
	Normal	Fans are working properly.
	Warning	A fan has failed.
	Error	Multiple fans have failed.
	Normal	Enclosure temperature is normal.
	Warning	Enclosure temperature is higher than normal.
	Error	Enclosure is overheating.
	Normal	Power supplies are working normally.
	Warning	One power supply has failed.
	Error	Multiple power supplies have failed.

**Note:** If your enclosure does not have an enclosure management device, the status icons appear but *do not* indicate status.

## Notifying Users by Event Log Message About Status and Activity

You can set up Adaptec Storage Manager to send messages to the event log of selected remote systems when activity, such as the creation of a logical drive or the failure of a disk drive, occurs on the local system. (For more information about event types, see [page 106](#).)

Logged notifications can help you monitor activity on your entire storage space from a single local station, and are especially useful in storage spaces that include multiple systems running the Adaptec Storage Manager Agent only.

Logged notifications include status information and identify which system (or *source*) an event occurred on. For instance, in this example, the event log indicates that two logical drives were added to a system named 'gas1668b'.

	Date	Time	Source	Description
ⓘ	04/14/2006	11:01:44 AM PDT	GAS1668B.adaptec.com	Added logical device: controller 1, logical device 4 ("Logi...
ⓘ	04/14/2006	11:01:44 AM PDT	GAS1668B.adaptec.com	Added logical device: controller 1, logical device 3 ("Logi...
ⓘ	04/14/2006	11:01:41 AM PDT	GAS1668B.adaptec.com	Successfully applied the new configuration: controller 1.
✖	04/14/2006	10:53:48 AM PDT	bou2287c.adaptec.com	Could not clear the event logs for system bou2287c.ad...
✖	04/14/2006	10:53:32 AM PDT	GAS1668B.adaptec.com	Could not clear the event logs for system GAS1668B.ad...
ⓘ	04/14/2006	10:40:46 AM PDT	bou2287c.adaptec.com	Reconfiguration complete: controller 1, logical device 3 (...)

Logged notifications are *not* sent to all systems in your storage space. In the Notifications Manager, you can specify which systems will send and receive logged notifications; then, you can add or delete systems as your storage space grows and changes.

Follow the instructions in this section to:

- Set up logged notifications (see the next section).
- Send a test notification (see [page 110](#)).
- Modify a system's information or remove a system (see [page 111](#)).
- Disable logged notifications (see [page 112](#)).
- Clear the notification event log (see [page 112](#)).


### Setting up Logged Notifications

This section describes how to set up logged notifications for one system in your storage space. You must complete the tasks in this section for *each* individual system that you want to monitor with logged notifications.


To set up logged notifications for a system:

- 1 Note this information for each system that will *receive* event notifications about the selected system:
  - Host name or TCP/IP address
  - TCP/IP port number (or the default, 34571)
- 2 In the Enterprise View, select the system you want.

- 3 On the tool bar, click **Configure**, point to the system, then click **Notifications**.

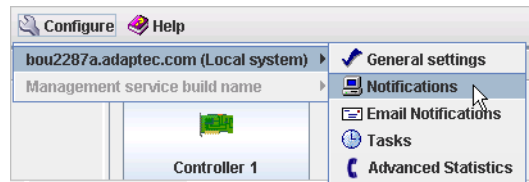

The Notifications Manager opens. The local system is automatically included in the list of systems receiving logged notifications. (By default, all local events are listed in the local event log.)

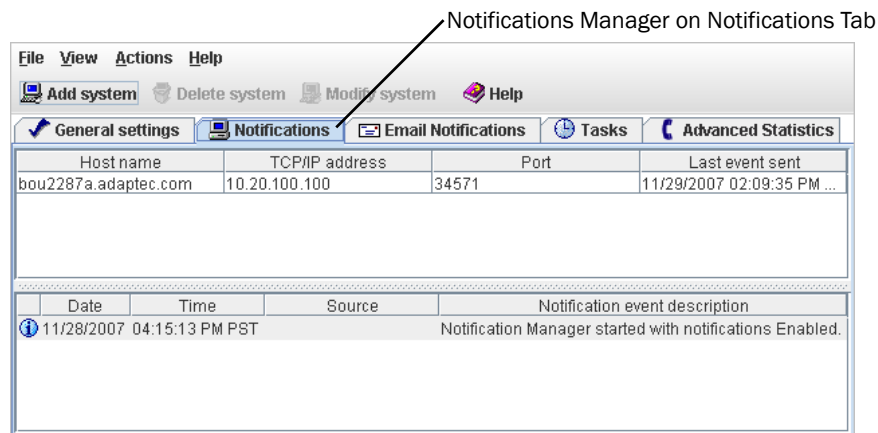


**Note:** You can access other features in this window, such as the Task Manager (see [Scheduling Recurring or Resource-Intensive Jobs on page 82](#)), by clicking their tabs.

- 4 In the tool bar, click **Add system**.

The Add System window opens.

- 5 Enter the host name or TCP/IP address of another system in your storage space that will receive event notifications generated by the local system. (If you are not using the default port number, 34571, enter the TCP/IP port.) Then, click **Add**.

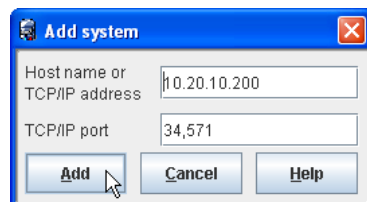

Repeat this step to add other systems to Notifications Manager.

- When you're done, click **Cancel** to close the Add System window.

The systems you added appear in the Notifications Manager.

General settings <b>Notifications</b> Email Notifications   Tasks   Advanced Statistics			
Host name	TCP/IP address	Port	Last event sent
bou2287a.adaptec.com	10.20.171.200	34571	11/29/2007 02:19:38 PM ...
10.20.10.200	10.20.10.200	34571	11/29/2007 02:21:21 PM ...
10.20.10.201	10.20.10.201	34571	11/29/2007 02:21:33 PM ...

- Close the Notifications Manager when you're done.
- Repeat the steps in this section for each system you want to monitor with logged notifications.

## Sending a Test Event

To ensure that a system is receiving logged notifications, you can send a test event.

To send a test event:


- In the Enterprise View, select the system you want.
- On the tool bar, click **Configure**, point to the system, then click **Notifications**.

The Notifications Manager opens.

- In the Notifications list, click on the system you want to send a test event to.

**Note:** You can only send a test event to one system at a time.

- On the menu bar, select **Actions**, then click **Send test event**.

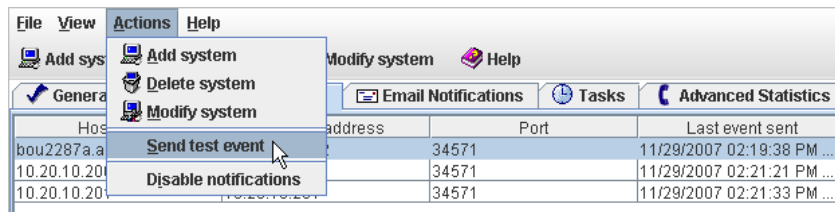

The test event is sent. A message appears indicating either that the test event was sent successfully or that the test failed. (Click OK to clear the message.)

If the test is successful, the receiving system beeps once, and its event log shows that a test event was received.

	Date	Time	Source	Description
1	11/29/2007	02:30:41 PM PST	bou2287a.adaptec.com	This is a test event.
2	11/29/2007	12:56:56 PM PST	bou2287a.adaptec.com	Established a connection to 10.20.170.113 on port number 3...
3	11/29/2007	12:56:54 PM PST	HIL6617.adaptec.com	No controllers were found in this system.
4	11/15/2007	10:01:35 AM PST	HIL6617.adaptec.com	Adaptec Storage Manager started on TCP/IP port number 34,...

If the test fails:

- a Ensure that the receiving system is powered on and running Adaptec Storage Manager.
- b Open the receiving system's System Properties window (see [Step 4 on page 111](#)) and double-check the TCP/IP address and port number.
- c Try sending the test event again.

## Modifying System Information or Removing a System

Follow the instructions in this section to specify a notification level for a system, or change the TCP/IP information or host name of a system.


**Note:** If the system receives notifications from more than one system, be sure you enter the updated information on all affected systems.

To modify system information:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Notifications**.

The Notifications Manager opens.

- 3 Select the system you want to modify.
- 4 In the System Properties window, enter the new information or select a new notification level in the Event Type drop-down menu, then click OK.

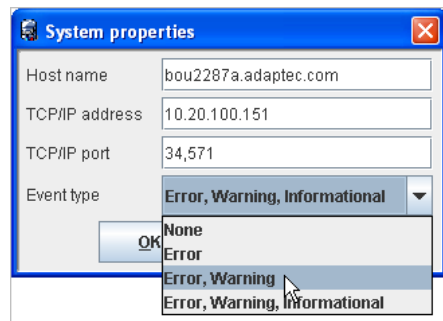

Or,

In the tool bar, click **Delete system**, then click **Yes** to confirm the deletion.

Modifications become effective immediately. If you have deleted a system but you still want to be notified about status and activity by logged notifications, ensure that there is at least one system on the Notifications list. (See [page 108](#) to add a new system.)

## Disabling Logged Notifications

Logged notifications are enabled by default. You can choose to disable them on a selected system, if required.

**Note:** If you disable logged notifications, events will be generated for that system but not broadcast—not even to the local Event Log.

To disable logged notifications:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Notifications**.

The Notifications Manager opens.

- 3 On the menu bar, click **Actions**, then click **Disable notifications**. (See the illustration in [Step 4 on page 110](#), if required.)

Event notifications are disabled. The Notifications tab (shown at right) shows the red 'disabled' icon.



## Re-enabling Logged Notifications

To re-enable logged notifications, repeat steps 1 and 3 in *Disabling Logged Notifications*, selecting **Enable Notifications** during [Step 3](#).

## Clearing the Notifications Manager Log


The bottom panel of the Notifications Manager displays status information and messages about the Notification Manager itself, such as whether notifications were sent successfully or not. To make it easier to monitor recent events, you can clear the log on a selected system.

To clear the Notification Log:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Notifications**.

The Notifications Manager opens.

- 3 On the menu bar, click **File**, select **Clear the event log**, then click **Notifications**.

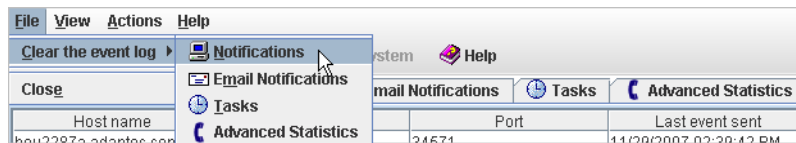

- 4 Click **Yes** to clear the log.

The log is cleared.



## Notifying Users by Email About Status and Activity

You can set up Adaptec Storage Manager to send email messages (or *notifications*) to a selected email address when an event, such as the creation of a pool or the failure of a disk drive, occurs on a system. Email notifications can help you monitor activity on your entire storage space from any location, and are especially useful in storage spaces that include multiple systems running the Adaptec Storage Manager Agent only.

Only the users you specify receive email notifications. You can specify which types of events generate email messages (Error, Informational, Warning). You can also specify if you want to be notified instantly when an event occurs to ensure that urgent issues receive immediate attention from the right people. Alternatively, you can specify that you want events “coalesced” and receive only one email message for each event type.

Follow the instructions in this section to:

- Set up email notifications (see [page 113](#)).
- Send a test email (see [page 115](#)).
- Modify a recipient’s information or remove a recipient (see [page 116](#)).
- Modify email settings (see [page 116](#)).
- Disable email notifications (see [page 117](#)).

### Setting Up Email Notifications


This section describes how to set up email notifications for one system. If you want to monitor multiple systems by email, you must complete the tasks in this section for each one separately.

Before you begin, note this information:


- The address of your Simple Mail Transfer Protocol (SMTP) server (host name and domain, or TCP/IP address)
- The name and email address of the person who will receive email notifications

To set up email notifications:

- 1 In the Enterprise View, select the system you want.
- 2 In the Adaptec Storage Manager tool bar, click **Configure**, point to the system, then click **Email Notifications**.

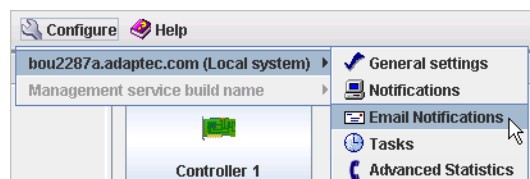


The Email Notifications Manager opens.

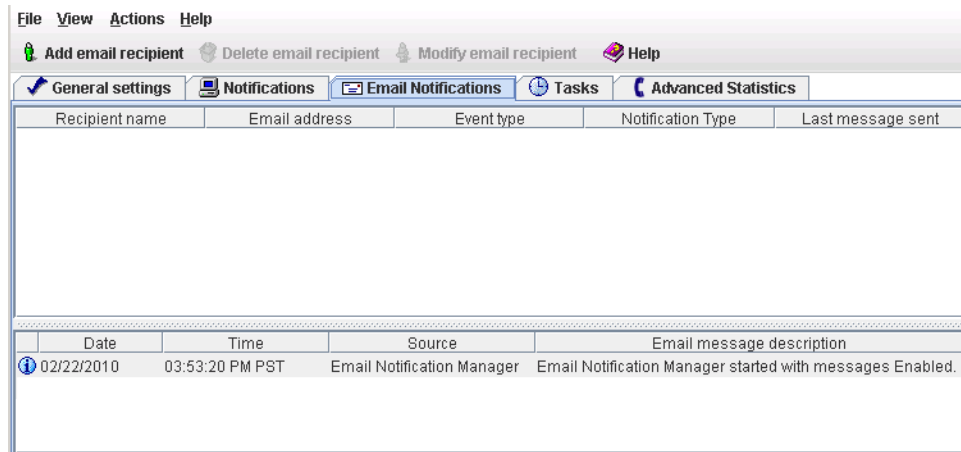

If you haven't previously set up email notifications, the SMTP Server Settings window also opens, as shown in the next Step. (If email notifications are already set up, the SMTP Server Settings window doesn't open. Skip to [Step 5](#).)

- 3 Enter the address of your SMTP server and the server's port number (or use the default port). Then enter the "From" address to appear in email notifications. If an email recipient will be replying to email notifications, be sure that the "From" address belongs to a system that is actively monitored.

If authentication is enabled on your SMTP server (that is, the server requires authentication details before it will send messages to users), select **Use Secure Mail Server**, then enter the SMTP server user's login credentials in the space provided.

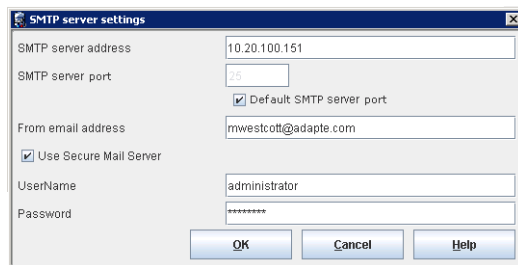

- 4 Click **OK** to save the settings.
- 5 In the Email Notifications Manager tool bar, click **Add email recipient**.

The Add Email Recipient window opens.

- Enter the recipient's name and email address, select the level of events for which the recipient will receive an email, select the notification type—Instant or Coalesced—then click **Add**. (For more information on event levels, see [page 106](#).)

**Note:** With Coalesced notifications, you receive one email message for a group of events, not for each event individually. The minimum interval between email messages is one minute.

Repeat this Step to add other recipients to the Email Notifications Manager.

- When you're done, click **Cancel** to close the Add Email Recipient window.

The email recipients you added appear in the Email Notifications Manager.

Recipient name	Email address	Event type	Notification Type	Last message sent
Jasmine	jasminew@adaptec.com	Error, Warning	Coalesced	Never
Natalie	nwilding@adaptec.com	Error	Instant	Never
Barry	barryt@adaptec.com	Error	Coalesced	Never

- Repeat the steps in this section for each system you want to monitor with email notifications.
- Close the Email Notifications Manager, then continue by sending test messages to all recipients, as described in the next section.

## Sending a Test Message

To ensure that an email recipient is receiving event notifications, you can send them a test message.

To send a test message:


- In the Enterprise View, select the system you want.
- In the Adaptec Storage Manager tool bar, click **Configure**, point to the system, then click **Email Notifications**.

The Email Notifications Manager opens.

- Click on the email address you want to send the test message to.

**Note:** You can only send a test message to one email address at a time.

- 4 On the menu bar, select **Actions**, then click **Send test message**.

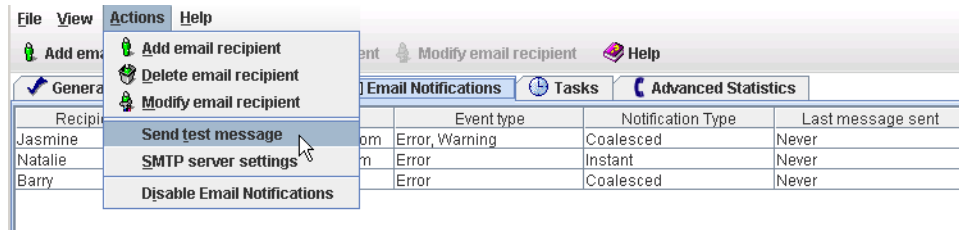

The test message is sent.

If the test is successful, the email recipient receives the test message. If the test fails:

- a Ensure that the recipient's email address is correct. (See [Modifying Recipient Information or Removing a Recipient on page 116](#) to modify the address.)
- b Ensure that your SMTP server address is correct. (See [Modifying Email Settings on page 116](#) to modify the address.)
- c Try sending the test message again.

## Modifying Recipient Information or Removing a Recipient

This section describes how to modify a recipient's email address, change the types of event notifications the recipient receives, or stop sending email notifications to a recipient from a selected system.

To modify a recipient's information:

- 1 In the Enterprise View, select the system you want.
- 2 In the Adaptec Storage Manager tool bar, click **Configure**, point to the system, then click **Email Notifications**.

The Email Notifications Manager opens.

- 3 Select the recipient you want, then click **Modify email recipient**. Change the information as required, then click **OK**.

Or,

Select the recipient you want, click **Delete email recipient**, then click **Yes** to confirm the deletion.

Modifications become effective immediately.

## Modifying Email Settings

You can modify these email settings as your needs change:


- Address of your SMTP server
- 'From' address that will appear in email notifications

To modify email settings:

- 1 In the Enterprise View, select the system you want.
- 2 In the Adaptec Storage Manager tool bar, click **Configure**, point to the system, then click **Email Notifications**.

The Email Notifications Manager opens.

- On the menu bar, select **Actions**, then click **SMTP server settings**.

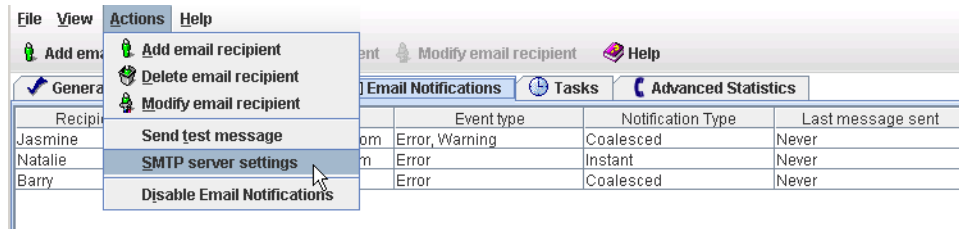

The SMTP Server Settings window opens.

- Edit the SMTP server settings as required, then click **Add** to save the settings.

## Disabling Email Notifications

Email notifications are enabled by default. You can choose to disable them on a selected system, if required.

**Note:** If you disable email notifications, events will be generated but email messages won't be sent.

To disable email notifications on a selected system:

- In the Enterprise View, select the system you want.
- In the Adaptec Storage Manager tool bar, click **Configure**, point to the system, then click **Email Notifications**.

The Email Notifications Manager opens.

- On the menu bar, click **Actions**, then click **Disable Email Notifications**.

Email notifications are disabled. The Email Notifications tab (shown at right) shows the red 'disabled' icon.



## Re-enabling Email Notifications

To re-enable email notifications, repeat Steps 1 and 2 in *Disabling Email Notifications*, selecting **Enable Notifications** during Step 2.

## Clearing the Email Notifications Log


The Email Notifications log displays status information and messages about the Email Notification Manager itself, such as whether email notifications were sent successfully or not. To make it easier to monitor recent events, you can clear the Email Notifications log on a selected system.

To clear the Email Notifications log:

- In the Enterprise View, select the system you want.
- On the tool bar, click **Configure**, point to the system, then click **Email Notifications**.

The Email Notifications Manager opens.

- On the menu bar, click **File**, select **Clear the event log**, then click **Email Notifications**.

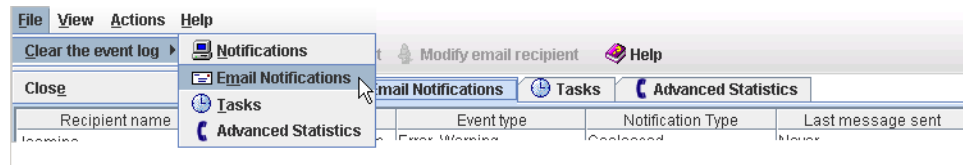

- Click **Yes** to clear the log.

The log is cleared.

## Notifying Users by SNMP Trap About Status and Activity

**Note:** Before attempting the tasks in this section, you should be familiar with SNMP traps concepts and technology.

If you are running Windows or Linux, you can use your operating system to monitor Simple Network Management Protocol (SNMP) traps in your storage space, such as disk drive failures and logical drive verifications. One system—typically the system where the GUI is installed—can receive SNMP trap notifications.

To configure SNMP support on:


- Windows, see the next section.
- Linux, see [page 119](#).

### Setting Up SNMP Notifications on Windows

**Note:** Be sure your Windows installation includes SNMP support. Some older versions of Windows do not install SNMP by default.

To install and configure SNMP support:

- From your desktop, open the Windows **Computer Management** tool, then select **Services** from the tree.

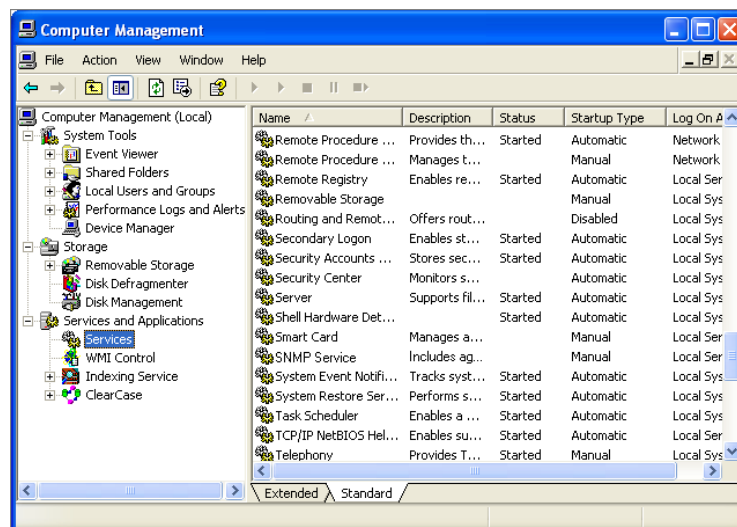

- Double-click **SNMP Service**.

The SNMP Service Properties window opens.

- 3 Click the **Traps** tab, then enter the IP address of each system on which you want to enable traps.
- 4 Click **OK**.
- 5 Start the SNMP service.

## Setting Up SNMP Notifications on Linux

For the Linux operating system, the Adaptec Storage Manager SNMP agent is a sub-agent that interfaces with the UCD-SNMP agentx architecture. UCD-SNMP is a third-party package for Linux; for information, documentation, and downloads, see [www.net-snmp.org](http://www.net-snmp.org).

To configure SNMP support:

- 1 Install Adaptec Storage Manager (see [page 20](#)).
- 2 Add Adaptec OID information and agentx extension information to the `snmp.conf`.
- 3 Delete `/var/agentx/master` (socket file for agentx).
- 4 Start the `snmpd` daemon and `agentx`.
- 5 Start `aus-snmpp` daemon.

Refer to your Linux documentation for information on configuring UCD-SNMP, agentx, and setting up traps.

## Notifying All Users About Status and Activity


You can set Adaptec Storage Manager to send status alerts about a specified system to all users who are logged into your storage space. You might want to do this if your storage space isn't managed by a dedicated person, or if that particular system is off-site or not connected to a monitor. Event alerts signal everyone working on the storage space that a system requires technical assistance.

When you set Adaptec Storage Manager to broadcast event alerts, *all* logged-in users receive messages about *all* types of events. In Windows, these alerts appear as pop-up messages; in all other operating systems, these alerts appear as console messages.

When enabled, event alerts occur independent of event notifications (see [page 108](#)) and email notifications (see [page 113](#)).

To enable event alerts:

- 1 In the Enterprise View, select the system you want.
- 1 On the tool bar, click **Configure**, point to the system you want, then click **General Settings**.

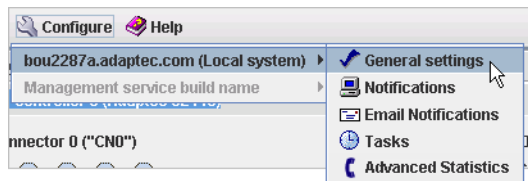

The Adaptec Storage Manager Agent General Settings window opens for that system. (See the figure on [page 132](#).)


- 2 Select **Broadcast events to logged-in users**, then click **Save changes**.
- 3 Restart Adaptec Storage Manager to apply the change.

## Changing an Operating System's Event Log Setting


In addition to the Adaptec Storage Manager event log, all Warning- and Error-level events on a system are recorded in its *operating system* event log. You can customize the level of events that are recorded, or you can disable operating system event logging.

To change or disable operating system event logging on a system:

- 1 In the Enterprise View, select the system.
- 2 In the tool bar, click **Configure**, point to the system, then click **General Settings**.

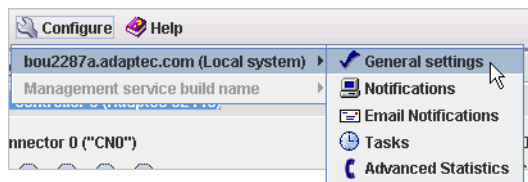

The Adaptec Storage Manager Agent General Settings window opens for the system you selected.

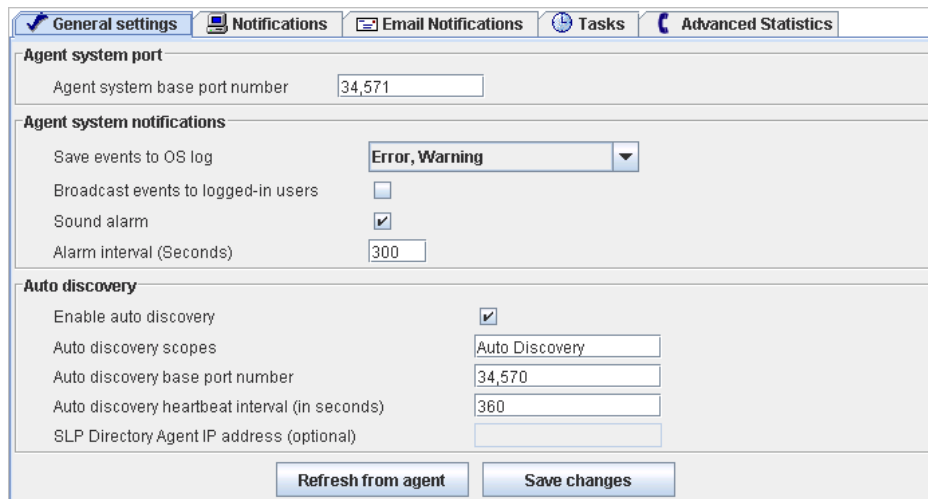

**Note:** You can access other utilities in this window, such as the Task Manager (see [Scheduling Recurring or Resource-Intensive Jobs on page 82](#)), by clicking their tabs.

- 3 In the Save events in OS log drop-down menu, select the type of event logging that you want, then click **Save changes**.
- 4 Restart Adaptec Storage Manager to apply the new setting.



## Logging Statistics for Remote Analysis

You can use Adaptec Storage Manager to gather advanced IO and usage statistics for the RAID controllers in your system. Periodically, you can choose to send the data to Adaptec by PMC Product Support, or another designated contact, for analysis. This feature is referred to as “call home.”

**Note:** In this release, call home support is not enabled in Adaptec Storage Manager. To gather statistics about your system for remote analysis, enable statistics logging as described in this section, then create a Call Home Support archive (see [page 125](#)). For more information, contact your Adaptec by PMC service representative.

The information gathered by Adaptec Storage Manager includes:

- Advanced IO and usage statistics for the controllers on your system, including maxCache caching statistics

**Note:** If you prefer not to gather statistics for a controller, you can disable statistics logging. See [Disabling Statistics Logging on a Controller on page 95](#).

- Controller configuration data, such as the number of logical drives, their RAID levels, and size
- Error log files

**Note:** Adaptec Storage Manager does not gather proprietary site information when logging statistics for remote analysis. In addition to logging IO and usage statistics, it gathers the same error log files and controller configuration data as the ASM support archive. For more information, see [Creating a Support Archive File on page 142](#); see also [Creating a Call Home Support Archive on page 125](#).

Follow the instructions in this section to:

- Set up the statistics logging frequency, reporting interval, and contact information (see next section).
- Configure proxy server settings (see [page 123](#)).
- Send a test message (see [page 123](#)).
- Disable/Enable call home messages (see [page 124](#)).
- Clear the Advanced Statistics Manager event log (see [page 124](#)).
- Create a call home support archive (see [page 125](#)).
- View the statistics for a controller, hard drive, SSD, or logical drive (see [page 125](#)).


### Setting Up Statistics Logging

This section describes how to set up statistics logging for the controllers in your system, including logging frequency, reporting interval, and contact information. The logging frequency is the rate at which IO statistics are read from the controller. The reporting interval determines how often Adaptec Storage Manager sends the data to your contacts.

**Note:** Typically, you enable statistics logging the first time you log in to Adaptec Storage Manager. If you haven't enabled statistics logging, follow the instructions on [page 124](#), then continue with the instructions below.


To set up statistics logging for a system:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Advanced Statistics**.

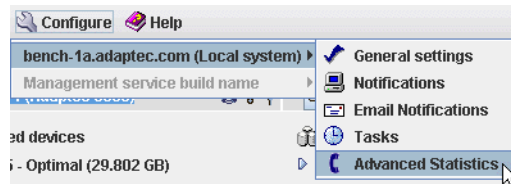

The Advanced Statistics Manager window opens.

Advanced Statistics Manager on Advanced Statistics Tab

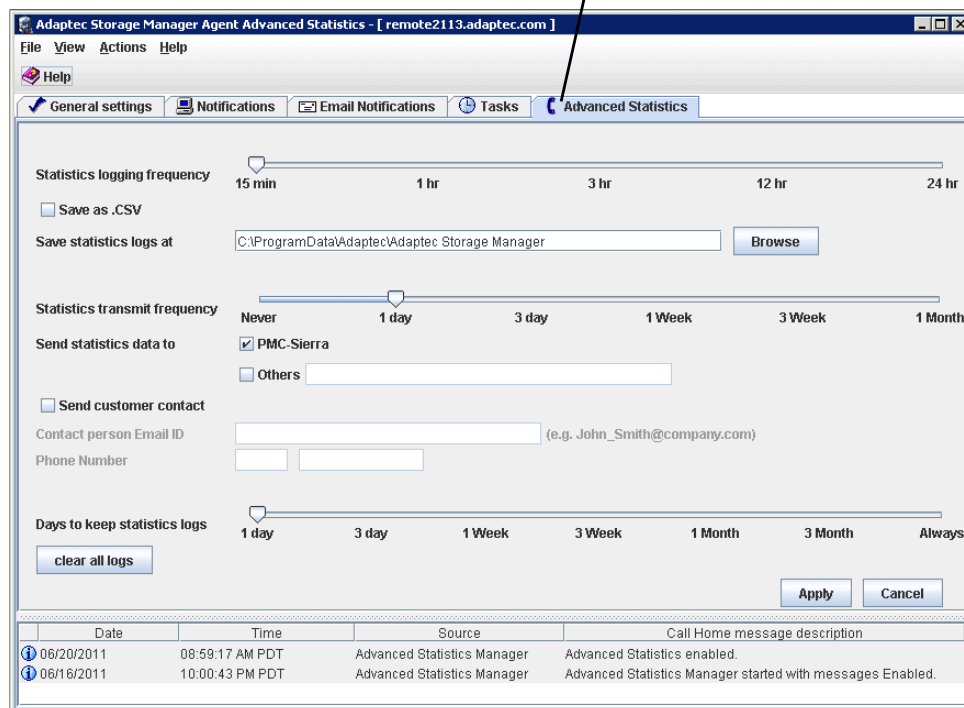

- 3 Adjust the Statistics logging frequency slider. (The default is 15 minutes.) Select **Save as .CSV** to save the statistics logs in both CSV and XML format; the default is XML only.
  - 4 Enter the location where you want to save the statistics logs or use the default location. Click **Browse** to select a location in your file system.
  - 5 Adjust the Statistics transmission frequency slider. (The default is 1 day.)
  - 6 In the Send statistics to field, select **PMC-Sierra** and/or **Others**. If you select **Others**, enter the data center URL in the text box.
- Note:** In this release, the Send statistics to field is ignored. See [page 121](#) for more information.
- 7 To send customer contact information along with the statistics logs, click **Send customer contact**, then enter the contact's email address and phone number.

- 8 Adjust the Days to keep statistics logs slider. (The default is 1 day.)
- 9 Click **Apply**.

**Note:** To delete the statistics logs, click **Clear all logs**, then click **Yes** to confirm.


## Configuring Proxy Server Settings

Adaptec Storage Manager uses the Internet to send statistics to your designated contacts. If your network uses a proxy server to access the Internet, you must provide your proxy server connection settings.

To configure your proxy server connection settings:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Advanced Statistics**.  
The Advanced Statistics Manager opens.
- 3 On the menu bar, select **Actions**, then click **Call Home connection settings**.

The Call Home connection settings window opens.

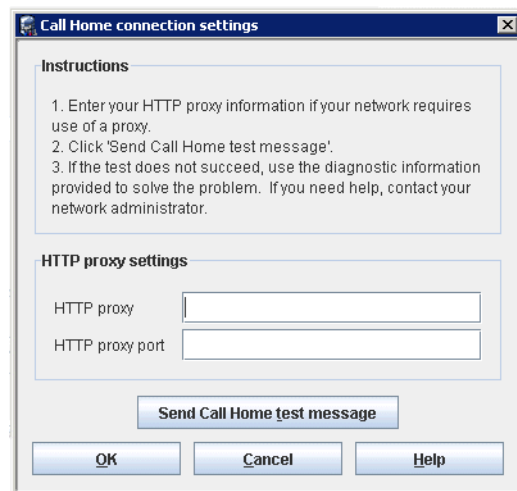

- 4 Enter your HTTP proxy server name and port number.
- 5 Click **OK**.

## Sending a Test Message

To ensure that your contacts are receiving logged statistics, you can send a test message.

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Advanced Statistics**.  
The Advanced Statistics Manager opens.
- 3 On the menu bar, select **Actions**, then click **Call Home connection settings**.

The Call Home connection settings window opens.

- 4 Click **Send Call Home test message**. A message appears indicating either that the test message was sent successfully or that the test failed.

Click **OK** to clear the message, then click **Cancel** to close the Call Home connection settings window.

**Note:** If the test fails, try opening port 80. If the test continues to fail, your system administrator may need to add the Adaptec Storage Manager Agent to your proxy server's white list.

## Disabling Call Home Messages

If you prefer not to send statistics to Adaptec or other contacts, you can disable call home messages. Adaptec Storage Manager will continue to collect statistics but will not send them to your contacts for analysis.


To disable call home messages on a system:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Advanced Statistics**.

The Advanced Statistics Manager opens.

- 3 On the menu bar, click **Actions**, then click **Disable Advanced Statistics**.

Call home messages are disabled. The Advanced Statistics tab (shown at right) shows the red 'disabled' icon.

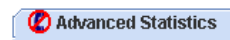

## Re-Enabling Call Home Messages

To re-enable call home messages, repeat steps 1 and 2 in *Disabling Call Home Messages*, selecting **Enable Advanced Statistics** during Step 3.

## Clearing the Advanced Statistics Manager Event Log


The bottom panel of the Advanced Statistics Manager displays status information and messages about the Advanced Statistics Manager itself, such as whether call home messages were sent successfully or not. To make it easier to monitor recent events, you can clear the log on a selected system.

To clear the Advanced Statistics Manager event log:

- 1 In the Enterprise View, select the system you want.
- 2 On the tool bar, click **Configure**, point to the system, then click **Advanced Statistics**.

The Advanced Statistics Manager opens.

- 3 On the menu bar, click **File**, select **Clear the event log**, then click **Advanced Statistics**.

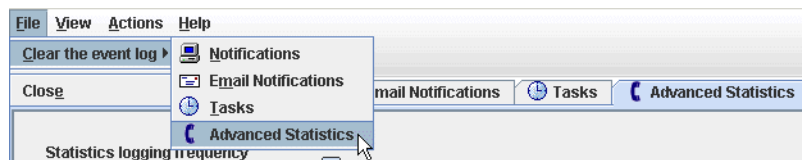

- 4 Click **Yes** to clear the log.

The log is cleared.



# Updating and Customizing Adaptec Storage Manager

# 10

## In this chapter...

Updating Adaptec Storage Manager.....	127
Setting Preferences and Changing Views .....	127
Managing Remote Systems .....	129
Working with Display Groups .....	133

This chapter explains how to customize Adaptec Storage Manager as your requirements change and update it as new versions become available.

## Updating Adaptec Storage Manager

When newer versions of Adaptec Storage Manager become available, you can update your storage space, if required.

Newer versions of Adaptec Storage Manager can be downloaded from the Adaptec Web site at [www.adaptec.com](http://www.adaptec.com).

If a newer version of Adaptec Storage Manager includes features that are incompatible with an earlier version and therefore isn't "downgradeable" after installation, you will be notified by Adaptec Storage Manager before the installation begins.

**Note:** If a previous version of Adaptec Storage Manager is installed on your system, you must remove it before installing a new version.

## Setting Preferences and Changing Views

Change display settings, and add or remove features from the Adaptec Storage Manager main window to make managing your IP SAN easier and more effective.

**Note:** The tasks described in this section are optional.

You can customize Adaptec Storage Manager by:

- Reorganizing the Enterprise view tree (see the next section).
- Selecting the standard unit of measure shown for disk drives (see [page 128](#)).
- Excluding the tool bar or status bar from the main window, or turning off the Tool Tips (see [page 129](#)).

### Reorganizing the Enterprise View

You can reorganize the Enterprise view tree to suit your needs.

You can set Adaptec Storage Manager to sort systems in the Enterprise View alphabetically or chronologically. (By default, systems are listed in alphabetical order.)


To reorganize the Enterprise View:

- 1 In the menu bar of the main window, select **File**, then click **Preferences**.

The User Preferences window opens.

---

- Click the **Display options** tab.

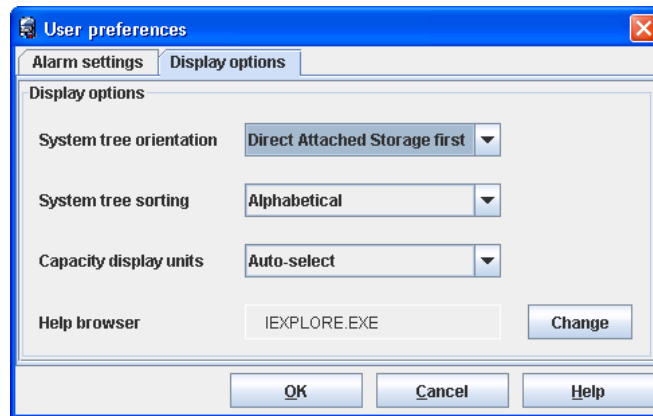

- Change the **System tree sorting** or **System tree orientation** setting as required, then click **OK**.

**Note:** The local system always appears first when you sort objects alphabetically.

The changes are applied immediately.


## Setting the Standard Unit of Measure

You can set Adaptec Storage Manager to show disk drive capacity in measures of megabytes (MB), gigabytes (GB), or terabytes (TB).

You can choose the Auto-select setting to allow Adaptec Storage Manager to show the most appropriate unit of measure based on disk drive size. This option allows different disk drives to be shown in different units of measure. By default, disk drives are shown in GB.

To change the standard unit of measure:

- In the menu bar of the main window, select **File**, then click **Preferences**.
- Click the **Display options** tab.
- In the **Capacity display units** drop-down menu, select the option you want.

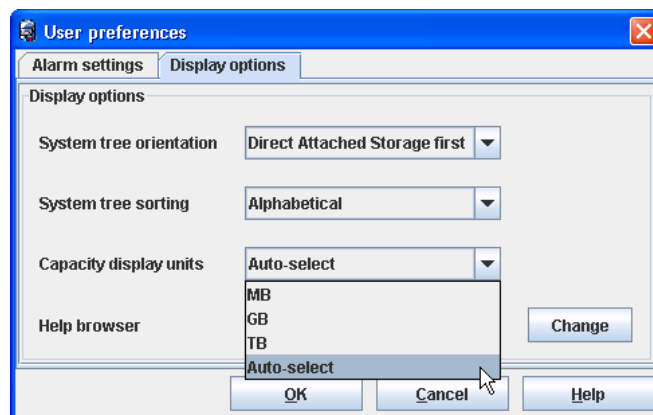

- Click **OK**.

The change is applied immediately.



## Changing the Main Window Appearance

You can choose to remove the tool bar and status bar from the main Adaptec Storage Manager window to save space on-screen. You can also choose to turn off the Tool Tips that automatically appear when you place your cursor over on-screen items.

To change the appearance of the main window, in the menu bar select View. The options in the View menu are toggle switches, which means they can be selected and deselected by clicking them.

## Managing Remote Systems

Adaptec Storage Manager has a wizard to help you manage the remote systems in your storage space. The wizard simplifies the process of connecting to remote systems from the local system and adding them to the Enterprise View.

When you start Adaptec Storage Manager, an “auto-discovery” task runs in the background, continuously searching your network for systems running the Adaptec Storage Manager Agent. The wizard presents a list of discovered systems. You can select systems to add to the Enterprise View when you start Adaptec Storage Manager. You can also remove systems you no longer want to manage.

### Adding and Removing Remote Systems in the Wizard

This section describes how to add or remove discovered systems in the Remote systems wizard. When you add systems, you can set up a group login to connect to all selected systems with a single user name and password. You can also add discovered systems to the Enterprise View without logging in.


To add or remove remote systems in the wizard:

- 1 In the Enterprise View, select **Direct Attached Storage**.
- 2 From the **Actions** menu, select **Manage Remote Systems**.

The wizard opens.


---

- 3 Select the discovered systems you want to add to the Enterprise View, then click **Add**. Click **Add All** to select all discovered systems.

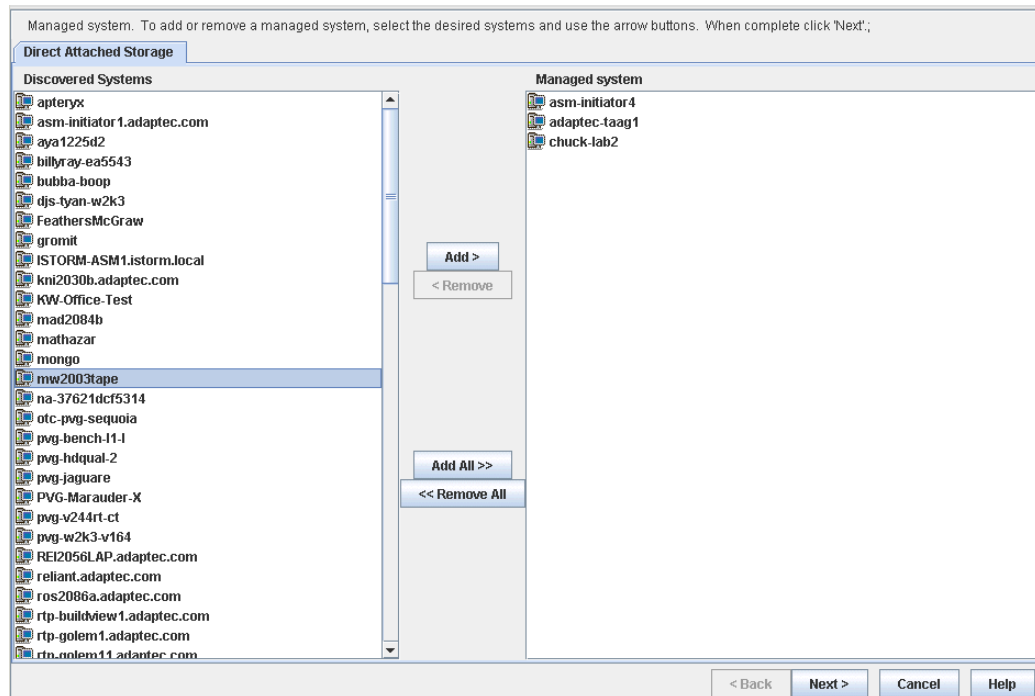


To remove a system from the Enterprise View that you no longer want to manage, select it from the Managed systems list, then click **Remove**. Click **Remove All** to remove all managed systems.


- 4 Click **Next**, review the Managed systems summary, then click **Apply**.

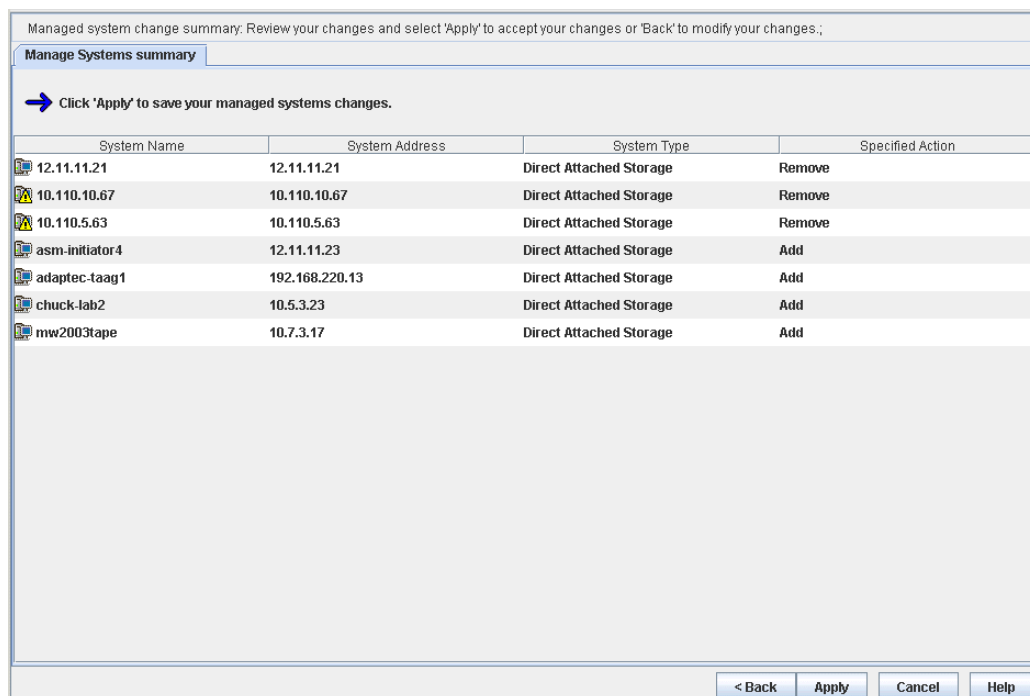

- 5 If you removed systems that you no longer want to manage, the Removing systems window opens. To continue receiving events from these systems, select **Continue to receive events from remote system(s)** from the drop-down list; otherwise, select **Do not continue to receive events from remote system(s)**. Then, click OK.

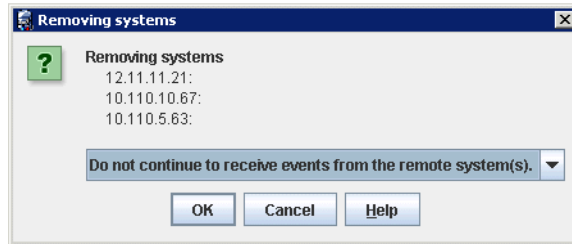

- 6 If you added systems, Adaptec Storage Manager prompts you to enter login credentials for the selected systems. In the Login to managed system window, enter a user name and password if security is enabled on the remote systems. Select **Login to all selected systems with this username and password** to use the same username/password combination for all selected systems. (You will be prompted to login to each remote system individually if you do not choose this option.) Select **Save username/password** to use the same login credentials each time you start Adaptec Storage Manager.

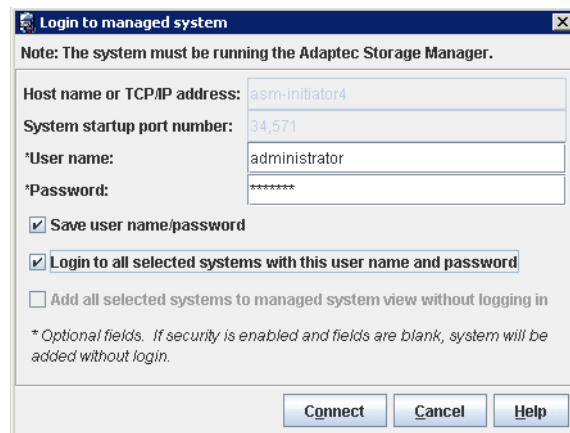

To add all selected systems to the Enterprise view without logging in, select **Add all selected systems to managed system view without logging in**. Choosing this option causes all other options to be grayed out.

- 7 Click **Connect**. The wizard closes and the selected systems are added to the Enterprise View.

**Note:** Adaptec Storage Manager adds all selected systems to the Enterprise view even if login fails on some systems. For those systems, try logging in again with different credentials.


## Changing Auto-Discovery Settings

Auto-discovery, in Adaptec Storage Manager, is enabled by default. The auto-discovery task runs in the background each time Adaptec Storage Manager is started. You can disable auto-discovery if desired, and configure the auto-discovery settings described below.


To change auto-discovery settings on a system:

- 1 In the Enterprise View, select the local system.

- 2 In the tool bar, click **Configure**, point to the system, then click **General Settings**.

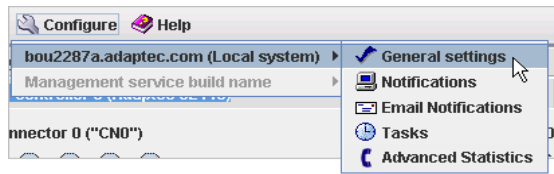

The Adaptec Storage Manager Agent General Settings window opens for the system you selected. The auto-discovery settings appear at the bottom:

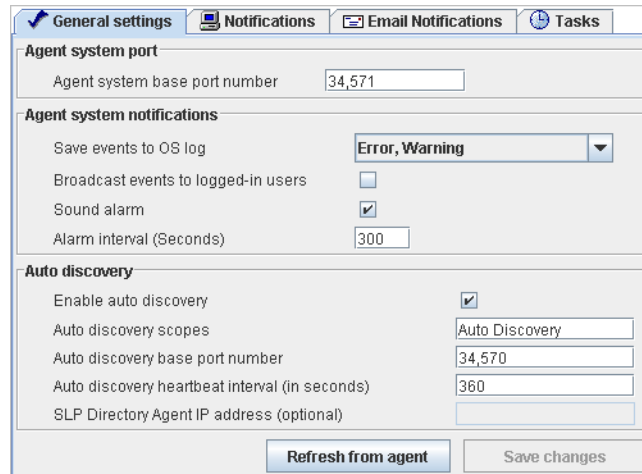

- 3 To enable/disable auto-discovery, select **Enable auto-discovery**. (This option toggles between enabled and disabled.)
- 4 Update the auto-discovery settings, as required:
  - In the **Auto discovery scopes** field, enter a comma-separated list of scopes. To be discovered by the auto-discovery task, the local system and remote system must have at least one scope in common. The default scope for an Adaptec Storage Manager Agent is Auto Discovery.
  - In the **Auto discovery base port number** field, enter the port's TCP/IP address. You can use any port for auto-discovery. However, to use an existing SLP infrastructure, you must use port 427. The default port is 34570. If you change the port, you must restart the Adaptec Storage Manager Agent for the change to take effect.
  - In the **Auto discovery heartbeat interval** field, enter the number of seconds between each auto-discovery check. This number determines how often Adaptec Storage Manager checks for changes in remote system resources. The default is 360 seconds.
  - In the **SLP Directory Agent address** field, enter the TCP/IP address of the SLP Directory Agent. Applies only if you specified port 427 for an existing SLP infrastructure.
- 5 Click **Save Changes**.

## Working with Display Groups

You can organize related local and remote systems into display groups within the Enterprise View to make monitoring and modifying your storage space faster, easier, and more efficient.

Once display groups are created, they're sorted alphabetically and appear in the Enterprise View below any systems that are not part of a display group.

A system can belong to only one display group at a time; you can't include the same system in multiple display groups.

Follow the instructions in this section to:

- Create display groups (see the next section).
- View display group properties (see [page 134](#)).
- Move a system from one group to another (see [page 135](#)).
- Rename a display group ([page 135](#)).
- Remove a system from a display group ([page 135](#)).
- Delete a display group ([page 135](#)).


### Creating Display Groups

You can organize related local and remote systems into display groups to make managing your storage space easier and more effective.


Systems in a display group appear together in the Enterprise View under the group name.

To create a display group:


- 1 In the Enterprise View, right-click on a system that you want to add to a display group, select **Change display group**, then click **New group**.

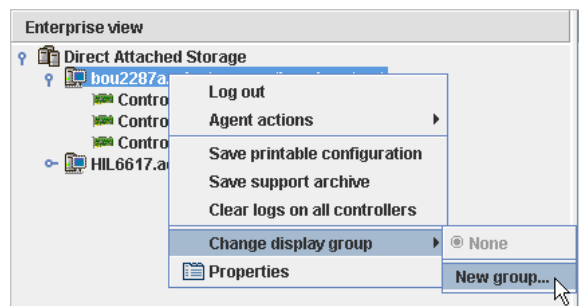


- 2 Enter a name for the new display group, then click OK.

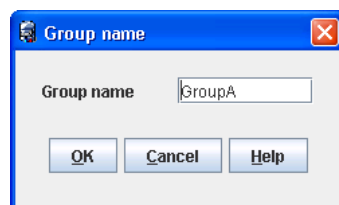


The display group is created and the system you selected in [Step 1](#) is added to it.

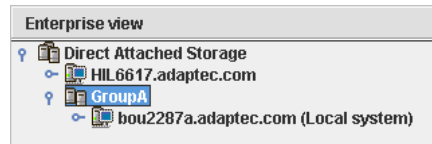

- 3 To add another system to the display group, repeat right-click on that system in the Enterprise View, select **Change display group**, then click the display group name.

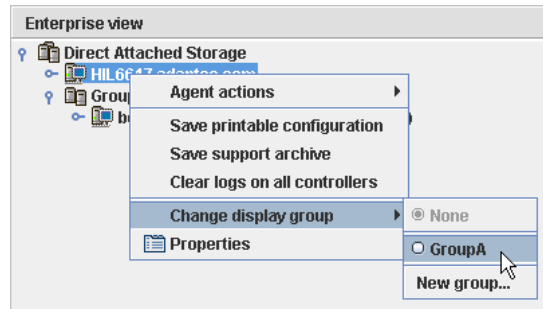

The system is added to the display group.

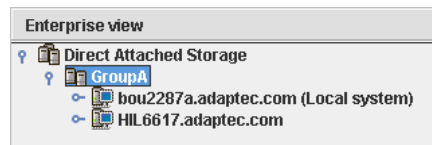


**Note:** A system can belong to only one display group at a time; you can't include the same system in multiple display groups.

## Viewing Display Group Status

To quickly view the status of systems within a display group, you can open the display group Properties window.

In the Enterprise View, right-click on the display group, then click **Properties**. The Properties window opens for that display group, summarizing the status of the systems that belong to that group.

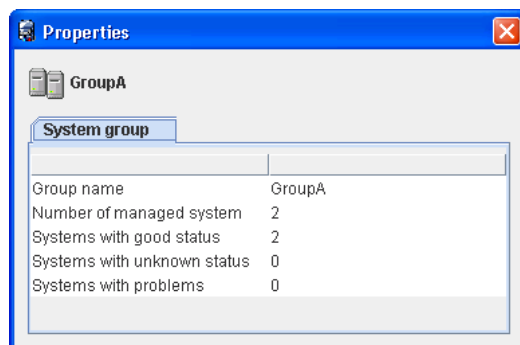

## Moving a System from One Display Group to Another

To move a system from one display group to another:

- 1 In the Enterprise View, right-click the system you want to move.
- 2 Select **Change display group**, then click the name of the display group you want.

The system moves to its new display group.

## Renaming a Display Group

You can make managing your storage space easier and more efficient by giving your display groups meaningful names. To rename a display group:

- 1 In the Enterprise View, right-click on the display group, then click **Rename display group**.
- 2 Enter a new name for the display group, then click OK.

The Enterprise View shows the new name of the display group.

## Removing a System from a Display Group

To remove a system from a display group:

- 1 In the Enterprise View, right-click the system you want to remove.
- 2 Select **Change display group**, then click **None**.

The system is removed from the display group.

**Note:** Systems that are *not* part of display groups are listed at the top of the Enterprise View, above any display groups.

## Deleting a Display Group

If required, you can delete a display group. When you delete the display group, the systems that belonged to it are listed at the top of the Enterprise View, above any remaining display groups.

To delete a display group:

- 1 In the Enterprise View, right-click on the display group.
- 2 Click **Delete display group**.

The display group is deleted and the systems that belonged to it are no longer grouped together in the Enterprise View.

---

# Solving Problems

# 11

## In this chapter...

General Troubleshooting Tips .....	137
Identifying a Failed or Failing Component.....	137
Stopping the Creation of a New Logical Drive .....	138
Recovering from a Disk Drive Failure .....	138
Rebuilding Logical Drives .....	141
Solving Notification Problems.....	142
Creating a Support Archive File.....	142
Understanding Error and Warning Messages .....	143



## General Troubleshooting Tips


If you experience problems installing or using Adaptec Storage Manager, follow these suggestions:

- Ensure that you are logged in to Adaptec Storage Manager at the permission level you need to perform the tasks you want. (See [page 27](#) for more information.)
- Ensure that all managed systems are powered on and that you are logged in to any remote systems you want to manage. (See [page 32](#) for more information.)
- Check all cable connections.
- Try uninstalling and reinstalling Adaptec Storage Manager.

## Identifying a Failed or Failing Component


When you are notified of a Warning- or Error-level event, use Adaptec Storage Manager's rapid fault isolation feature to quickly identify the source of the problem.

For instance, in this example, a disk drive has failed. To find the failed disk drive, follow the yellow Error icons:

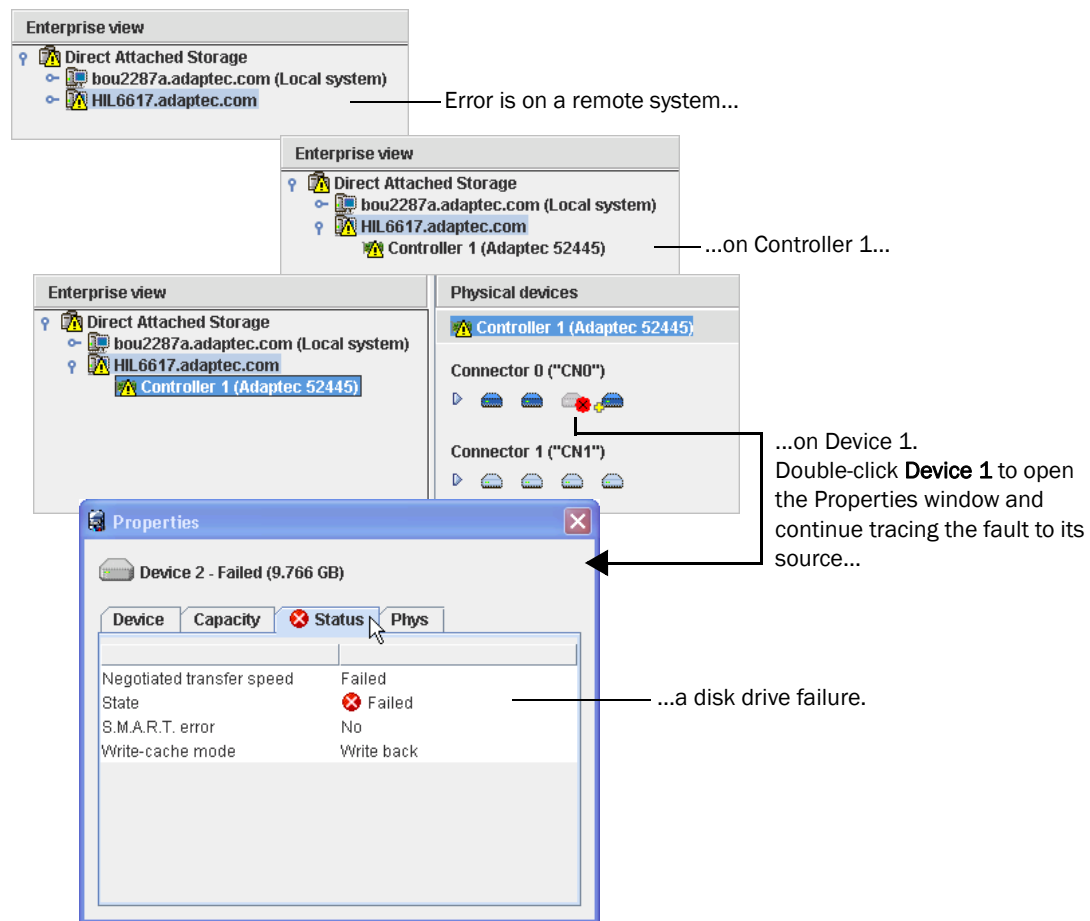

## Stopping the Creation of a New Logical Drive

To stop the creation of a new logical drive, right-click on the magnifying glass icon, then select **Stop current task**. You can also change the priority of the build task to High, Medium, or Low by selecting **Change background task priority** from the same right-click menu.

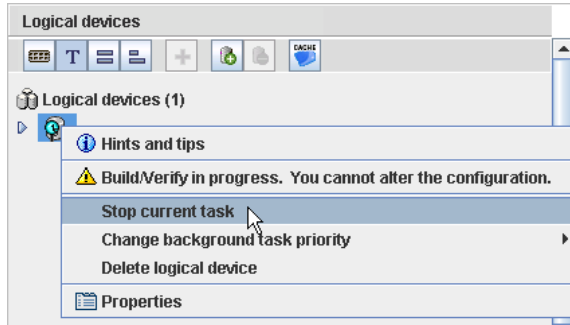

## Recovering from a Disk Drive Failure

When a disk drive or SSD fails for any reason, it is represented in Adaptec Storage Manager with a red X, as shown at right.




This section explains how to recover when a disk drive or SSD fails:

- If the logical drive was protected by a hot spare (see the following section).
- If the logical drive was *not* protected by a hot spare (see [page 139](#)).
- If there is a disk drive failure in more than one logical drive simultaneously (see [page 139](#)).
- If it is a RAID 0 logical drive (see [page 139](#)).
- If multiple disk drives fail within the same logical drive (see [page 140](#)).
- If you want to force a logical drive with multiple drive failures back online (see [page 141](#)).

### Failed Disk Drive Protected by a Hot Spare

When a logical drive is protected by a hot spare, if a disk drive in that logical drive fails the hot spare is automatically incorporated into the logical drive and takes over for the failed drive.

For instance, when a disk drive fails in the RAID 5 logical drive shown in the next example, the logical drive is automatically *rebuilt* (its data is reconstructed) using the hot spare in place of the failed drive. You can access the logical drive while it's rebuilding.

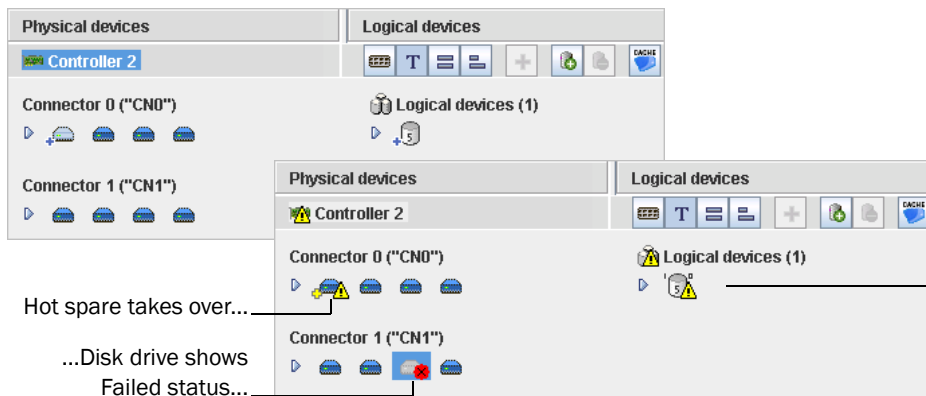

Hot spare takes over...

...Disk drive shows  
Failed status...

...and logical  
drive is rebuilt  
with hot spare.

**Note:** A hot spare icon changes from light-blue to dark-blue when it becomes part of a logical drive.

To recover from the failure:


- 1 Remove and replace the failed disk drive (following manufacturer's instructions).
- 2 *If copyback is not enabled*—Remove the 'hot spare' designation from the original hot spare (the disk drive that was built into the logical drive). See [page 57](#) for instructions. Then, designate a new hot spare to protect the logical drives on that controller.

*If copyback is enabled*—Data is automatically moved back to its original location once the controller detects that the failed drive has been replaced. No action is required. See [Enabling Copyback on page 58](#) for more information.

## Failed Disk Drive Not Protected by a Hot Spare

When a logical drive is not protected by a hot spare, if a disk drive in that logical drive fails, remove and replace the failed disk drive. The controller detects the new disk drive and begins to rebuild the logical drive. You can access the logical drive while it's rebuilding.

For instance, when one of the disk drives fails in the RAID 1 logical drive shown in the next example, the logical drive is *not* automatically rebuilt. The failed disk drive must be removed and replaced before the logical drive can be rebuilt.

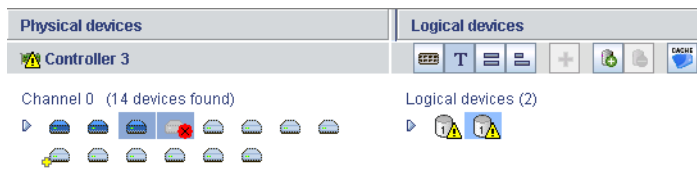

If the controller fails to rebuild the logical drive, check that the cables, disk drives, and controllers are properly installed and connected. Then, if necessary, follow the instructions in [Rebuilding Logical Drives on page 141](#).

## Failure in Multiple Logical Drives Simultaneously

If there's a disk drive failure in more than one logical drive at the same time (one failure per logical drive), and the logical drives have hot spares protecting them, the controller rebuilds the logical drives with these limitations:

- A hot spare must be of equal or greater size than the failed disk drive it's replacing.
- Failed disk drives are replaced with hot spares in the order in which they failed. (The logical drive that includes the disk drive that failed first is rebuilt first, assuming an appropriate hot spare is available—see the previous bullet.)

If there are more disk drive failures than hot spares, see [Failed Disk Drive Not Protected by a Hot Spare on page 139](#).

If copyback is enabled, data is moved back to its original location once the controller detects that the failed drive has been replaced. See [Enabling Copyback on page 58](#) for more information.

## Disk Drive Failure in a RAID 0 Logical Drive

Because RAID 0 volumes do not include redundancy, if a disk drive fails in a RAID 0 logical drive, the data can't be recovered.

Correct the cause of the failure or replace the failed disk drives. Then, restore your data (if available).

## Multiple Disk Drive Failures in the Same Logical Drive


If multiple disk drives fail in the same logical drive, you *may* be able to recover the data by recreating the logical drive in the wizard *without* the initialization step. Omitting the initialization step reconstructs the logical drive metadata without modifying or destroying any other data on the disks.

**Note:** RAID 6 and RAID 60 logical drives support two simultaneous disk drive failures (see [page 161](#)). In some instances, RAID 10 and RAID 50 logical drives *may* survive multiple disk drive failures, depending on which disk drives fail. See [Selecting the Best RAID Level on page 153](#) for more information.

**Caution:** This procedure is not guaranteed to successfully recover your logical drive. The preferred and surest way to recover your data is to restore the failed logical drive from backup.

To recreate the logical drive after multiple drive failures:

- 1 Start the logical drive wizard, select **Custom**, then click **Next**.
- 2 Choose the same RAID level as the original logical drive, then click **Next**.
- 3 Select the same set of disk drives as the original logical drive.
- 4 Ensure that all **Advanced settings** are the same as the original logical drive, click **Skip initialization**, then click **Next**.

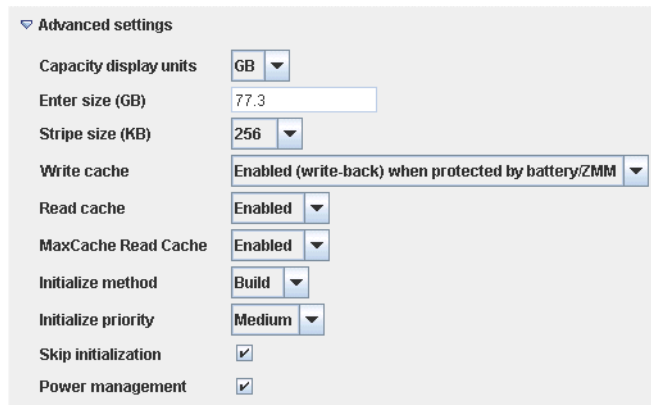

The screenshot shows the 'Advanced settings' panel with the following configurations:

- Capacity display units: GB
- Enter size (GB): 77.3
- Stripe size (KB): 256
- Write cache: Enabled (write-back) when protected by battery/ZMM
- Read cache: Enabled
- MaxCache Read Cache: Enabled
- Initialize method: Build
- Initialize priority: Medium
- Skip initialization: ☒
- Power management: ☒

- 5 Click **Yes** to confirm that you do not want to initialize the logical drive.
- 6 Click **Apply**, then click **Yes**.


Adaptec Storage Manager begins building the logical drive.

- 7 Check the logical drive for data and file system integrity. If you still cannot access the data, initialize the *physical* drives (to erase the metadata), then rebuild the logical drive again without initialization, selecting the disk drives in a different *order* in [Step 3](#). You may need to try several different “stripe orders” before you can recover the data.

**Note:** In the Properties panel, uninitialized logical drives have the status “created without initialization”.

## Forcing a Logical Drive with Multiple Drive Failures Back Online

If multiple disk drives fail in the same logical drive, you *may* be able to recover the data by forcing the logical drive back online. For instance, if two drives fail in a RAID 5, forcing it online may allow you to access the data, depending on which disk drives failed.

 **Caution:** This procedure is not guaranteed to successfully recover your logical drive. The preferred and surest way to recover your data is to restore the failed logical drive from backup. Before using this procedure, check all connectors (cables, power, and so on), then try restoring the logical drive by performing a bus rescan or restarting the server.

To force a logical drive online:

- 1 In the Logical Devices View, select the failed logical drive.
- 2 In the menu bar, select **Actions**, then click **Force online**.
- 3 Click **Yes** to confirm, then click **OK**.
- 4 If Adaptec Storage Manager successfully forces the logical drive online, check it for data and file system integrity. If some disks are still missing from the logical drive, reinsert or replace them and allow Adaptec Storage Manager to rebuild the logical drive. Then verify that drive status has returned to Optimal.

**Note:** If the operation fails, follow the on-screen prompts to try the Advanced options for forcing the logical drive online. Only expert users should try the Advanced options.

## Removing a Failed Disk Drive's Icon

**Note:** You can only complete this task on disk drives that are not included in any logical drive.

When a disk drive fails, it may still appear in Adaptec Storage Manager although it is no longer available. To see an accurate representation of your storage space and make it easier to monitor your disk drives, you can remove a failed disk drive from the Physical Devices View.

In the Physical Devices View, right-click the failed disk drive, then click **Remove failed drive**.

## Rebuilding Logical Drives

A *hot-swap rebuild* occurs when a controller detects that a failed disk drive in a logical drive has been removed and then reinserted.

To start a hot-swap rebuild:

- 1 Following manufacturer's instructions, gently pull the failed disk drive from the server without fully removing it, then wait for it to spin down fully before continuing.
- 2 If there is nothing wrong with the disk drive, reinstall it, following manufacturer's instructions.

If necessary, replace the failed disk drive with a new disk drive of equal or larger size.

- 3 The controller detects the reinserted (or new) disk drive and begins to rebuild the logical drive.

## Solving Notification Problems

To test notifications on your storage space, you can send test events or emails to ensure that they're being received properly.

If your test event fails:

- 1 Ensure that the remote system is powered on and running Adaptec Storage Manager.
- 2 Open the remote system's System Properties window (see [Step 4 on page 111](#)) and double-check the TCP/IP address and port number.
- 3 Try sending the test event again.

If your test email fails:

- 1 Ensure that the recipient's email address is correct. (See [Modifying Recipient Information or Removing a Recipient on page 116](#) to modify the address.)
- 2 Ensure that your SMTP server address is correct. (See [Modifying Email Settings on page 116](#) to modify the address.)
- 3 Try sending the test message again.

## Creating a Support Archive File

Your Adaptec Storage Manager service representative might ask you to create a configuration and status information archive file to help diagnose a problem with your system.

To create the archive file:

- 1 In the Enterprise View, click the local or remote system on which the problem is occurring.
  - 2 In the menu bar, select **Actions**, then click **Save support archive**.
  - 3 Enter a name for the archive file or accept the default name, then click **Save**.
-

## Understanding Error and Warning Messages

This section provides detailed information about error and warning events that occur in Adaptec Storage Manager.

### Warning Messages

Warning	Warning Message Text
ArrayCritical	Ready disk drives are still available
HotSpareTooSmall	The hot spare is too small to protect the specified array
HotSpareWontWork	At least one logical drive is not protected by the specified hot spare
InitLD	Hot spare is too small for use by at least one array
NoService	The specified logical drive was not initialized
SyncLD	Could not contact Adaptec Storage Manager Agent. Adaptec Storage Manager may not function correctly. Please start the Agent.

### Error Messages

Error	Error Message Text
AbortTask	Could not stop the specified currently running task
AccessControl	Could not write the logical drive access control list
AddToDiskSet	Could not add drives to the specified diskset
AgentRemoved	Could not remove the specified Agent
ArrayInUse	Could not delete the specified array. One or more initiators are logged into a logical drive(s) contained within this array
ArraysInUse	Could not delete all of the specified arrays. One or more initiators are logged into a logical drive(s) contained within this array
BreakRemoteMirror	Could not break the specified remote mirror facet
CalibrateBatteryController	Could not recalibrate the specified battery
ChangeArrayName	Could not change the name of the specified array
ChangeBIOSMode	Could not change the BIOS-compatibility mapping
ChangeDiskSetName	Could not change the name of diskset
ChangeLogicalLun	Could not change the LUN of the specified logical drive

Error	Error Message Text
ChangeLogicalName	Could not change the name of the specified logical drive
ChangeNtpServer	Could not update the specified NTP server
ChangeTimeDate	Could not change the date and time
ChgAlarm	Could not change the alarm setting
ChgDataScrubRate	Could not change the background consistency check rate
ChgRebuildRate	Could not change the rebuild rate
ChgSCSIxferSpeed	Could not change the SCSI transfer speed
ChgStripeSize	Could not change the specified stripe size
ChgTaskPriority	Could not change task priority
ClearAdapterLogsFail	Could not clear the event logs for the specified system
ClearEnclosureLogsFail	Could not clear the event logs for specified enclosure
ClearHardDrive	Clear failed to start for the specified disk drive
CommFailure	You must re-establish communication with specified system
CommFailure1	Restart the Adaptec Storage Manager Agent to establish communication with the local system
ControllerRescan	Could not rescan for the specified controller
ControllerRestart	Could not restart the specified controller
ControllerShutDown	Could not shut down the specified controller
CreateDiskSet	Could not create the diskset
CreateLDError	There was an error creating specified logical drive
CreateSimpleVolume	Could not create a simple volume
DataScrub	Could not change the background consistency check mode
DDDDAdInternal	Failed drive—Controller internal failure
DDDDDeviceNotFound	Failed drive—Device not found
DDDDDeviceNotReady	Failed drive—Specified device will not come ready
DDDDDriveAddedToSystem	Failed drive—Specified disk drive added to server
DDDDDriveNotBelong1	Failed drive—Specified disk drive does not belong
DDDDDriveNotBelong2	Failed drive—Specified disk drive does not belong
DDDDDriveNotFound	Failed drive—Specified disk drive not found
DDDDDriveNotPartOfCluster	Failed drive—Specified disk drive is not part of the cluster



Error	Error Message Text
DDDDHardwareError	Failed drive—Internal hardware error
DDDDInternalHW	Failed drive—Internal hardware error
DDDDIOSubSystem1	Failed drive—I/O subsystem error
DDDDIOSubSystem2	Failed drive—I/O subsystem error
DDDDIOSubSystem3	Failed drive—I/O subsystem error
DDDDSCSI1	Failed drive—SCSI error
DDDDSCSI2	Failed drive—SCSI error
DDDDSCSI3	Failed drive—SCSI error
DDDDSCSIBusParity	Failed drive—SCSI bus parity error
DDDDSCSIBusTest	Failed drive—SCSI bus test error
DDDDSCSIChanNotOperational	Failed drive—SCSI channel is not operational
DDDDSCSIErrUnknown	Failed drive—Unknown SCSI error
DDDDUnknownDriveFound	Failed drive—Unknown disk drive on controller
DDDDUnknownDriveInCluster	Failed drive—Unknown disk drive in cluster
DDDDUnknownSASError	Failed drive—Unknown SAS error
DDDDUserAcceptedInitChange	Failed drive—User accepted
DDDDUserMarked	Failed drive—User marked 'failed'
DDDDUserMarkedFailed	Failed drive—User marked 'failed'
DeleteArray	Could not delete the specified array
DeleteArrays	Could not delete all of the specified arrays
DeleteDiskSet	Could not delete the diskset
DeleteHArray	Could not delete the specified spanned array
DeleteLogDrive	Could not delete the specified logical drive
DisCopyBackMode	Could not disable copy back mode
DisReadCache	Could not disable read cache
DisUnattendedMode	Could not disable unattended mode
DisWriteCache	Could not disable write cache
EnclosureRestart	Could not restart the specified enclosure
EnclosureShutDown	Could not shut down the specified enclosure

Error	Error Message Text
EnCopyBackMode	Could not enable copy back mode
EnReadCache	Could not enable read cache
EnUnattendedMode	Could not enable unattended mode
EnWriteCache	Could not enable write cache
EventNotSent	Could not send the event to the system
ExportedArray	Could not export the specified array
FactoryDefault	Could not restore the configuration to the factory-default settings
FailbackDiskSet	Could not move diskset
FailedAtPort	Adaptec Storage Manager failed to start at specified port number
FailedSelfTest	Specified self-test problem code was returned from specified controller, channel, SCSI ID, S/N
FailedSelfTestStart	One or more of the selected disk drives failed to execute the self-test. View the RaidErrA.log file on the Adaptec Storage Manager Agent for details
FailedToConnect	Failed to connect to specified host name at specified port number
FailedToReadNOT	Failed to read the notification list file
FailedToReadSEC	Failed to read the user accounts file
FailIncompatible	Failed to connect to the specified host name due to incompatible software versions
FailOver	Could not fail from the active device to the passive device
FailoverDiskSet	Could not move diskset
HostList	Could not write the host initiator list
HotSwap	Could not enable the automatic rebuild on replacement operation
ImageSelect	Could not change the firmware to the specified boot image
ImportConfig	Could not copy the configuration from the specified drives
ImportedArray	Could not import the specified array
IncreaseLogDrive	Could not increase the size of the specified logical drive
InitHardDrive	Could not initialize the specified disk drive
InitLogDrive	Could not initialize the specified logical drive
KillOtherController	Could not kill other controller
LDM	Could not start the specified logical drive reconfiguration
LogIn	The user could not be logged in

Error	Error Message Text
LogOut	The user could not be logged out
MaybeReadCache	Could not set read cache mode to 'enabled when protected by battery'
MaybeWriteCache	Could not set write cache mode to 'enabled when protected by battery'
MergeOwnNS	Could not copy the configuration from the non-shared logical drives
Rebuild	Could not set the drive to the specified rebuild state
RemoveAHS	Could not delete the dedicated hot spare drive
RemoveFromDiskSet	Could not remove drives from the specified diskset
RemoveHSP	Could not delete the specified hot spare drive
RemoveSHS	Could not delete the specified standby hot-spare drive
ReplaceDHS	Could not replace the specified failed drive
ScanDrives	Could not perform the bus rescan
SetArrayOnline	Could not send the Array Optimal command to the specified controller
SetChannelInitiatorId	Could not set the specified SCSI initiator ID
SetContDiskCachePolicy	Could not change the specified global drive cache policy
SetHostId	Could not set the specified controller name
SetITNexusLossTime	Could not change I_T nexus loss time
SetMergeGroup	Could not set the specified merge-group number
SetPartnerId	Could not set the specified partner controller name
SetSpareSet	Could not change the specified spare set attribute
SetToAHotSpare	Could not create a dedicated hot spare drive
SetToDefunct	Could not set the specified drive to failed
SetToEmpty	Could not remove the specified failed drive
SetToHotSpare	Could not create a hot-spare drive
SetToOnline	Could not set the specified failed drive to optimal
SetToSHotSpare	Could not create a standby hot-spare drive
SetWce	Could not change the write-cache mode
SyncArray	Could not start the array verify
SyncLogDrive	Could not start the logical drive verify
TargetInfo	Could not write the logical drive target information

Error	Error Message Text
Unblock	Could not unblock the specified logical drive
UnkillOtherController	Could not unkill other controller
UserAccounts	Could not write the target user account list
VerifyArray	Could not start the array verify
VerifyFixHardDrive	Verify with fix failed to start
VerifyHardDrive	Verify failed to start
VolumeInUse	Could not delete the specified logical drive. One or more initiators are logged into the logical drive.

## Part III: Appendices

### **In this part:**

Completing a Silent Windows Installation .....	150
Selecting the Best RAID Level .....	153
Quick Answers to Common Questions.....	162
Buttons and Icons At-a-Glance .....	169

# Completing a Silent Windows Installation



**In this appendix...**

- Completing a Silent Installation ..... 151
- Available Properties and Values ..... 152
- Example Command Line Installations..... 152

This appendix describes for advanced users how to complete a silent Windows installation of Adaptec Storage Manager instead of following the installation instructions provided in *Installing on Windows* on page 19. A silent installation uses command line parameters to complete an installation without messages or user interaction.

**Note:** If a previous version of Adaptec Storage Manager is installed on your system, you must remove it before beginning this installation. Use the Add or Remove Programs tool in the Control Panel.

## Completing a Silent Installation

You will need the Adaptec Installation DVD to complete this task.

To complete a silent installation:

- 1 Insert the Adaptec Installation DVD into your DVD drive.
- 2 Open a command prompt window and change to the DVD directory.
- 3 Run the silent installation from the command line using one of these files, as appropriate: setup asm x64.exe or setup asm x86.exe. For example:

```
setup asm x86.exe /s /v" /qn <properties>"
```

where *<properties>* is one or more of the options listed in [Available Properties and Values on page 152](#).

Separate properties with spaces; separate feature names for the ADDLOCAL property with commas (see examples on [page 152](#)).

**Note:** Synchronous Installation—To install Adaptec Storage Manager so that the .exe file does not close until the installation is complete, add the /w parameter to the .exe file and run the application with the start /WAIT command as shown in this example:

```
start /WAIT setup asm x64.exe /w /s /v" /qn <OPTIONS>"
```

You might want to do this for a batch file installation so that the setup will not return until the installation is finished.

After a minute or two, the silent installation should be complete and the Adaptec Storage Manager icon should be accessible. Continue with [Building Your Storage Space on page 25](#).

---

## Available Properties and Values

Property	Values
INSTALLDIR (Not required)	<p>Specifies the installation path. If you are specifying the installation path, it must be set for a command line install, and must be enclosed in escaped quotation marks. For example:</p> <pre>INSTALLDIR=\"C:\Program Files\Adaptec\Adaptec Storage Manager\"</pre> <p><b>Note:</b> If you do not explicitly set the installation path, the default path is "C:\Program Files\Adaptec\Adaptec Storage Manager"</p>
ADDLOCAL (Required)	<p><b>Note:</b> Use commas to separate multiple values.</p> <ul style="list-style-type: none"> <li>• <b>ALL</b>—Installs all of the following features. If you specify ALL, do not also specify any of the following values.</li> <li>• <b>Agent</b>—Installs the Adaptec Storage Manager Direct Attached Storage Agent. If this feature is installed, your system will reboot if RAID controllers that use the filter driver are installed. If necessary, use the REBOOT property to suppress this.</li> <li>• <b>ASMReadme</b>—Installs the Readme file in its Start menu shortcut.</li> <li>• <b>CLITools</b>—Installs the Command Line Interface tool.</li> <li>• <b>Console</b>—Installs the Adaptec Storage Manager GUI.</li> <li>• <b>SNMPSupport</b>—Installs SNMP support for Adaptec Storage Manager. Requires the Agent feature to be installed. If you select the SNMPSupport feature, the Agent feature is automatically included, even if you don't specify it.</li> </ul>
REBOOT (Not Required)	<ul style="list-style-type: none"> <li>• <b>Force</b>—Forces a reboot at the end of the installation.</li> <li>• <b>Suppress</b>—Suppresses a reboot unless files were in use and could not be overwritten during installation.</li> <li>• <b>ReallySuppress</b>—Suppresses all reboots at the end of the installation.</li> </ul> <p><b>NOTE:</b> A reboot is only forced by the Adaptec installer if you have installed the DSM or if any files can't be overwritten.</p>

## Example Command Line Installations

- To install all DAS options, which include the Console, Agent, Readme, and SNMP Support:
 

```
setup asm x86.exe /s /v"/qn ADDLOCAL=Console,Agent,,ASMReadme,SNMPSupport"
```
- To install just the Agent and suppress a reboot at the end of installation:
 

```
setup asm x86.exe /s /v"/qn ADDLOCAL=Agent REBOOT=ReallySupress"
```
- To install only the CLI Tools and suppress a reboot:
 

```
setup asm x86.exe /s /v"/qn ADDLOCAL=CLITools REBOOT=ReallySuppress"
```
- To install the GUI feature to a different installation path:
 

```
setup asm x86.exe /s /v"/qn ADDLOCAL=Console INSTALLDIR=\"C:\Adaptec Storage Manager\""
```
- To install and have setup wait until the install finishes before it closes:
 

```
start /WAIT setup asm x86.exe /w /s /v"/qn ADDLOCAL=Console,Agent REBOOT=ReallySupress"
```



# Selecting the Best RAID Level



**In this appendix...**

Comparing RAID Levels .....	154
Understanding Drive Segments .....	154
Non-redundant Logical Drives (RAID 0) .....	155
RAID 1 Logical Drives.....	156
RAID 1 Enhanced Logical Drives .....	156
RAID 10 Logical Drives.....	157
RAID 5 Logical Drives.....	158
RAID 5EE Logical Drives .....	159
RAID 50 Logical Drives.....	160
RAID 6 Logical Drives.....	161
RAID 60 Logical Drives.....	161

When you create logical drives in Adaptec Storage Manager, you can assign a RAID level to protect your data.

Each RAID level offers a unique combination of performance and redundancy. RAID levels also vary by the number of disk drives they support.

This chapter provides a comparison of all the RAID levels supported by Adaptec Storage Manager, and provides a basic overview of each to help you select the best level of protection for your storage system.

## Comparing RAID Levels

Use this table to select the RAID levels that are most appropriate for the logical drives on your storage space, based on the number of available disk drives and your requirements for performance and reliability.

RAID Level	Redundancy	Disk Drive Usage	Read Performance	Write Performance	Built-in Hot Spare	Minimum Disk Drives
RAID 0	No	100%	***	***	No	2
RAID 1	Yes	50%	**	**	No	2
RAID 1E	Yes	50%	**	**	No	3
RAID 10	Yes	50%	**	**	No	4
RAID 5	Yes	67% – 94%	***	*	No	3
RAID 5EE	Yes	50% – 88%	***	*	Yes	4
RAID 50	Yes	67% – 94%	***	*	No	6
RAID 6	Yes	50% – 88%	**	*	No	4
RAID 60	Yes	50% – 88%	**	*	No	8
Spanned Volume	No	100%	***	***	No	2
RAID Volume	No	50% – 100%	***	***	No	4

Disk drive usage, read performance, and write performance depend on the number of drives in the logical drive. In general, the more drives, the better the performance.

More information about each RAID level is available beginning on [page 155](#).

## Understanding Drive Segments


A *drive segment* is a disk drive or portion of a disk drive that is used to create a logical drive. A disk drive can include both *RAID segments* (segments that are part of a logical drive) and available segments. Each segment can be part of only one logical drive at a time. If a disk drive is not part of any logical drive, the entire disk is an available segment.

## Non-redundant Logical Drives (RAID 0)

A logical drive with RAID 0 includes two or more disk drives and provides data *striping*, where data is distributed evenly across the disk drives in equal-sized sections. However, RAID 0 arrays do not maintain redundant data, so they offer *no data protection*.

Compared to an equal-sized group of independent disks, a RAID 0 array provides improved I/O performance.


Drive segment size is limited to the size of the smallest disk drive in the logical drive. For instance, a logical drive with two 250 GB disk drives and two 400 GB disk drives can create a RAID 0 drive segment of 250 GB, for a total of 1000 GB for the volume, as shown in this figure.

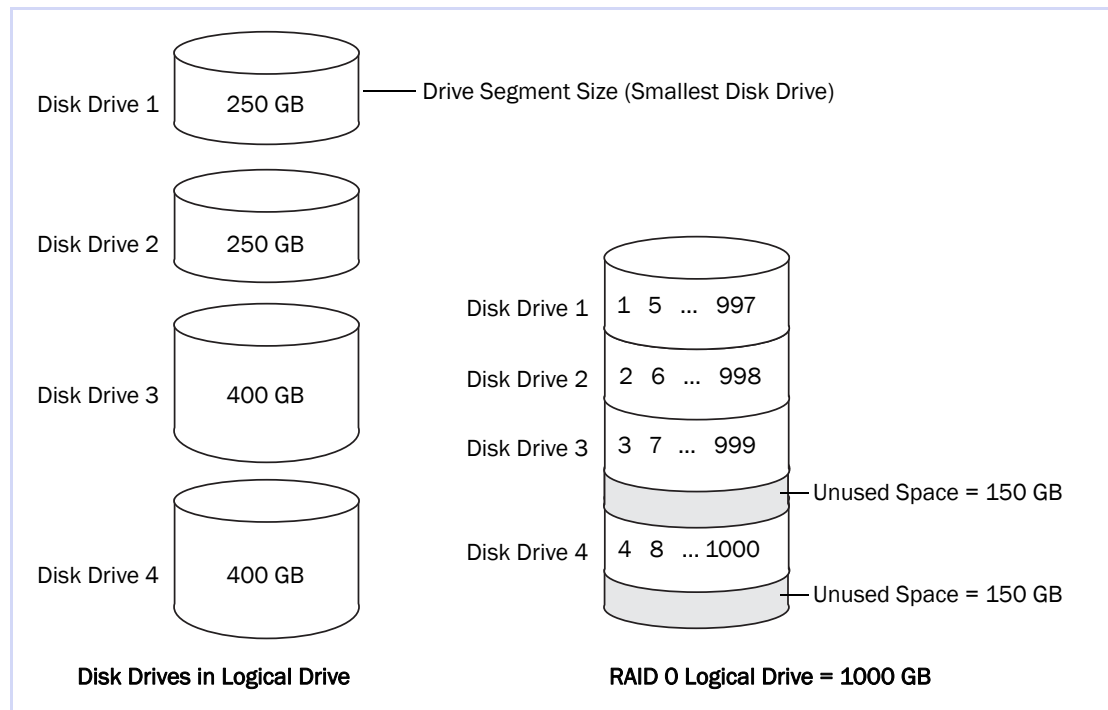

## RAID 1 Logical Drives

A RAID 1 logical drive is built from two disk drives, where one disk drive is a *mirror* of the other (the same data is stored on each disk drive). Compared to independent disk drives, RAID 1 logical drives provide improved performance, with twice the read rate and an equal write rate of single disks. However, capacity is only 50 percent of independent disk drives.


If the RAID 1 logical drive is built from different-sized disk drives, drive segment size is the size of the smaller disk drive, as shown in this figure.

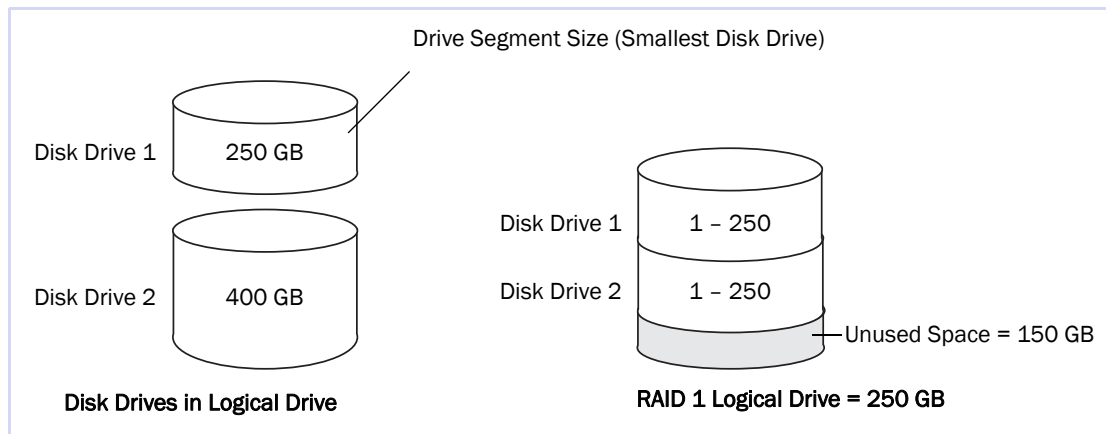

## RAID 1 Enhanced Logical Drives

A RAID 1 Enhanced (RAID 1E) logical drive—also referred to as a *striped mirror*—is similar to a RAID 1 logical drive except that data is both mirrored *and* striped, and more disk drives can be included. A RAID 1E logical drive can be built from three or more disk drives.


In this figure, the large bold numbers represent the striped data, and the smaller, non-bold numbers represent the mirrored data stripes.

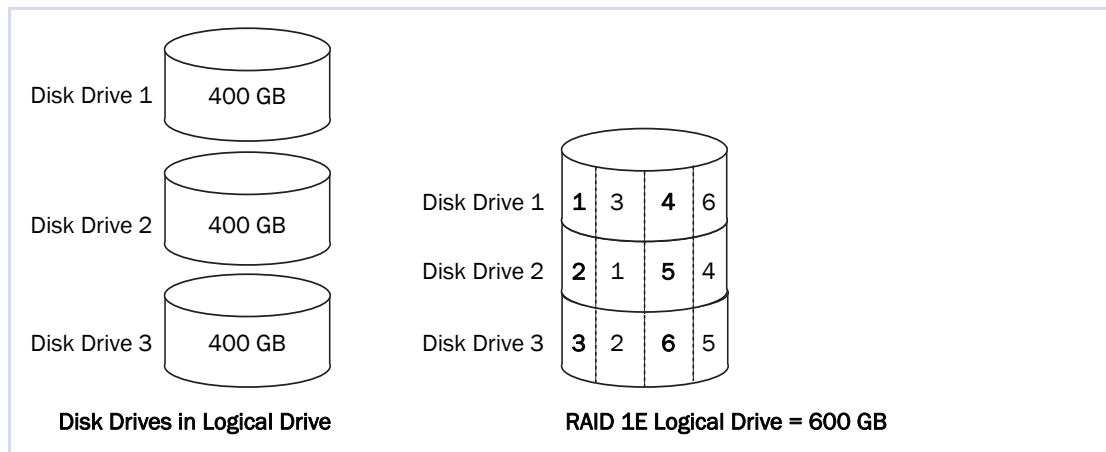

## RAID 10 Logical Drives

A RAID 10 logical drive is built from two or more equal-sized RAID 1 logical drives. Data in a RAID 10 logical drive is both striped and mirrored. Mirroring provides data protection, and striping improves performance.

Drive segment size is limited to the size of the smallest disk drive in the logical drive. For instance, a logical drive with two 250 GB disk drives and two 400 GB disk drives can create two mirrored drive segments of 250 GB, for a total of 500 GB for the logical drive, as shown in this figure.

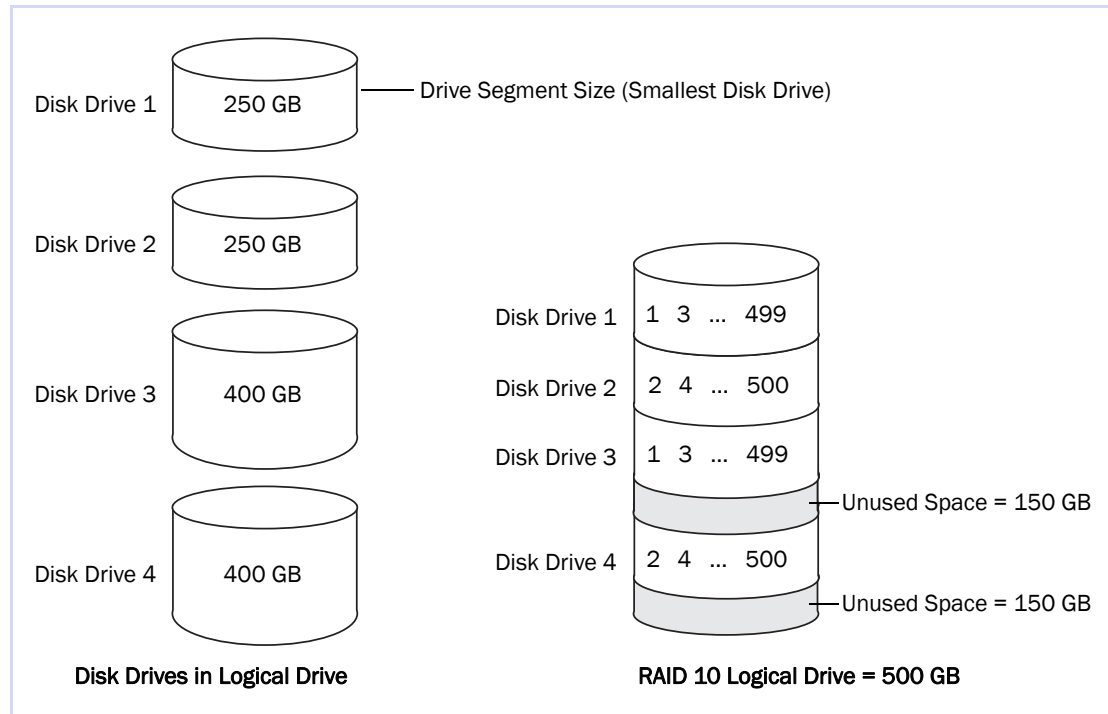


## RAID 5 Logical Drives

A RAID 5 logical drive is built from a minimum of three disk drives, and uses data striping and *parity* data to provide redundancy. Parity data provides data protection, and striping improves performance.

Parity data is an error-correcting redundancy that's used to re-create data if a disk drive fails. In RAID 5 logical drives, parity data (represented by Ps in the next figure) is striped evenly across the disk drives with the stored data.

Drive segment size is limited to the size of the smallest disk drive in the logical drive. For instance, a logical drive with two 250 GB disk drives and two 400 GB disk drives can contain 750 GB of stored data and 250 GB of parity data, as shown in this figure.

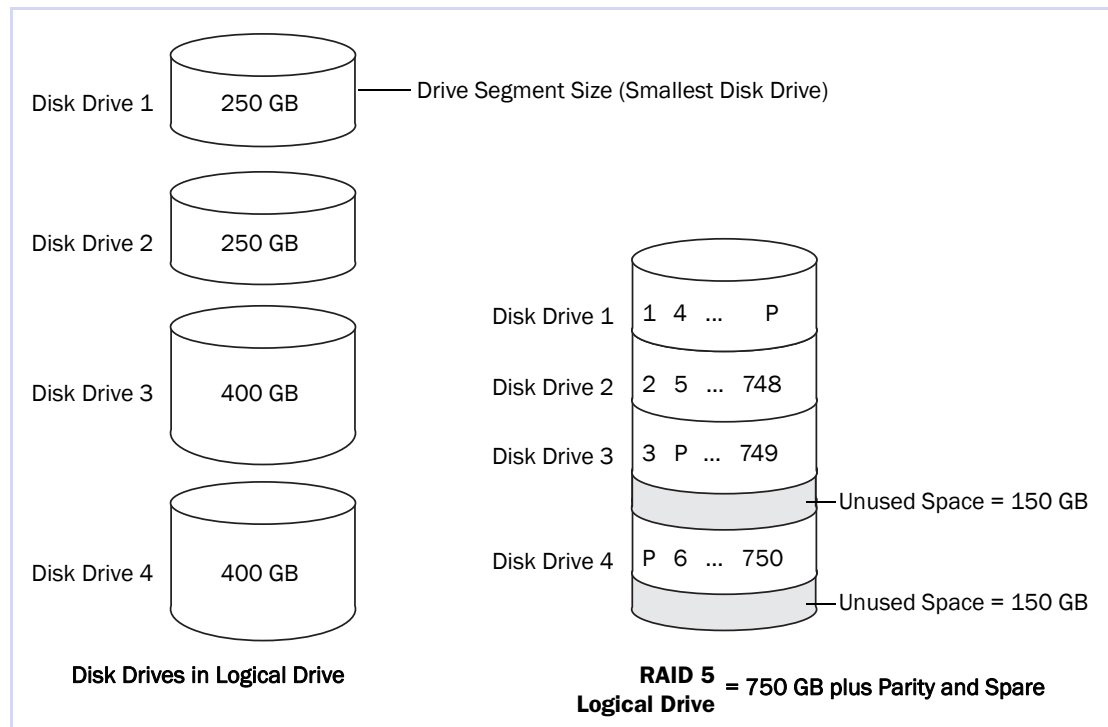


## RAID 5EE Logical Drives

A RAID 5EE logical drive—also referred to as a *hot space*—is similar to a RAID 5 logical drive except that it includes a *distributed spare* drive and must be built from a minimum of four disk drives.

Unlike a hot spare (see [page 55](#)), a distributed spare is striped evenly across the disk drives with the stored data and parity data, and can't be shared with other logical disk drives. A distributed spare improves the speed at which the logical drive is rebuilt following a disk drive failure.

A RAID 5EE logical drive protects your data and increases read and write speeds. However, capacity is reduced by two disk drives' worth of space, which is for parity data and spare data.

In this example, S represents the distributed spare, P represents the distributed parity data.

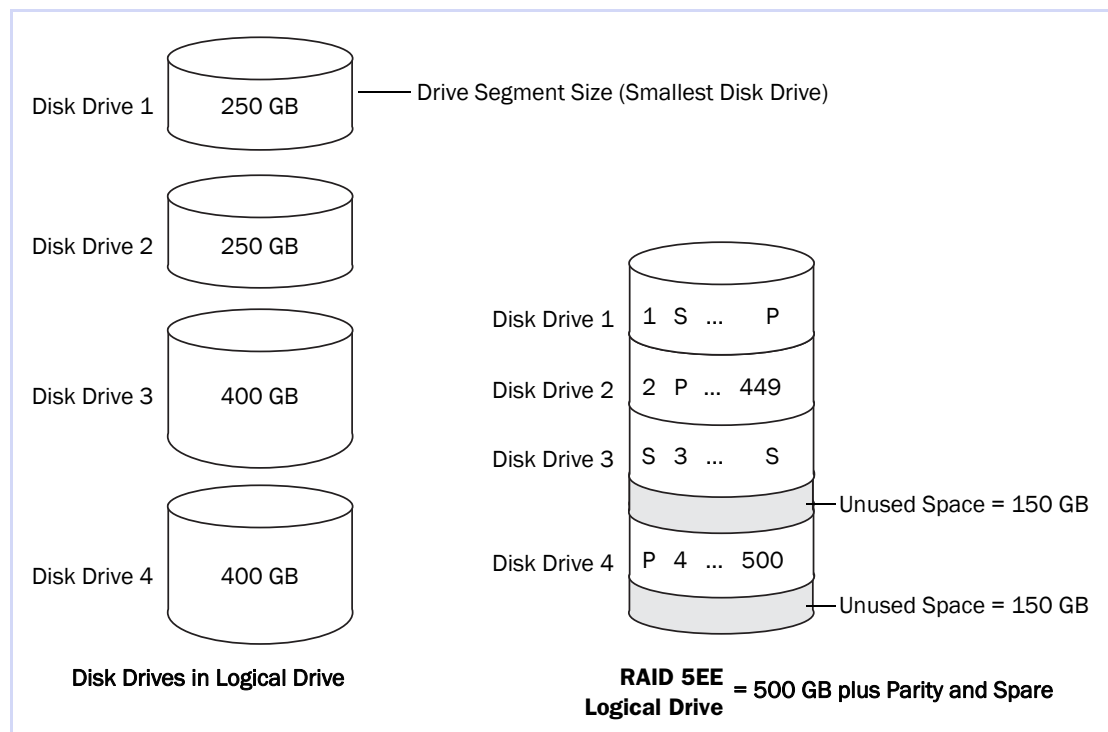


## RAID 50 Logical Drives

A RAID 50 logical drive is built from at least six disk drives configured as two or more RAID 5 logical drives, and stripes stored data and parity data across all disk drives in both RAID 5 logical drives. (For more information, see [RAID 5 Logical Drives on page 158](#).)

The parity data provides data protection, and striping improves performance. RAID 50 logical drives also provide high data transfer speeds.

Drive segment size is limited to the size of the smallest disk drive in the logical drive. For example, three 250 GB disk drives and three 400 GB disk drives comprise two equal-sized RAID 5 logical drives with 500 GB of stored data and 250 GB of parity data. The RAID 50 logical drive can therefore contain 1000 GB (2 x 500 GB) of stored data and 500 GB of parity data.

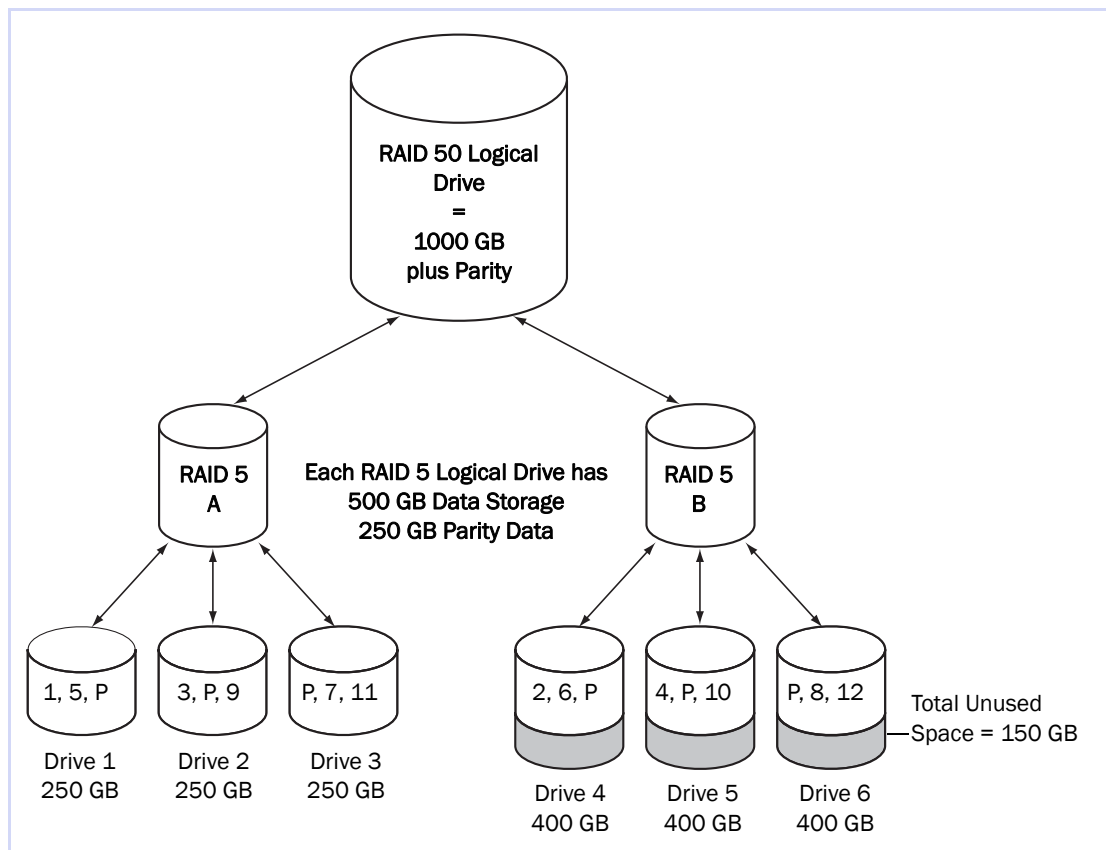

In this example, P represents the distributed parity data.




## RAID 6 Logical Drives

A RAID 6 logical drive—also referred to as *dual drive failure protection*—is similar to a RAID 5 logical drive because it uses data striping and parity data to provide redundancy. However, RAID 6 logical drives include *two* independent sets of parity data instead of one. Both sets of parity data are striped separately across all disk drives in the logical drive.

RAID 6 logical drives provide extra protection for your data because they can recover from two simultaneous disk drive failures. However, the extra parity calculation slows performance (compared to RAID 5 logical drives).

RAID 6 logical drives must be built from at least four disk drives. Maximum stripe size depends on the number of disk drives in the logical drive.

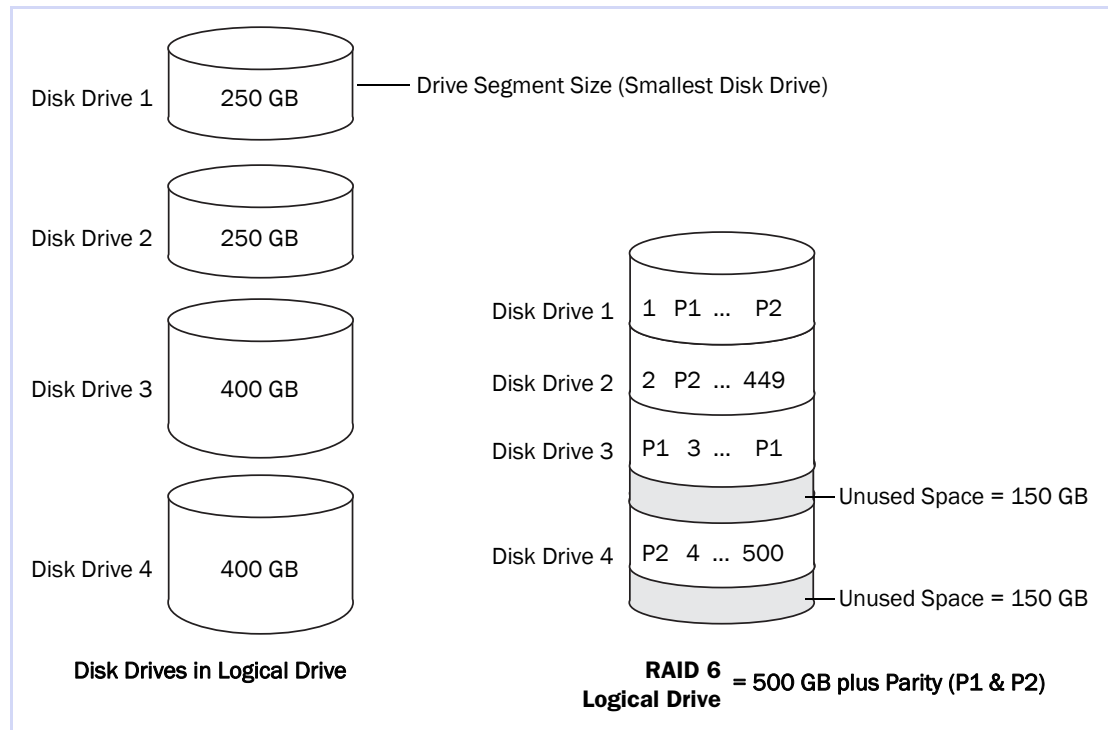

## RAID 60 Logical Drives

Similar to a RAID 50 logical drive (see [page 160](#)), a RAID 60 logical drive—also referred to as *dual drive failure protection*—is built from at least eight disk drives configured as two or more RAID 6 logical drives, and stripes stored data and two sets of parity data across all disk drives in both RAID 6 logical drives.

Two sets of parity data provide enhanced data protection, and striping improves performance. RAID 60 logical drives also provide high data transfer speeds.

# Quick Answers to Common Questions...



**In this appendix...**

- How do I...? ..... 163
- What’s the difference between...? ..... 164
- What options are on the Actions menu? ..... 165
- What tasks can be scheduled to run at a specified time? ..... 168

This chapter provides quick references to frequently requested information about basic tasks, functions, and concepts in Adaptec Storage Manager.

**Note:** For troubleshooting tips, see [Solving Problems on page 136](#).

## How do I...?

### Set up my storage space?

Follow the five steps in the [Getting Started Checklist](#) on page 14.

### Create or add a new logical drive?

In the Enterprise View, right-click the controller you want, then click **Create logical device**.

Or, click either of the buttons shown at right.



See [Building Your Storage Space](#) on page 25.

### Open the Configuration wizard?

In the Enterprise View, right-click the controller you want, then click **Create logical device**.

Or, click either of the buttons shown at right.



See [Building Your Storage Space](#) on page 25.

### Turn off the alarm?

Click the **Silence** button, shown at right.



Or, from the menu bar, click **Actions**, select **Agent actions**, select **Alarm actions**, then click **Silence alarm**.

See [Silencing a Controller Alarm](#) on page 94.

### Add a new user to Adaptec Storage Manager?

Any user with a valid network user name and password can log into Adaptec Storage Manager.

See [Starting and Logging In on the Local System](#) on page 27 and [Understanding Permission Levels](#) on page 27.

### Add a remote system?

Click the **Add** button, shown at right.



See [Logging into Remote Systems from the Local System](#) on page 32.

### Prevent a user from changing my storage space?

See [Understanding Permission Levels](#) on page 27 for information on restricting access.

### Check disk drive or logical drive status?

Hold your cursor over the disk drive or logical drive to reveal status information.

See also [Revealing More Device Information](#) on page 50.

### Log out of Adaptec Storage Manager?

In the Enterprise View, click on the local system. In the menu bar, select **Actions**, then click **Log out**.

See [Logging Out of Adaptec Storage Manager](#) on page 52.

## Schedule a task?


Complete each step of the task until you are prompted to click **Apply**. (*Don't* click **Apply**.)  
Click **Schedule**.

**Note:** The **Schedule** button won't appear on tasks that can't be scheduled.

See [Scheduling a Task](#) on page 83.

## Find the Task Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Tasks**. See [Scheduling a Task](#) on page 83.

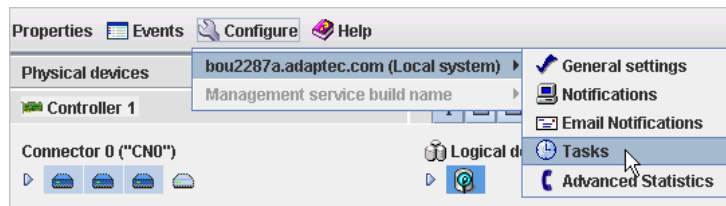


## Find the Notification Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Notifications**. See [Setting up Logged Notifications](#) on page 108.



## Find the Email Notification Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Email Notifications**. See [Notifying Users by Email About Status and Activity](#) on page 113.

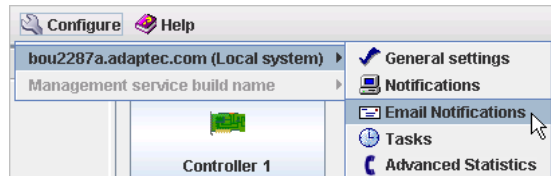

## What's the difference between...?

### Adaptec Storage Manager and the Agent?

Adaptec Storage Manager is the full software application, including the user interface (windows, menus) described in this *User's Guide*. It helps you build and maintain the logical drives, controllers, and disk drives that make up your storage space.

The Agent is like a service that keeps your storage space running. Its job is to monitor system health and manage event notifications, tasks schedules, and other on-going processes on each system in your storage space. The Agent can run independently of the full application.

See [About Adaptec Storage Manager on page 14](#) for more information.

## Event notifications, email notifications, and event alerts?

Event notifications (also called logged notifications) are messages about events on one system that are sent to the event log of another system in your storage space. (See [page 108](#).)

Email notifications are email messages about events on a system in your storage space that are sent to specified users. (See [page 113](#).)


Event alerts are pop-up messages or console messages about all types of events on a specific system, which are broadcast to all the users who are logged into your storage space. (See [page 119](#).)

## What options are on the Actions menu?


You can also access many Action menu options by right-clicking a component. For example, right-click on a system to access most of the options shown in [Local and remote systems](#) below. See [About the Actions Menu on page 45](#) for more information.

### Local and remote systems

In the Enterprise View, click on a system. In the menu bar, select **Actions** to view these options:

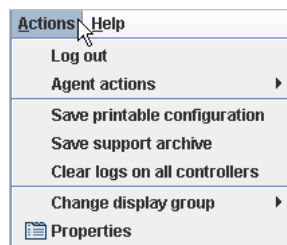


Then select **Action actions** to view these options:

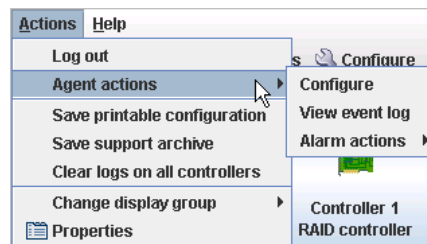


### Controllers?

In the Enterprise View, click on a controller. In the menu bar, select **Actions** to view these options:

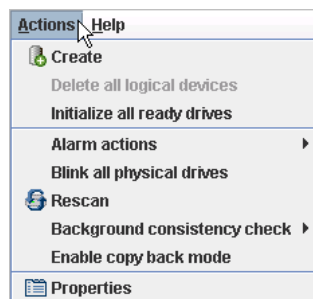


Then select **Alarm actions** to view these options:

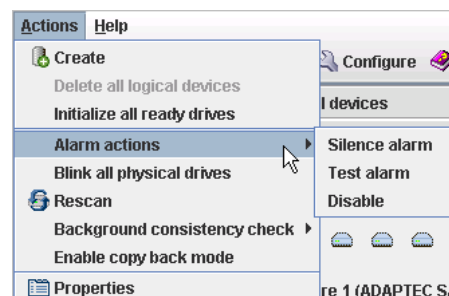


## Disk drives?

In the Physical Devices View, click on a disk drive. In the menu bar, select **Actions** to view these options:

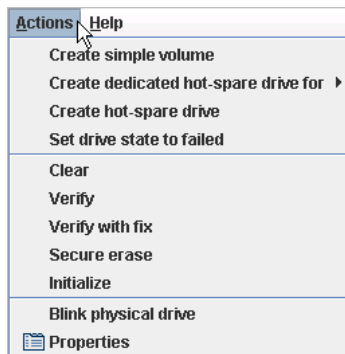


## Enclosures?

In the Physical Devices View, click on an enclosure management device. In the menu bar, select **Actions** to view these options:

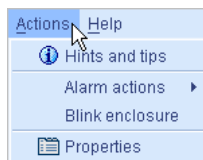


## Logical drives?

In the Logical Devices View, click on a logical drive. In the menu bar, select **Actions** to view these options:

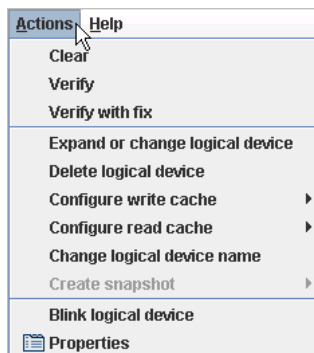


## Direct Attached Storage?

In the Enterprise View, click **Direct Attached Storage**. In the menu bar, select **Actions** to view these options:

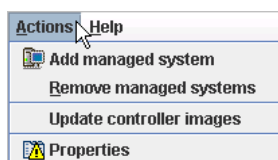


## The Notification Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Notifications**. In the menu bar, select **Actions** to view these options:

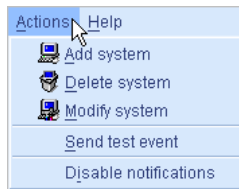


## The Email Notification Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Email Notifications**. In the menu bar, select **Actions** to view these options:

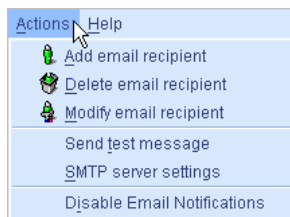


## The Task Manager?

In the tool bar, click **Configure**, point to the system you want, then click **Tasks**. In the menu bar, select **Actions** to view these options:

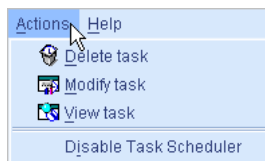

## The Advanced Statistics Manager

In the tool bar, click **Configure**, point to the system you want, then click **Advanced Statistics**. In the menu bar, select **Actions** to view these options:

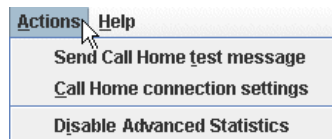

## What tasks can be scheduled to run at a specified time?

You can schedule any of these tasks to run at a specified time:

- Changing a logical drive from one RAID level to another (see [page 72](#)).
- Expanding the size of a logical drive (see [page 70](#)).
- Modifying a logical drives settings (see [page 64](#)).
- Verifying a logical drive (see [page 69](#)) or verifying and fixing a logical drive (see [page 69](#)).

See [Scheduling a Task](#) on [page 83](#) for more information.

---



# Buttons and Icons At-a-Glance

---






## In this appendix...














Enterprise View Icons .....	170
Icons in the Physical Devices View .....	170
Icons in the Logical Devices View .....	171
Buttons in the Main Window .....	172
Buttons in the Notification Manager .....	172
Buttons in the Email Notification Manager.....	173
Buttons in the Task Manager .....	173

This chapter provides quick references to the icons and buttons that appear in Adaptec Storage Manager.










## Enterprise View Icons

Icon	Description
	System with direct attached storage controller and directly attached disk drives or enclosures
	Enclosure
	Controller








## Icons in the Physical Devices View

Icon	Description
	Ready disk drive
	Disk drive with free space
	Disk drive with no free space
	Failed disk drive
	Healthy global or dedicated hot spare
	Hot spare with error (see <a href="#">page 56</a> for more information)
	Hot spare being built into logical drive after disk drive failure
	Hot spare built into logical drive after disk drive failure
	JBOD disk
	Ready Solid State Drive (SSD), not part of any logical drive or maxCache pool
	Solid State Drive assigned to maxCache pool
	Controller
	Enclosure Management Device

## Enclosure Status Icons

Icon	Description
	Enclosure fan(s) — normal
	Enclosure fan(s) — error
	Enclosure temperature — normal
	Enclosure temperature — error
	Enclosure Power — normal
	Enclosure Power — error
	Enclosure fan(s) — warning
	Enclosure temperature — warning
	Enclosure Power — warning




## Icons in the Logical Devices View

Icon	Description
	Logical drive
	Logical drive with healthy hot spare
	Logical drive being initialized
	Logical drive being modified
	Logical drive being rebuilt after disk drive failure
	Array with available space
	Array with no available space




## Buttons in the Main Window

Button	Click to...	More on...
 Add	...add a remote system	... <a href="#">page 32</a>
 Create	...create a logical drive; open the Configuration wizard	... <a href="#">page 25</a>
 Silence	...silence the audible alarm	... <a href="#">page 96</a>
 Properties	...check status and other properties of a controller, disk drive, or other component	... <a href="#">page 89</a>
 Events	...view the full Event log	... <a href="#">page 105</a>
 Configure	...configure notification settings ...configure email notification settings ...check the status of scheduled tasks; monitor and modify scheduled tasks	... <a href="#">page 108</a> ... <a href="#">page 113</a> ... <a href="#">page 82</a>
 Help	...open the online Help	... <a href="#">page 51</a>
 T	...see a text description of your disk drives	... <a href="#">page 50</a>
 =	...see the size capacities of your disk drives	... <a href="#">page 50</a>
 =	...see the size capacities of your disk drives relative to each other	... <a href="#">page 50</a>
 +	...create a global hot spare	... <a href="#">page 55</a>
 G	...create a logical drive	... <a href="#">page 25</a>
 -	...delete a logical drive	... <a href="#">page 72</a>
 CACHE	...configure maxCache cache pool	... <a href="#">page 80</a>
 ▶ ▼	...expand and collapse additional information about disk drives and logical drives	... <a href="#">page 50</a>
 Logical devices	...access logical drive-specific functions, such as deleting	... <a href="#">page 89</a>
 Channel	...access channel-specific functions, such as rescanning	... <a href="#">page 89</a>
 Ports	...access port-specific functions, such as blinking	... <a href="#">page 89</a>
 Device	...access device-specific functions, such as initializing	... <a href="#">page 89</a>




## Buttons in the Notification Manager

Button	Click to...	More on...
 Add system	...add a system that will receive notifications generated by the Notification Manager	... <a href="#">page 108</a>
 Modify system	...update a system's address, host name, or notification level	... <a href="#">page 111</a>
 Delete system	...remove a system from the Notification List	... <a href="#">page 111</a>

## Buttons in the Email Notification Manager

Button	Click to...	More on...
 Add email recipient	...add the email address of a user who will receive notifications generated by the Email Notification Manager	... <a href="#">page 113</a>
 Modify email recipient	...update a recipient's email address or notification level	... <a href="#">page 116</a>
 Delete email recipient	...remove a recipient from the Email Notification List	... <a href="#">page 116</a>

## Buttons in the Task Manager

Button	Click to...	More on...
 View task	...view the details of a scheduled task	... <a href="#">page 85</a>
 Modify task	...reschedule a task or change the description of the task in the Task List	... <a href="#">page 86</a>
 Delete task	...delete a task that is no longer required	... <a href="#">page 86</a>

## Glossary

---

### A

**Adaptec Storage Manager Agent**

Runs in the background on your system, monitoring and managing event notifications, tasks schedules, and other on-going processes in your storage space. It requires no user intervention and includes no user interface.

**available space**

Space on a disk drive that is not being used by a logical drive. When a logical drive is deleted, its space becomes available. *See also* [logical drive](#).

### B

**bad stripe**

A stripe-level failure in a RAID array. Instead of taking the entire logical drive off-line, only the data within the stripe becomes unavailable. A bad stripe entry is made in the Bad Stripe Table, which becomes part of the array and logical drive configuration.

**background consistency check**

A controller function that continually and automatically verifies your logical drives once they're in use.

**bootable-CD mode**

A way of running Adaptec Storage Manager, where the application is not installed but is run directly from a CD.

### C

**cache**

A temporary, fast storage area that holds data from a slower storage device for quick access. Cache storage is normally transparent to the accessing device. *See also* [maxCache caching](#).

**channel**

Any path used for the transfer of data and the control of information between disk drives and a RAID controller.

**controller**

A hardware device that interprets signals between a host and a disk drive. Also known as an adapter or card. *See also* [I/O](#).

**copyback**

Adaptec RAID controller feature that allows data that has been moved to a hot spare to be returned to its original location once the controller detects that the failed drive has been replaced.

**D****DAS**

Direct-attached Storage. Data storage that is physically connected to a server. *See also* [LAN](#), [SAN](#).

**dedicated hot spare**

A drive that can take the place of a failed drive only on the fault-tolerant array to which it is explicitly assigned.

**degraded array**

A redundant array in which one or more members have failed, such that the data remains intact but redundancy is compromised. The array, and all data, remain accessible but another drive failure will cause the array to fail, resulting in data loss.

**drive segment**

*See* [segment](#).

**dual drive failure protection**

Another name for a RAID 6 or RAID 60 logical drive.

**E****Email Notification Manager**

A utility within Adaptec Storage Manager that emails event messages to selected recipients. *See also* [email notifications](#), [Notification Manager](#).

**email notifications**

Event messages about remote systems that are emailed to selected recipients.

**event**

Activity on your storage space, such as a disk drive failure or logical drive verification.

**F****fault tolerance**

The ability of a system to continue to perform its functions even when one or more disk drives have failed.

**firmware**

A combination of hardware and software; software written onto read-only memory (ROM).

**format**

*See* [initialize](#).

**G****GB**

GigaByte. 1,024 MB. *See also* [MB](#).

**global hot spare**

A drive that can replace a failed drive in any array on the same controller, provided that the available capacity is at least equal to that of the failed drive. *See also* [dedicated hot spare](#).

---

## H

### host

A system that's connected to a TCP/IP network. *See also* [TCP/IP](#).

### host bus adapter (HBA)

An adapter card that includes all of the I/O logic, software, and processing to manage the transfer of information between the host and the devices it's connected to.

### hot space

A RAID 5EE logical drive. *See* [page 159](#).

### hot spare

A spare disk drive which will automatically replace a failed disk drive in a logical drive. *See also* [dedicated hot spare](#).

### hot-swap

Remove and replace a failed disk drive in a logical drive without shutting down the server or disrupting activity on the logical drive.

### hybrid RAID

A logical drive comprised of SSDs (Solid State Drives) and hard disk drives (HDDs). Hybrid RAID is supported for RAID 1 and RAID 10 logical drives. In a hybrid RAID logical drive, read operations go the fastest path first—the SSD; write operations go to both the SSD and hard disk drive, for redundancy purposes. Hybrid arrays provide greater throughput for read operations, versus standard HDD RAID arrays, without degrading write I/O performance.

## I

### impacted array

An array in which the initial build did not complete successfully. All member drives are present and operational, and all data written to the array is protected. The array can become Optimal by running a Verify with Fix task.

### initialize

Prepare a disk drive for reading and writing.

### I/O

Input/Output. Data entering into or being extracted from a system.

## L

### LAN

Local Area Network. A network of interconnected workstations sharing the resources of a single server, typically within the area of a small office building.

### LED

Light-emitting Diode. An electronic device that lights up when powered.

### local system

The computer (or *system*) that you're working on. In Adaptec Storage Manager, 'local' and 'remote' are relative terms. *See also* [remote system](#).

### logged events

Event messages about remote systems that appear in the event log of Adaptec Storage Manager. *See also* [Notification Manager](#).

---



**logical drive**

One or more disk drives grouped together to appear as a single device to an operating system. Also known as a logical device or array.

**M****managed system**

A computer (or *system*) in a storage space that's being managed by Adaptec Storage Manager.

**maxCache caching**

PMC-Sierra's advanced SSD caching technology. For read caching applications, maxCache analyzes IO traffic patterns and copies frequently-read "hot" data to the SSD cache pool—the *maxCache pool*. To use maxCache, you must have one or more maxCache-compatible SSDs installed on the RAID controllers in your system. See [www.adaptec.com/compatibility](http://www.adaptec.com/compatibility) for a list of compatible drives.

**MB**

MegaByte. Depending on context, 1,000,000 or 1,048,576 bytes. Also 1000 KB.

**mirroring**

Data protection that duplicates all data from one drive onto a second drive. *See also* [RAID](#).

**N****Notification Manager**

A utility within Adaptec Storage Manager that broadcasts event messages to selected managed systems.

**P****parity**

A form of data protection used by some RAID levels to re-create the data of a failed disk drive in a logical drive. *See also* [RAID](#).

**partition**

Divides the space of a disk drive into isolated sections.

**port**

A connection point to a controller, disk drive, expander, enclosure, or other device.

**R****RAID**

Redundant Array of Independent Disks. For more information on RAID and all supported RAID levels, see [Selecting the Best RAID Level on page 153](#).

**rapid fault isolation**

The trail of yellow or red warning icons that leads from the high-level system view to the failed or failing component.

**rebuild**

Re-create a logical drive after a disk drive failure.

**recurring task**

A scheduled task, such as logical drive verification, that occurs on a regular basis. *See also* [Task Manager](#), [scheduled task](#).

**redundancy**

The capability of preventing data loss if a disk drive fails. *See also* [mirroring](#), [parity](#).

---

**remote system**

In Adaptec Storage Manager, all other systems in your storage space besides your local system are remote systems. 'Local' and 'remote' are relative terms. *See also* [local system](#).

**ROM Update wizard**

A program that updates the BIOS and firmware codes on the controller. *See also* [firmware](#).

## S

**SAN**

Storage Area Network. A storage architecture that connects servers and disk drives across a network for enhanced reliability, scalability, and performance.

**scheduled task**

Activity, such as logical drive verification, that is set to be completed at a specified date and time. *See also* [recurring task](#).

**segment**

Disk drive space that has been assigned to a logical drive. A segment can include all or just a portion of a disk drive's space.

**SMTP**

Simple Mail Transfer Protocol.

**Solid State Drive (SSD)**

A data storage device that uses non-volatile memory chips to store persistent data. Unlike hard disk drives, which use spinning disks and movable read/write heads, SSDs have no moving parts.

**spare**

*See* [hot spare](#).

**SSD caching**

*See* [maxCache caching](#).

**storage space**

The controller(s) and disk drives being managed with Adaptec Storage Manager.

**stripe size**

Amount of data written to one partition before the controller moves to the next partition in a stripe set.

**striped mirror**

A RAID 1 Enhanced, or RAID 1E, logical drive. *See* [page 156](#).

**striping**

A method of enhancing performance by spreading data evenly over multiple disk drives. Provides no data protection.

## T

**Task Manager**

A utility in Adaptec Storage Manager that allows you to schedule a specific activity, such as expanding a logical drive, for a time that's convenient. *See also* [scheduled task](#), [recurring task](#).

**TB**

TeraByte. Approximately one million-million bytes, or 1024 GB.

---

**TCP/IP**

Transmission Control Protocol/Internet Protocol. A set of communication protocols used to connect hosts on the Internet.

**V****verify**

Check a logical drive for inconsistent or bad data. May also fix any data problems or parity errors.

---

# Index

## A

### Actions menu [45](#)

Add managed system [32](#), [129](#)

Agent actions [97](#)

alarm [96](#), [97](#), [98](#)

Alarm actions [94](#), [96](#), [97](#), [98](#)

Change logical device name [64](#)

Clear logs on all controllers [106](#)

Configure read cache [66](#)

Configure write cache [65](#)

controller-level options [165](#)

Create dedicated hot-spare drive [56](#)

Delete dedicated hot-spare drive [57](#)

Delete hot-spare drive [58](#)

Delete logical device [73](#), [76](#)

Direct Attached Storage branch-level options [166](#)

Disable email notifications [117](#)

Disable notifications [112](#)

Disable task scheduler [87](#)

disk drive-level options [166](#)

Email Notification Manager options [167](#)

Enable (Disable) background consistency check [70](#)

enclosure-level options [166](#)

Expand or change logical device [64](#), [71](#), [72](#)

Initialize [91](#)

Initialize all ready drives [91](#)

Log in [52](#)

Log out [52](#)

logical drive-level options [166](#)

Notification Manager options [167](#)

overview [45](#), [165](#) to [167](#)

Remove dedicated hot-spare drive [57](#)

Rescan [94](#)

Save printable configuration [95](#)

Save support archive [142](#)

Send test event [110](#)

Send test message [116](#)

Set drive state to failed [90](#)

SMTP server settings [117](#)

system-level options [165](#)

Task Manager options [167](#)

Update controller images [99](#)

Update drive firmware images [101](#)

Verify [69](#)

Verify with fix [69](#)

activity in storage space

event log [51](#)

activity on storage space. *See* monitoring

Adaptec Storage Manager

Actions menu [45](#)

Actions menu overview [165](#) to [167](#)

Agent [14](#)

beginning steps [14](#)

bootable-CD mode [23](#)

Direct Attached Storage branch [46](#)

display options [129](#)

downloading newer versions [127](#)

Email Notifications Manager [113](#)

event log [105](#)

icons [47](#), [48](#), [49](#), [170](#) to [171](#)

installing

Linux [20](#)

Solaris [21](#)

VMWare [21](#), [22](#)

Windows [19](#)

Windows silent installation [150](#)

introduction [14](#)

logging into remote systems [32](#)

main window overview [45](#)

- Notifications Manager 108
- standard unit of measure 128
- system requirements 17
- Task Manager 84
- uninstalling 52
  - Linux 52
  - Windows 52
- updating 127
- Adaptec Storage Manager vs Agent 164
- adapters. *See* controllers
- ADDLOCAL 152
- Administrator permissions 27
- advanced settings 40, 64
- advanced statistics
  - see* statistics logging
- Agent 14
  - alarm settings 97
  - event log 120
  - introduction 14
  - starting
    - Linux 31
    - Solaris 32
    - Windows 31
- alarm
  - changing settings 97
  - controllers
    - disabling 94
    - silencing 94
    - testing 93
  - disabling
    - controller-level 94
    - enclosure-level 98
    - system-level 98
  - enabling (system-level) 98
  - enclosures
    - disabling 98
    - silencing 98
    - testing 98
  - frequency 97
  - systems
    - disabling 98
    - enabling 98
    - silencing 97
    - testing 96
  - testing
    - controller-level 93
    - enclosure-level 98
    - system-level 96
- archive file 142
- audible alarm. *See* alarm
- auto-discovery 129
- automatic verification 68

## B

- background consistency check 68, 70
- background verification 68
- Big Block Bypass mode 67
- blinking components 89
- boards. *See* controllers
- bootable-CD mode 23 to 24
  - defined 23
- broadcasting event alerts 119
- Build (initialize method) 66
- building storage space 25 to 42
  - bootable-CD mode 23
  - custom configuration 37
  - express configuration 34
  - RAID Volumes 73
- buttons
  - Configure 109, 113
  - Email Notification Manager 173
  - Events 106
  - main window 172 to 173
  - Notification Manager 172
  - Task Manager 173

## C

- call home
  - see* statistics logging
- call home support archive 125
- cards. *See* controllers
- CD mode. *See* bootable-CD mode
- Clear (initialize method) 66
- components
  - blinking 89
  - defined 11
  - identifying 89
  - viewing properties 89
- Configuration Event Detail window 105
- Configure button 84, 97, 109, 132
- configuring 34
  - See also* building storage space
- controller support 17
- controllers
  - Actions menu 165
  - blinking 89
  - disabling alarm 94
  - identifying 89
  - properties 89
  - registering 93
  - rescanning 94
  - saving configurations 95
  - support by operating system 17

- testing alarm [93](#)
- updating firmware [99](#)
- copyback [58](#)
- creating with the wizard [75](#)
- custom configuration [37](#)

## D

- daemon [14](#)
- DAS
  - defined [10](#)
- dedicated hot spares [55](#)
  - creating [56](#)
  - deleting [57](#)
  - removing [57](#)
- deleting logical drives [72](#)
- devices [46](#)
  - blinking [89](#)
- Direct Attached Storage
  - Actions menu [166](#)
- direct attached storage
  - Actions menu introduction [45](#)
  - Actions menu overview [165](#) to [167](#)
- Direct Attached Storage branch [46](#)
- disabling alarm
  - enclosure-level [98](#)
  - system-level [98](#)
- disk drive segments [154](#)
- disk drives [89](#)
  - Actions menu [166](#)
  - available space [48](#)
  - blinking [89](#)
  - capacity [50](#)
  - conceptual graphic [60](#)
  - different sizes in same logical drive [62](#)
  - failed state [90](#)
  - failure recovery
    - multiple disk drives [140](#)
    - multiple logical drives [139](#)
    - RAID 0 logical drives [139](#)
    - with hot spare [138](#)
    - without hot spare [139](#)
  - identifying [89](#)
  - initializing [91](#)
  - properties [89](#)
  - relative capacity [50](#)
  - replacing in logical drives [90](#)
  - segments in logical drives [63](#)
  - text descriptions [50](#)
  - viewing logical drives [49](#)
  - viewing status [47](#)
  - within logical drives [39](#)

- display groups [133](#)
  - creating [133](#)
  - deleting [135](#)
  - moving systems [135](#)
  - removing systems [135](#)
  - renaming display groups [135](#)
  - system status [134](#)
- distributed spare drives [159](#)

## E

- Email Notification Log
  - clearing [117](#)
- Email Notification Manager
  - Actions menu [167](#)
  - buttons [173](#)
  - clearing the log [117](#)
- email notifications [113](#)
  - "from" address [114](#)
  - changing "from" address [116](#)
  - changing SMTP server [116](#)
  - disabling [117](#)
  - failed test emails [116](#)
  - modifying recipient information [116](#)
  - recipient addresses [113](#)
  - re-enabling [117](#)
  - removing recipients [116](#)
  - setup [113](#)
  - SMTP server settings [114](#)
  - test emails [115](#)
- Email Notifications log [117](#)
- Email Notifications Manager [113](#)
  - disabling [117](#)
  - Email Notifications log [117](#)
  - opening [113](#)
  - re-enabling [117](#)
  - test emails [115](#)
- Enclosure View [50](#)
- enclosures
  - Actions menu [166](#)
  - blinking [89](#)
  - disabling alarm [98](#)
  - identifying [89](#)
  - monitoring [107](#)
  - silencing alarm [98](#)
  - status icons [51](#), [107](#)
  - testing alarm [98](#)
  - viewing disk drives [50](#)
- Enterprise View [45](#)
  - Direct Attached Storage branch [46](#)
  - icons [47](#), [170](#)
- Error (task status) [85](#)

- event alerts 119
- event log 51, 105, 106
  - clearing 106
  - finding source of event 108
  - messages 108
- event log (operating system) 120
- event notifications
  - Email Notifications log 117
- event viewer
  - finding source of event 108
- events 51
- Events button 106
- events. *See* monitoring
- Executed (task status) 85
- Executed\* (task status) 85
- expanding logical drives 70
- express configuration 34
  - RAID levels 34

## F

- failed disk drives
  - multiple disk drives 140
  - multiple logical drives 139
  - RAID 0 logical drives 139
  - without hot spare 139
- fans status icon 107
- FAQs 162
- firmware 99
- Force online 141
- formatting logical drives 36
- Full Size Capacity View 50

## G

- global hot spares 55
  - creating 39
  - deleting 57
- glossary 174
- Guest permissions 27

## H

- hard disk, hard disk drive, hard drive. *See* disk drive
- HBAs. *See* controllers
- help 51
- hot spares 47, 48, 55 to 57
  - creating 39, 55
  - creating dedicated 56
  - creating pool 56
  - dedicated, defined 55
  - deleting 57
  - distributed spare drives 159

- global, defined 55
  - limitations 55
  - removing 57
- hybrid RAID 39, 61, 176

## I

- icons 47, 48, 49, 170 to 171
  - enclosure status icons 107
  - Enterprise View 47, 170
  - event status icons 106
  - Logical Devices View 49, 171
  - Physical Devices View 48, 170
- identifying components 89
- impacted array 176
- initialize method 66
- initialize priority 66
- initializing disk drives 91
  - skipping 140
- INSTALLDIR 152
- installing Adaptec Storage Manager 18 to 21
  - Linux 20
  - Solaris 21
  - VMWare 21, 22
  - Windows 19
    - silent installation 150

## J

- JBODs 75
  - converting to simple volumes 76
  - creating 75
  - deleting 76
- JBODs. *See also* enclosures
- jobs. *See* tasks

## L

- Linux
  - installing Adaptec Storage Manager 20
  - SNMP support 119
  - starting Adaptec Storage Manager 29
  - starting the Agent 31
  - uninstalling Adaptec Storage Manager 52
- local systems 26
- log files, clearing 117
- logged notifications 108
  - adding systems 108
  - disabling 112
  - failed test events 111
  - modifying systems 111
  - re-enabling 112
  - removing systems 111

- test events [110](#)
- logging in
  - logging back in [52](#)
  - permission levels [27](#)
- logging out [52](#)
  - logging back in [52](#)
- Logical Devices View [45, 48](#)
  - icons [49, 171](#)
- logical drives [48, 60 to 74](#)
  - Actions menu [166](#)
  - advanced settings [40, 64](#)
  - automatic verification [68](#)
  - available space on disk drives [62](#)
  - background consistency check [68](#)
  - background verification [68](#)
  - building
    - advanced [37](#)
    - basic [34](#)
    - changing background task priority [36](#)
    - stop building [36](#)
  - changing RAID levels [72](#)
  - custom configuration [37](#)
  - defined [60](#)
  - definition [139](#)
  - deleting [72](#)
  - different-sized disk drives [62](#)
  - disabling background consistency check [70](#)
  - disk drive segments [63, 154](#)
  - distributed spare drives [159](#)
  - enabling background consistency check [70](#)
  - expanding [70](#)
  - extending partitions [71](#)
  - fine-tuning [64 to 66](#)
  - forcing online [141](#)
  - formatting [36](#)
  - increasing capacity [70](#)
  - initialize method [66](#)
  - initialize priority [66](#)
  - manual verification [68](#)
  - maximum size [70](#)
  - mirrored data [156](#)
  - non-redundant [155](#)
  - options for creating [34](#)
  - parity [158](#)
  - partitioning [36](#)
  - properties [89](#)
  - RAID 1 [156](#)
  - RAID 10 [157](#)
  - RAID 1E [156](#)
  - RAID 5 [158](#)
  - RAID 50 [160](#)

- RAID 5EE [159](#)
- RAID 6 [161](#)
- RAID 60 [161](#)
- RAID level [48](#)
- RAID segments [154](#)
- RAID Volumes [73](#)
- read cache [65](#)
- rebuilding [138, 141](#)
- remove disk drive or segment [71](#)
- renaming [64](#)
- replace disk drive or segment [71](#)
- replacing disk drives [90](#)
- selecting disk drives [39](#)
- selecting RAID levels [38](#)
- size [39](#)
  - limitations [41](#)
- specifying size [61](#)
- stripe size [65](#)
- striping data [155](#)
- verifying [68, 69](#)
- verifying and fixing [69](#)
- verifying icon [70](#)
- viewing disk drives [49](#)
- viewing status [48](#)
- write cache setting [65](#)

## M

- main window
  - buttons
    - Configure [115](#)
  - Direct Attached Storage branch [45](#)
  - display options [129](#)
  - Enterprise View [45](#)
  - event details [105](#)
  - event log [105](#)
  - event log messages [108](#)
  - finding source of event [108](#)
  - Logical Devices View [45](#)
  - menu bar [45](#)
  - monitoring activity and status [105](#)
  - notification types
    - enclosure status icons [107](#)
    - event log [105](#)
    - event status icons [106](#)
  - overview [45](#)
  - Physical Devices View [45](#)
  - status icons [106](#)
  - tool bar [45](#)
- manual verification [68](#)
- maxCache
  - cache hits and misses [125](#)



- configuring 80 to 81
- maxCache pool 48, 80
- read caching 80
- statistics 121, 125
- maxCache statistics 125
- mirroring 156
- monitoring 104 to 107, 113, 119 to 120
  - clearing event log 106
  - component properties 89
  - email notifications 113
    - "from" address 114
    - changing "from" address 116
    - changing SMTP server 116
    - disabling 117
    - failed test emails 116
    - modifying recipient information 116
    - recipient addresses 113
    - re-enabling 117
    - removing recipients 116
    - setup 113
    - SMTP server settings 114
    - test emails 115
- Email Notifications Manager 113
- event details 105
- event log 51, 105
- event log messages 108
- full event log 106
- logged notifications 108
  - adding systems 108
  - disabling 112
  - failed test events 111
  - modifying systems 111
  - re-enabling 112
  - removing systems 111
  - test events 110
- notification types
  - logged notifications 108
- Notifications Manager 108
- options 105
- status icons 106
- tasks 85

## N

- Native Command Queuing 95
- NCQ 95
- non-redundant logical drives 155
- Notification Manager
  - Actions menu 167
  - buttons 172
- notification types
  - email notifications 113
- notifications 108 to 120

- event alerts 119
- Notifications Manager 108 to 119
  - clearing the log 112
  - disabling 112
  - modifying systems 111
  - opening 108
  - re-enabling 112
  - removing systems 111
  - test events 110

## O

- online help 51
- opening Adaptec Storage Manager
  - Linux 29
  - Solaris 29
- operating system event log 120
- operating systems 17

## P

- parity 158
- partitioning logical drives 36
- partitions 71
- permission levels 27
- Physical Devices View 45, 47
  - icons 48, 170
- pool hot spares 56
- power management 76 to 80
  - disabling 79
  - spin-up limits 79
  - stay awake period 78
  - timers 41, 77
- power status icon 107
- properties 89
- Properties button 89

## Q

- Quick (initialize method) 66

## R

- RAID
  - distributed spare drives 159
  - mirrored data 156
  - non-redundant logical drives 155
  - parity 158
  - RAID 0 155
  - RAID 1 156
  - RAID 10 157
  - RAID 1E 156
  - RAID 5 158

- RAID 50 160
- RAID 5EE 159
- RAID 6 161
  - stripe size 65
- RAID 60 161
  - stripe size 65
- striping data 155
- RAID levels
  - changing 72
  - custom configuration 38
  - express configuration 34
  - selecting 38
- RAID segments 154
- RAID Volumes 73
- RaidCfg.log file 95
- read cache 65
- REBOOT 152
- rebuilding (defined) 138, 139
- rebuilding logical drives 141
- recurring tasks 83
- registering new controllers 93
- Relative Size Capacity View 50
- Remote ARCCONF 22
- remote systems 26
  - removing 33
  - startup port number 32
- Remote systems wizard 129
- renaming logical drives 64
- rescanning controllers 94
- ROM Update wizard 99
- running Adaptec Storage Manager
  - Linux 29
  - Solaris 29

## S

- Scheduled (task status) 85
- scheduling tasks 83
  - rescheduling 86
  - supported tasks 83
    - changing RAID level 72
    - expanding logical drives 71
    - modifying logical drives 65
    - verifying 70
    - verifying with fix 69
  - See also* tasks
- Secure erase 91
- segments 60, 154
- Selectable performance modes 67
- Self-Monitoring, Analysis and Reporting Technology (SMART) 92
- silencing alarm

- controller-level 94
- enclosure-level 98
- system-level 97
- simple volumes 76
- size limitations for logical drives 41
- size of logical drives 61
- Skip (initialization method) 140
- SMART statistics 92
- SMTP server 116
- SNMP support
  - Linux 119
  - Windows 118
- software upgrades 127
- Solaris
  - installing Adaptec Storage Manager 21
  - starting Adaptec Storage Manager 29
  - starting the Agent 32
- solid state drive (SSD) 48
- spares. *See* hot spares
- standard unit of measure 128
- starting Adaptec Storage Manager
  - Linux 29
  - Solaris 29
- startup port number 32
- statistics logging 121 to 124
  - disabling 124
  - enabling 30
  - logging frequency 121, 122
  - proxy server 123
  - reporting interval 121, 122
  - viewing 125
- status
  - components 89
  - disk drives 47, 48
  - display group systems 134
  - enclosures 51, 170
  - event log 51
  - logical drive properties 89
  - task events 85
  - tasks 85
  - View buttons 50
- status icons
  - enclosure status icons 107
  - main window 106
  - Task Manager 85
- status. *See* monitoring
- storage space 11
  - examples 15
- stripe size 65
- striping 155
- support archive file 142

system groups. *See* display groups

system requirements 17

systems

Actions menu 165

enabling alarm 98

local systems 26

properties 89

remote systems 26

testing alarm 96

## T

Task Event Viewer 85

Task List 85

Task Manager

Actions menu 167

buttons 173

deleting tasks 86

disabling 86

missed start times 86

modifying tasks 86

monitoring tasks 85

opening 84

re-enabling 87

scheduling tasks

supported tasks 168

Task Event Viewer 85

Task List 85

Task Scheduler. *See* Task Manager

tasks

deleting 86

event status 85

missed start times 86

modifying 86

monitoring 85

recurring 83

scheduling 83

status 85

supported tasks 168

Tasks tab 84

TCP/IP port number (default) 108

Technical Support Identification (TSID) number 3

temperature status icon 107

terminology 11

test events

email notifications 115

failed 116

logged notifications 110

failed 111

testing alarm

controller-level 93

enclosure-level 98

system-level 96

Text Description View 50

tool bar buttons 172 to 173

TSID Number

*See* Technical Support Identification Number

## U

uninstalling Adaptec Storage Manager 52

Linux 52

Windows 52

updating Adaptec Storage Manager 127

User permissions 27

user permissions 27

## V

verifying and fixing logical drives 69

verifying logical drives 68, 69

automatic verification 68

background verification 68

icon 70

manual verification 68

View buttons 50

Views

enclosures 50

Full Size Capacity 50

Relative Size Capacity 50

Text Description 50

VMWare

installing Adaptec Storage Manager 21, 22

## W

Windows

installing Adaptec Storage Manager 19

silent installation 150

SNMP support 118

starting the Agent 31

uninstalling Adaptec Storage Manager 52

write cache 65

write-back 65

write-through 65



PMC-Sierra, Inc.  
1380 Bordeaux Drive  
Sunnyvale, CA 94089 USA

© Copyright PMC-Sierra, Inc. 2011  
All rights reserved. Adaptec and the Adaptec by PMC logo  
are trademarks of PMC-Sierra, Inc.

Part Number: CDP-00270-01-A Rev. A